




LAUDIO®
Handy 3

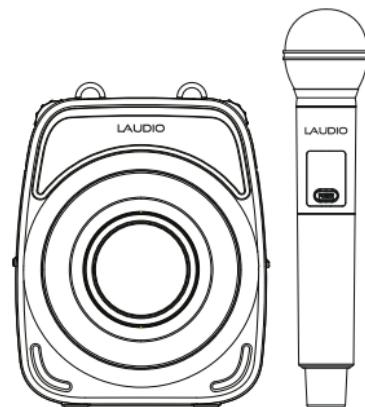

www.laudio.pl

Please read the instructions carefully before using it.

Note:

Before turn on the amplifier, ensure that the MIC don't point at the amplifier, this will eliminate any annoyance associated with howling. For ensure better amplification, aim at the headset MIC capsule when speaking, and keep the distance between the voice amplifier and the MIC more than 60cm to avoid howling.



Simply tucking the speaker around waist, and mounting headphone over head can help achieve the required distance.

Please turn down the volume properly to avoid howling when you are using this device in a small room.

Specification:

Max output power:	35W	Frequency response:	80Hz-18KHz
Output Impedance:	4Ω	Work temperature:	-10°C-45°C

Function Illustration:

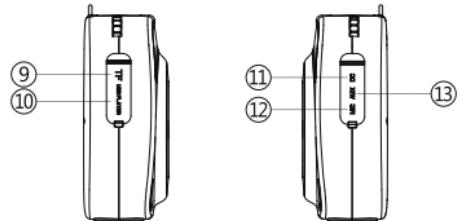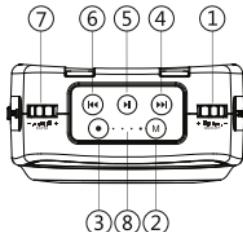

1.Power switch & volume control: Rotate the knob to "ON" to turn on the amplifier, rotate to "ON" continuously to increase the volume, rotate to "OFF" continuously to decrease the volume till turn off.

2.Mode:

A.Short press it to switch to TF card play/USB flash drive play/AUX mode/Bluetooth mode/UHF mode.

B.When play music on TF card/USB flash drive, long press "M" key for 3 seconds to switch to single song repeat. Long press it again to switch back to all repeat.

3.Recording

4.Next: Short press to play next song, long press to fast forward.

5.Play/Pause: Short press it to pause, and press again to play.

6.Previous: Short press to play previous song, long press to fast rewind.

7.Microphone ECHO control

8.LED Indicator:

- 1.Blue light flashing: Bluetooth is waiting for connection.
- 2.Blue light stop flashing: Bluetooth is connected.
- 3.Red light flashing one by one: Charging.

9.TF card slot: Insert the TF card to play mp3. It is compatible with most brands, the maximum capacity is 32GB.

Note: It may be unreadable when the file is large or complex.

10.USB flash drive slot: Insert the USB flash drive to play mp3. It is compatible with most brands, the max capacity is 32GB.

Note: It may be unreadable when the file is large or complex.

11.DC 9V Charging Port: Please use the DC 9V charger, and the other end connects with the power supply.

12.Ø3.5mm Microphone Jack: Insert the wired microphone in any mode to amplify with current mode simultaneously. To avoid howling please do not point the microphone toward the speaker. (There is no wired MIC in wireless version.)

13.Audio input: Connect with the computer, phone, MP3/MP4 and other AUX, short press "M" to switch to the AUX IN mode that can play all above audio files directly.

TF/USB flash drive:

The speaker will automatically play the music file after insert TF card/USB flash drive, and the previous song and the next song can be selected by short press the "◀" or "▶" button.

Loop:

Loop: When play music on TF card/USB flash drive, long press "M" key for 3 seconds to switch to single song repeat. Long press it again to switch back to all repeat.

Notes: speaker will be "all repeat" by default after powered on next time.

Recording:

Connect the microphone, make sure the USB flash disk or TF card has been inserted, long press "●" key to record; short press "●" key again to stop recording, it will automatically play the present recording files. The recording files will be saved automatically into the USB flash disk or TF card.

Play recording: Insert an USB flash drive or TF card with recording file, short press "●" key to play in MP3 playing mode, it will play the latest recording. You could short press the "◀" or "▶" button to select the recording.


Bluetooth Instruction:

Please pair with your Bluetooth device as follows:

1. Switch on the amplifier and press "M" to enter into Bluetooth mode. The Bluetooth mode is ready with voice prompt "Bluetooth is waiting for connection", the blue light indicator will be flashing.

2. Turn on the Bluetooth function of your mobile phone and search "Laudio Handy 3". Click and it will be connected successfully with a voice prompt "Bluetooth is connected", the blue light indicator will stop flashing.

When playing music, please keep the amplifier close to the Bluetooth-enable device to maintain a stable connection.

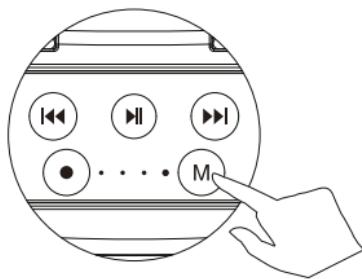

Charging the device:


1. Please power off speaker when charging, please use the standard adapter, the other end connects with the power supply to charge. Please unplug the adapter timely after fully charged (the charging time is normally 4~6 hours).

2. Battery status: There are 3 red light battery indicators, the third red light indicator flash means low power, please charge it timely when the speaker reminds with voice prompt "Low battery, please charge". The 3 red light indicators will be flashing one by one when charging and they will stop blinking and keep on all time after fully charged.

3. Please charge it 1~2 hours more after fully charged to lengthen the life of battery. Please don't over charge too much time.

4. Please charge the battery within 48 hours if the battery is too low. Keep the speaker with power if not use.

Wireless Handhold Microphone Operation:

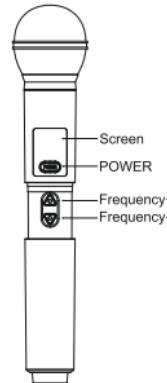

1. Switch ON / OFF:

1. Long press "POWER" to switch on and there will be UHF frequency point by default shows on the screen. Switch on the speaker, speaker and microphone will connect automatically. Long press "POWER" again to switch off and the screen will go out.

Note: The microphone screen will go out after 10 seconds, short press POWER will light up the screen.

2. Short press "▲" or "▼" to select frequency point.

2. Pair the UHF Wireless MIC Manually: (This operation only suits for no sound from the MIC)

Step 1: switch on the speaker, short press "M" key to switch to UHF mode, and the screen show "UHF", then long press "M" key 2-3 seconds until "UHF" flashing with voice prompt "UHF is waiting for connection" to enter into UHF pairing status.

Step 2: Switch on the UHF wireless microphone by long press "POWER", The screen displays the current frequency point, then press "POWER" 3 times quickly and current frequency stop flashing means pairing is successful.

For dual wireless microphone versions: You can repeat the above 2 steps to manually pairing the second microphone. Then two microphones can work at the same time.


Note: When pairing the second microphone, pls stagger the frequency of the first microphone.

3. Battery Indication of UHF Wireless MIC:

In working status, it has sufficient battery power with "█" showed on screen; it's low battery when screen shows "□", please replace the battery in time.

Note: Please twist-off the battery cover and put the batteries properly. (Please mind the positive & negative anode.)

Wireless Headset Microphone Operation:

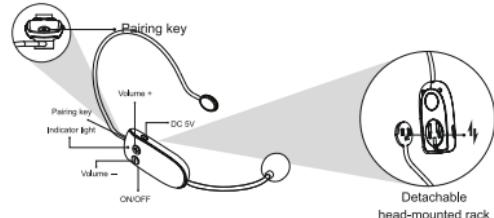

1. Pair the UHF manually:

Step 1: Turn on the voice amplifier, short press "M" key to switch to UHF mode, long press "M" key for 3 seconds, amplifier comes a voice prompt "UHF is waiting for connection"

Step 2: Turn on the wireless microphone and long press "Mic" key for 5 seconds, pairing is successful with a voice prompt "UHF is connected".

2. Volume Control:

- 1) If amplifier howling or in a small volume, adjust the volume by press "+" or "-" on the wireless microphone.
- 2) You can also adjust the volume on the voice amplifier by short press "Mic" or "Mic".

3.How to charge the wireless microphone:

When the microphone's blue indicator light flashes, battery is low. Please turn it off and charge through type-c charging cable with DC 5V adapter. The red indicator light will be on all the time when charging, and it will turn off when the mic is fully charged.

Notes:

- 1.The normal charge time is 3~5 hours, please unplug the charger as soon as it is fully charged.
- 2.Full charged before first use of the microphone to ensure best results.
- 3.Turn off the UHF wireless microphone when not in use.

Trouble shooting:

1.Turn on the power switch, but the amplifier has no sound.

- A.The indicator is not light: it means no power and you should charge the amplifier.
- B.Turn the volume up on the voice amplifier.

2.Talk to the wireless microphone, but the amplifier has no sound.

- A.Please confirm both voice amplifier and microphone is power on.
- B.Please confirm whether the wireless microphone has been paired with the amplifier successfully or not. Pair the UHF manually again if necessary.

3.The voice amplifier has distinct howling.

- A.Please make sure that the microphone is not pointed at the amplifier and not too close to the amplifier.
- B.In a small room, please turn down the volume properly to avoid howling.

LAUDIO after sales service:

If you have any questions, please feel free to contact us, we will try our best to provide best service.

www.laudio.pl

email: biuro@laudio.pl