




4 Megapixel

AI Network Camera

User Manual

Please read this instruction carefully before operating the unit and keep it for further reference

The following symbols or words may be found in this manual.

Symbols/Words	Description
 Warning	Indicates a medium or low potential hazardous situation which, if not avoided, will or could result in slight or moderate injury
 Caution	Indicates a potential risk which, if not avoided, will or could result in device damage, data loss, lower performance or unexpected results
 Note	Provides additional information to emphasize or supplement important points of the text.

About the Manual

- This manual is suitable for many models. All examples, screenshots, figures, charts, and illustrations used in the manual are for reference purpose, and actual products may be different with this Manual.
- Please read this user manual carefully to ensure that you can use the device correctly and safely.
- Within the maximum scope permitted by the law, the products described in this Manual (including hardware, software, firmware, etc.) are provided “AS IS”. The information in this document (including URL and other Internet site reference data) is subject to change without notice. This Manual may contain technical incorrect places or printing errors. This information will be periodically updated, and these changes will be added into the latest version of this Manual without prior notice.

Use of the Product

- This product should not be used for illegal purposes.
- The company does not allow anyone to use the Company's products to infringe the privacy, personal information, and portrait rights of others. The user shall not use this product for any illegal use or any prohibited use under these terms, conditions, and declarations. When using this product, the user shall not damage, disable, overload or obstruct any of the hardware of this product in any way, or interfere with the use of this product by any other users. Also, the user should not attempt to use the product or the software, by hacking, stealing the password, or any other means.

Electrical Safety

- This product is intended to be supplied by a Listed Power Unit, marked with 'Limited Power Source', 'LPS' on unit, output rated minimum 12V/2 A or POE 48V/ 350mA or AC24V (depending on models), no more than 2000m altitude of operation and Tma=60 Deg.C.
- As for the modes with PoE function, the function of the ITE being investigated to IEC 60950-1 standard is considered not likely to require connection to an Ethernet network with outside plant routing, including campus environment and the ITE is to be connected only to PoE networks without routing to the outside plant.
- Improper handling and/or installation could run the risk of fire or electrical shock.
- The product must be grounded to reduce the risk of electric shock.
- ⚠ Warning: Wear anti-static gloves or discharge static electricity before removing the bubble or cover of the camera.
- ⚠ Caution: Do not provide two power supply sources at the same time for the device unless otherwise specified; it may result in device damage!

Environment

- Heavy stress, violent vibration or exposure to water is not allowed during transportation, storage and installation.
- Avoid aiming the camera directly towards extremely bright objects, such as, sun, as this may damage the image sensor.
- Keep away from heat sources such as radiators, heat registers, stove, etc.
- Do not expose the product to the direct airflow from an air conditioner.
- Do not place the device in a damp, dusty extremely hot or cold environment, or the locations with strong electromagnetic radiation or unstable lighting.
- Make sure that no reflective surface is too close to the camera lens. The IR light from the camera may reflect back into the lens, resulting in image blur.

Operation and Daily Maintenance

- There are no user-serviceable parts inside. Please contact the nearest service center if the product does not work properly.
- Please shut down the device and then unplug the power cable before you begin any maintenance work.
- ⚠ Warning: All the examination and repair work should be done by qualified personnel.
- Do not touch the CMOS sensor optic component. You can use a blower to clean the dust on the lens surface.
- Always use the dry soft cloth to clean the device. If there is too much dust, use a cloth cleaning (such as using cloth) may result in poor IR functionality and/or IR reflection.
- Dome cover is an optical device, please don't touch or wipe the cover surface directly during installation and use. For dust, use oil-free soft brush or hair dryer to remove it gently; for grease or finger print, use oil-free cotton cloth or paper soaked with detergent to wipe from the lens center outward. Change the cloth and wipe several times if it is

not clean enough.

Privacy Protection

- When installing cameras in public areas, a warning notice shall be given in a reasonable and effective manner and clarify the monitoring range.
- As the device user or data controller, you might collect the personal data of others, such as face, car plate number, etc. As a result, you shall implement reasonable and necessary measures to protect the legitimate rights and interests of other people, avoiding data leakage, improper use, including but not limited to, setting up access control, providing clear and visible notice to inform people of the existence of the surveillance area, providing required contact information and so on.

Disclaimer

- With regard to the product with internet access, the use of product shall be wholly at your own risks. Our company shall be irresponsible for abnormal operation, privacy leakage or other damages resulting from cyber attack, hacker attack, virus inspection, or other internet security risks; however, Our company will provide timely technical support if necessary.
- Surveillance laws vary from country to country. Check all laws in your local region before using this product for surveillance purposes. We shall not take the responsibility for any consequences resulting from illegal operations.

Cybersecurity Recommendations

- Use a strong password. At least 8 characters or a combination of characters, numbers, and upper and lower case letters should be used in your password.
- Regularly change the passwords of your devices to ensure that only authorized users can access the system (recommended time is 90 days).
- It is recommended to change the service default ports (like HTTP-80, HTTPS-443, etc.) to reduce the risk of outsiders being able to access.
- It is recommended to set the firewall of your router. But note that some important ports cannot be closed (like HTTP port, HTTPS port, Data Port).
- It is not recommended to expose the device to the public network. When it is necessary to be exposed to the public network, please set the external hardware firewall and the corresponding firewall policy.
- It is not recommended to use the v1 and v2 functions of SNMP.
- In order to enhance the security of WEB client access, please create a TLS certificate to enable HTTPS.
- Use black and white list to filter the IP address. This will prevent everyone, except those specified IP addresses from accessing the system.
- If you add multiple users, please limit functions of guest accounts.

- If you enable UPnP, it will automatically try to forward ports in your router or modem. It is really very convenient for users, but this will increase the risk of data leakage when the system automatically forwards ports. Disabling UPnP is recommended when the function is not used in real applications.
- Check the log. If you want to know whether your device has been accessed by unauthorized users or not, you can check the log. The system log will show you which IP addresses were used to log in your system and what was accessed.

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

1. FCC compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

2. FCC conditions:

- This device complies with part 15 of the FCC Rules. Operation of this product is subject the following two conditions:
- This device may not cause harmful interface.
- This device must accept any interference received, including interference that may cause undesired operation.

RoHS

The products have been designed and manufactured in accordance with Directive EU RoHS Directive 2011/65/EU and its amendment Directive EU 2015/863 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.



2012/19/EU (WEEE directive): The Directive on waste electrical and electronic equipment (WEEE Directive). To improve the environmental management of WEEE, the improvement of collection, treatment and recycling of electronics at the end of their life is essential. Therefore, the product marked with this symbol must be disposed of in a responsible manner.

Directive 94/62/EC: The Directive aims at the management of packaging and packaging waste and environmental protection. The packaging and packaging waste of the product in this manual refers to must be disposed of at designated collection points for proper recycling and environmental protection.

REACH(EC1907/2006): REACH concerns the Registration, Evaluation, Authorization and Restriction of Chemicals, which aims to ensure a high level of protection of human health and the environment through better and earlier identification of the intrinsic properties of chemical substances. The product in this manual refers to conforms to the rules and regulations of REACH. For more information of REACH, please refer to DG GROWTH or ECHA websites.

Table of Contents

1	Introduction	1
2	Network Connection.....	2
2.1	LAN.....	2
2.1.1	Access through IP-Tool	2
2.1.2	Directly Access through IE.....	4
2.2	WAN.....	6
3	Live View	9
4	Network Camera Configuration.....	12
4.1	System Configuration	12
4.1.1	Basic Information	12
4.1.2	Date and Time	12
4.1.3	Local Config.....	13
4.1.4	Storage.....	13
4.2	Image Configuration.....	16
4.2.1	Display Configuration	16
4.2.2	Video / Audio Configuration	19
4.2.3	OSD Configuration.....	20
4.2.4	Video Mask	21
4.2.5	ROI Configuration.....	22
4.2.6	Lens Control	23
4.3	PTZ Configuration.....	24
4.4	Alarm Configuration.....	24
4.4.1	Motion Detection.....	24
4.4.2	Other Alarms	26
4.4.3	Alarm In	28
4.4.4	Alarm Out.....	29
4.4.5	Alarm Server	30
4.5	Event Configuration.....	30
4.5.1	Abandoned/Missing Object Detection.....	31
4.5.2	Video Exception	32
4.5.3	Line Crossing.....	34
4.5.4	Region Intrusion	36
4.5.5	Region Entrance	37
4.5.6	Region Exiting.....	39
4.5.7	Target Counting by Line	40
4.5.8	Target Counting by Area.....	43
4.5.9	Crowd Density Detection	45
4.5.10	Face Comparison	48
4.5.11	License Plate Detection Settings.....	53
4.5.12	Heat Map.....	58


- 4.6 Network Configuration 60
 - 4.6.1 TCP/IP 60
 - 4.6.2 Port 61
 - 4.6.3 Server Configuration 62
 - 4.6.4 Onivf..... 62
 - 4.6.5 DDNS 63
 - 4.6.6 SNMP 64
 - 4.6.7 802.1x..... 65
 - 4.6.8 RTSP..... 66
 - 4.6.9 RTMP 67
 - 4.6.10 UPNP..... 67
 - 4.6.11 Email 68
 - 4.6.12 FTP..... 69
 - 4.6.13 HTTPS..... 71
 - 4.6.14 QoS..... 72
- 4.7 Security Configuration 73
 - 4.7.1 User Configuration 73
 - 4.7.2 Online User..... 74
 - 4.7.3 Block and Allow Lists 75
 - 4.7.4 Security Management 75
- 4.8 Maintenance Configuration..... 76
 - 4.8.1 Backup and Restore 76
 - 4.8.2 Reboot 78
 - 4.8.3 Upgrade 78
 - 4.8.4 Operation Log..... 78
- 5 Search 79**
 - 5.1 Image Search 79
 - 5.2 Video Search..... 81
 - 5.2.1 Local Video Search..... 81
 - 5.2.2 SD Card Video Search..... 82
- 6 Face & Plate Recognition Result Search..... 85**
 - 6.1 Face Recognition Result Search..... 85
 - 6.2 License Plate Recognition Result Search..... 85
- Appendix..... 87**
- Appendix 1 Troubleshooting 87**

1 Introduction

Main Features

- 4MP (2592×1520) @30fps
- Smart H.265 /H.264 coding
- ICR auto switch, true day/night
- 3D DNR, true WDR, ROI coding, BLC, HLC, Defog, Smart IR, Anti-flicker
- Support video structuring analysis
- Intelligent analytics: video exception detection, region entrance/exiting/intrusion detection, line crossing detection, target counting by line/area, face detection, face capture, face match, heat map, crowd density detection, object removal detection, etc.
- Support mobile surveillance by smart phones with iOS and Android OS

Surveillance Applications

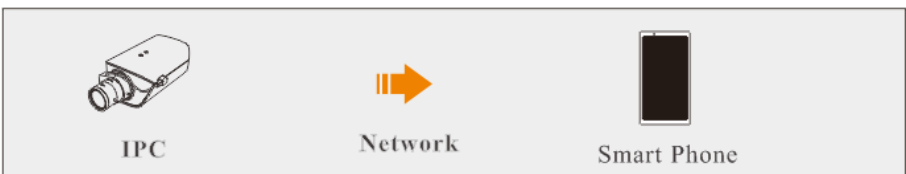

2 Network Connection

System Requirement

For proper operating the product, the following requirements should be met for your computer.

Operating System: Windows 7 Home basic or higher

CPU: 2.0GHz or higher

RAM: 1G or higher

Display: 1920*1080 resolution or higher (recommended)

Web browser: IE (plug-in required)/ Firefox/Edge/Safari/Google Chrome

It is recommended to use the latest version of these web browsers.

The menu display and operation of the camera may be slightly different by using the browser with plug-in or without plug-in. Installing the applicable plug-in will display more functions of the camera.


Connect IP-Cam via LAN or WAN. Here only take IE browser for example. The details are as follows:

2.1 LAN


In LAN, there are two ways to access IP-Cam: 1. access through IP-Tool; 2. directly access through IE browser.

2.1.1 Access through IP-Tool

Network connection:

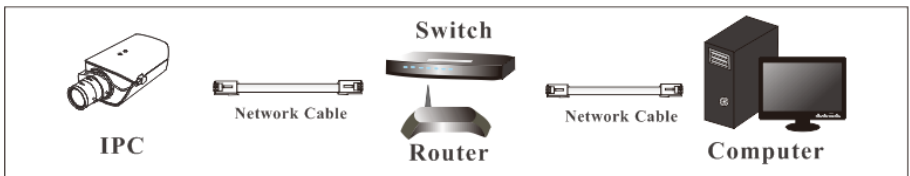

- ① Make sure the PC and IP-Cam are connected to the LAN and the IP-Tool is installed in the PC from the CD.
- ② Double click the IP-Tool icon on the desktop to run this software as shown below:

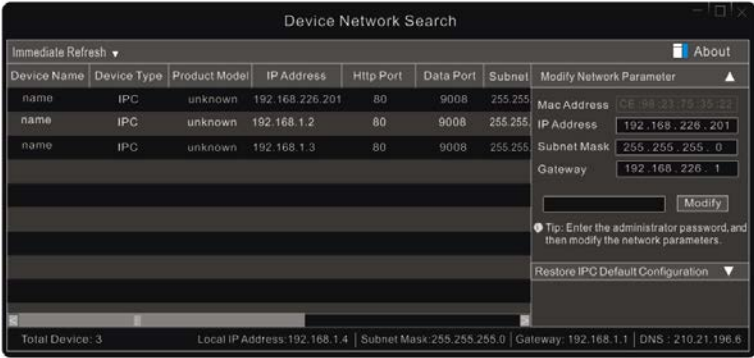

The default IP address of the camera is **192.168.226.201**.

③ Double click the IP address and then the system will pop up the IE browser to connect IP-CAM. After you read the privacy statement, check and click “Already Read”. Then activate the device.

Device Activation

User Name

Activate Onvif User

New Password

8~16 characters; Numbers, special characters, upper case letters and lower case letters must be included.

Confirm Password

Please self-define the password of admin according to the tip.

If “Activate Onvif User” is enabled, the ONVIF user can be activated simultaneously. When you connect the camera through the ONVIF protocol in the third-party platform, you can use the default username and the password set above to connect.

After that, follow directions to download, install and run the Active X control if prompted.

Re-connect your camera via IE browser and then a login box will appear.

The image shows a login form with the following elements:

- Name:** A text input field containing the text "admin".
- Password:** A password input field with six black dots and a small eye icon on the right.
- Stream Type:** A dropdown menu with "2592x1520 25fps" selected.
- Language:** A dropdown menu with "English" selected.
- Forget Password?:** A text link located below the Language dropdown.
- Login:** A large blue button with the text "Login" centered on it.

Please enter the user name (admin) and password. Then select the stream type and language as needed.

Stream Type: The plug-in free live view only supports 1080P or lower resolution.

The safety questions should be set after you click “Login” button. It is very important for you to reset your password. Please remember these answers.

The image shows a "Safety Question" form with the following elements:

- Safety Question:** A section header at the top.
- Security Question1:** A dropdown menu with a blue highlight and a downward arrow.
- Answer:** A text input field.
- Security Question2:** A dropdown menu with a downward arrow.
- Answer:** A text input field.
- Security Question3:** A dropdown menu with a downward arrow.
- Answer:** A text input field.
- OK:** A grey button with the text "OK" centered on it.

If you forget the admin password, you can reset the password by clicking Forget Password on the login page. Then you can reset the password by the safety questions and answers you set.

You can set the account security during the activation, or you can go to Config→Security→User, click Safety Question, select the safety questions and input your answers.

2.1.2 Directly Access through IE

The default network settings are as shown below:

IP address: **192.168.226.201**


Subnet Mask: **255.255.255.0**

Gateway: **192.168.226.1**


HTTP: **80**

Data port: **9008**


Use the above default settings when logging in the camera for the first time. Directly connect the camera to the computer through network cable.

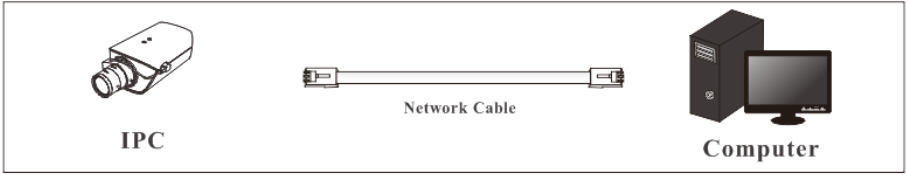

① Manually set the IP address of the PC and the network segment should be as the same as the default settings of the IP camera. Open the network and share center. Click “Local Area Connection” to pop up the following window.

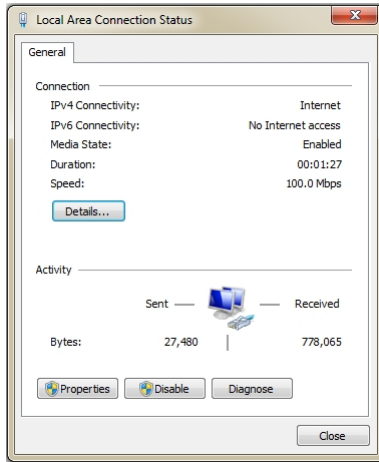


Select “Properties” and then select internet protocol according to the actual situation (for example: IPv4). Next, click the “Properties” button to set the network of the PC.

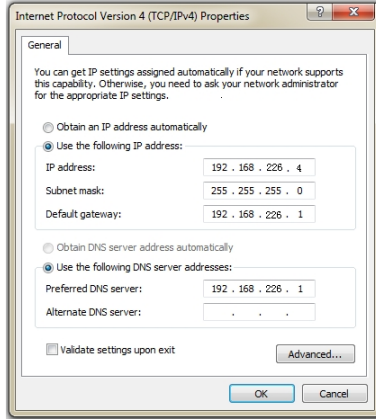

- ② Open the IE browser and enter the default address of IP-CAM and confirm.
- ③ Follow directions to download and install the Active X control.
- ④ Enter the username and password in the login window and then enter to view.

2.2 WAN

➤ Access through the router or virtual server

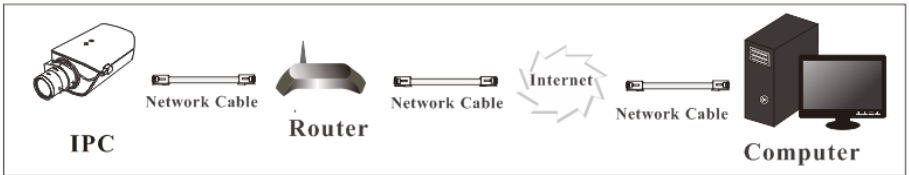

- ① Make sure the camera is connected to the local network and then log in the camera via LAN and go to Config→Network→Port menu to set the port number.

HTTP Port	80
HTTPS Port	443
Data Port	9008
RTSP Port	554

Port Setup

- ② Go to Config →Network→TCP/IP menu to modify the IP address.

IPv4	IPv6	PPPoE Config	IP Change Notification Config
<input type="radio"/> Obtain an IP address automatically			
<input checked="" type="radio"/> Use the following IP address			
IP Address	192.168.226.201	Test	
Subnet Mask	255.255.255.0		
Gateway	192.168.226.1		
Preferred DNS Server	210.21.196.6		
Alternate DNS Server	8.8.8.8		

IP Setup

③ Go to the router’s management interface through IE browser to forward the IP address and port of the camera in the “Virtual Server”.


Port Range					
Application	Start	End	Protocol	IP Address	Enable
1	9007	to 9008	Both	192.168.1.201	<input checked="" type="checkbox"/>
2	80	to 81	Both	192.168.1.201	<input checked="" type="checkbox"/>
3	10000	to 10001	Both	192.168.1.166	<input type="checkbox"/>
4	21000	to 21001	Both	192.168.1.166	<input type="checkbox"/>

Router Setup

④ Open the IE browser and enter its WAN IP and http port to access. (for example, if the http port is changed to 81, please enter “192.198.1.201:81” in the address bar of web browser to access).

➤ **Access through PPPoE dial-up**

Network connection

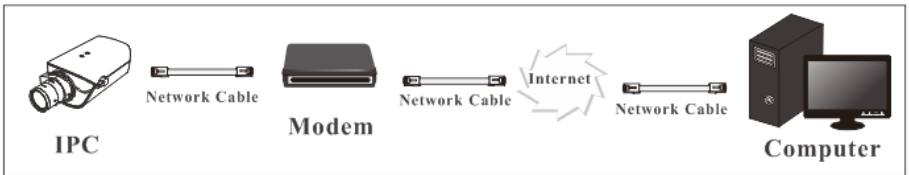

Access the camera through PPPoE auto dial-up. The setup steps are as follow:

- ① Go to Config→Network→Port menu to set the port number.
- ② Go to Config →Network→TCP/IP→PPPoE Config menu. Enable PPPoE and then enter the user name and password from your internet service provider.

IPv4	IPv6	PPPoE Config	IP Change Notification Config
<input checked="" type="checkbox"/> Enable			
User Name	<input type="text" value="xxxxxxx"/>		
Password	<input type="password" value="•••••"/>		
<input type="button" value="Save"/>			

- ③ Go to Config →Network→DDNS menu. Before configuring the DDNS, please apply for a domain name first. Please refer to DDNS configuration for detail information.
- ④ Open the IE browser and enter the domain name and http port to access.

➤ **Access through static IP**

Network connection




The setup steps are as follow:

- ① Go to Config→Network→Port menu to set the port number.
- ② Go to Config →Network→TCP/IP menu to set the IP address. Check “Use the following IP address” and then enter the static IP address and other parameters.
- ③ Open the IE browser and enter its WAN IP and http port to access.

3 Live View



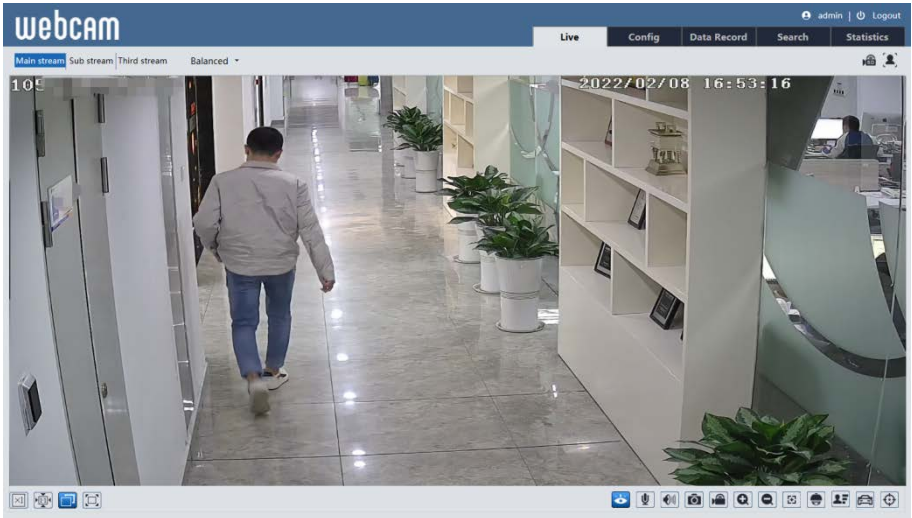











After logging in, the following window will be shown.



Plug-in free live view: when the main stream is set over 1080P, only the sub stream or third stream tab can be displayed on the above interface by default.

The following table is the instructions of the icons on the live view interface.






Icon	Description	Icon	Description
	Original size		Abnormal clarity indicator
	Fit correct scale		Scene change indicator
	Auto (fill the window)		Abnormal color indicator
	Full screen		Sensor alarm indicator
	Start/stop live view		Motion alarm indicator
	Start/stop two-way audio (only available for the model with audio input connector)		Line crossing indicator
	Enable/disable audio		Intrusion indicator
	Snapshot		Region entrance indicator
	Start/stop local recording		Region exiting indicator

Icon	Description	Icon	Description
	Zoom in		Target counting (by line) indicator
	Zoom out		Target counting (by area) indicator
	AZ control (only available for the model with motorized zoom lens)		Heat map indicator
	Face detection		Crowd density indicator
	License plate detection		Face detection indicator
	PTZ control		Object detection indicator (object abandoned/missing)
	Rule information display		SD card recording indicator

*Those smart alarm indicators will flash only when the camera supports those functions and the corresponding events are enabled.











*Plug-in free live view: PTZ control, two-way audio and local recording are not supported and the preview mode switch (real-time/balanced/fluent mode) is not available too.






 





In full screen mode, double click on the mouse to exit or press the ESC key on the keyboard. Click AZ control button to show AZ control panel. The descriptions of the control panel are as follows:




Icon	Description	Icon	Description
	Zoom -		Zoom +
	Focus -		Focus +
	One key focus (used when image is out of focus after manual adjustment)		

Some cameras can be installed in a compatible external PTZ enclosure through RS485. Click the PTZ icon to reveal the PTZ control panel.

The descriptions of the control panel are as follows:

Icon	Description	Icon	Description
	Move upper left direction		Move upper right direction
	Move up		Stop movement
	Move left		Move right
	Move lower left direction		Move lower right direction
	Move down		Speed adjustment

	Zoom out		Zoom in
	Focus -		Focus +
	Iris -		Iris +
	Auto scan		Wiper
	Light		Radom scan
	Group scan		Preset

Select preset and click  to call the preset. Select and set the preset and then click  to save the position of the preset. Select the set preset and click  to delete it.

4 Network Camera Configuration

In the Webcam client, choose “Config” to go to the configuration interface.

Note: Wherever applicable, click the “Save” button to save the settings.

4.1 System Configuration

4.1.1 Basic Information

In the “Basic Information” interface, the system information of the device is listed.

Device Name	IPC
Product Model	IPC
Brand	Customer
Software Version	5.1.1.0(26409)
Software Build Date	2021-12-21
Onvif Version	21.06
OCX Version	2.2.2.1
MAC	00:18:ae:aa:aa:22
About this machine	View
Privacy Statement	View

4.1.2 Date and Time

Go to Config→System→Date and Time. Please refer to the following interface.


Zone		Date and Time	
Zone	GMT (Dublin, Lisbon, London, Reykjavik) ▼		
<input type="checkbox"/> DST			
<input checked="" type="radio"/> Auto DST			
<input type="radio"/> Manual DST			
Start Time	January ▼	First ▼	Sunday ▼ 00 ▼ Hour
End Time	February ▼	First ▼	Monday ▼ 00 ▼ Hour
Time Offset	120 Minutes ▼		
Save			

Select the time zone and DST as required.

Note: The time zone of the camera and the computer must be the same. It is recommended to modify the time zone of the camera according to the time zone of the computer. If the time


zone of the computer is modified, the current web client needs to be closed. Then re-open it and log in again.

Click the “Date and Time” tab to set the time mode.

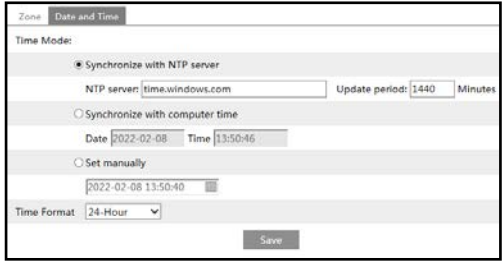

4.1.3 Local Config

Go to Config→System→Local Config to set up the storage path of captured pictures and recorded videos on the local PC. There is also an option to enable or disable the bitrate display in the recorded files.

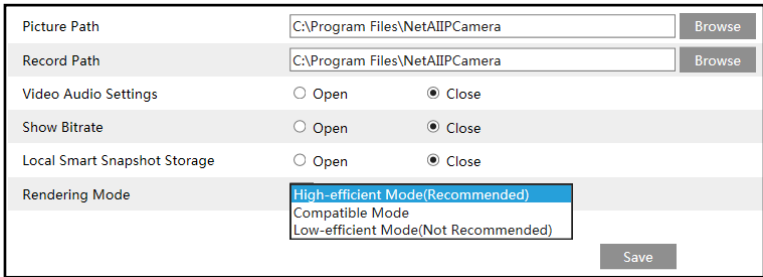

Additionally, “Local smart snapshot storage” can be enabled or disabled here. If enabled, the captured pictures triggered by smart events (like line crossing detection, region intrusion, etc.) will be saved to the local PC.

Rendering Mode: High-efficient mode, compatible mode or low-efficient mode can be optional.

If the performance of your computer is not compatible with the web client or your computer has no graphics card, low-efficient mode is suggested.

Note: when you access your camera by the web browser without the plug-in, only Show Bitrate can be set in the above interface.

4.1.4 Storage

Go to Config→System→Storage to go to the interface as shown below.

The screenshot shows the 'Management' tab with sub-tabs for 'Record' and 'Snapshot'. The 'Record' sub-tab is active. The interface displays the following settings:

- Total picture capacity: 379 MB
- Picture remaining space: 379 MB
- Total recording capacity: 3329 MB
- Record remaining space: 2432 MB
- State: Normal
- Snapshot Quota: 10 %
- Video Quota: 90 %

Below the settings, a note states: "Changes in the quota ratio need to be formatted before they become effective." At the bottom, there are two buttons: "Eject" and "Format".

● **SD Card Management**

Click the “Format” button to format the SD card. All data will be cleared by clicking this button.

Click the “Eject” button to stop writing data to SD card. Then the SD card can be ejected safely.

Snapshot Quota: Set the capacity proportion of captured pictures on the SD card.

Video Quota: Set the capacity proportion of record files on the SD card.

● **Schedule Recording Settings**

1. Go to Config→System→Storage→Record to go to the interface as shown below.

The screenshot shows the 'Record' sub-tab under 'Management'. The 'Record Parameters' section includes:

- Record Stream: Main stream (dropdown)
- Pre Record Time: No Pre Record (dropdown) (H264,H265,MJPEG)
- Cycle Write: Yes (dropdown)

The 'Timing' section includes:


- Enable Schedule Record

At the bottom right, there are radio buttons for 'Erase' and 'Add', with 'Add' selected.

2. Set record stream, pre-record time, cycle writing.

Pre Record Time: Set the time to record before the actual recording begins.

3. Set schedule recording. Check “Enable Schedule Record” and set the schedule.

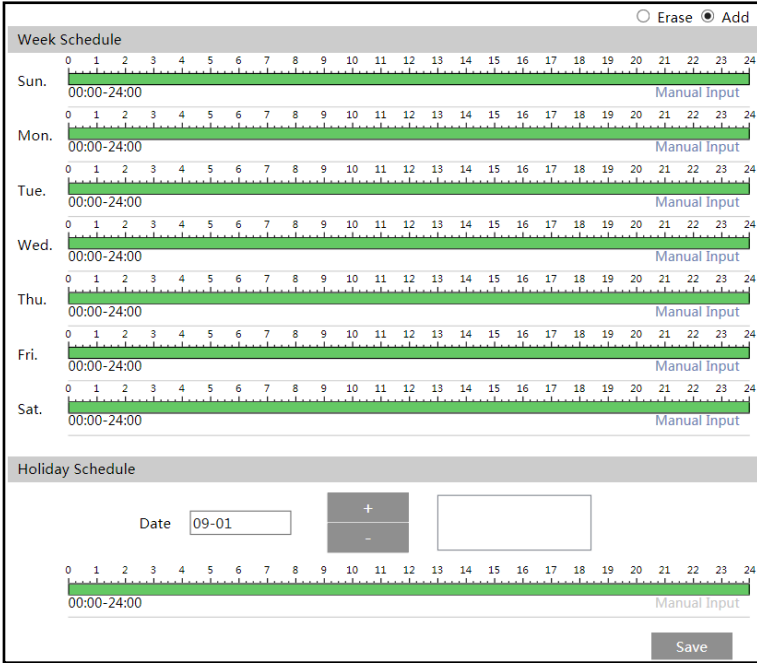

Weekly schedule

Set the alarm time from Monday to Sunday for a single week. Each day is divided in one hour increments. Green means scheduled. Blank means unscheduled.

“Add”: Add the schedule for a special day. Drag the mouse to set the time on the timeline.

“Erase”: Delete the schedule. Drag the mouse to erase the time on the timeline.

Manual Input: Click it for a specific day to enter specific start and end times. This adds more granularities (minutes).

Day schedule

Set the alarm time for alarm a special day, such as a holiday.

Note: Holiday schedule takes priority over weekly schedule.

● **Snapshot Settings**

Go to Config→System→Storage→Snapshot to go to the interface as shown below.

Management
Record
Snapshot

Snapshot Parameters

Image Format JPEG ▾

Resolution 704x576 ▾

Image Quality Low ▾

Event Trigger

Snapshot Interval Second

Snapshot Quantity

Timing

Enable Timing Snapshot

Snapshot Interval Second

Set the format, resolution and quality of the image saved on the SD card and the snapshot interval and quantity and the timing snapshot here.

Snapshot Quantity: The number you set here is the maximum quantity of snapshots. The actual quantity of snapshots may be less than this number. Supposing the occurrence time of an alarm event is less than the time of capturing pictures, the actual quantity of snapshots is less than the set quantity of snapshots.

Timing Snapshot: Enable timing snapshot first and then set the snapshot interval and schedule. The setup steps of schedule are the same as the schedule recording (See [Schedule Recording](#)).

● **USB disk**


This function is only available for the model with USB interface. In this interface, you can view the state and capacity of the USB flash disk.

4.2 Image Configuration

Image Configuration includes Display, Video/Audio, OSD, Video Mask and ROI Config.

4.2.1 Display Configuration

Go to Image→Display interface as shown below. The image’s brightness, contrast, hue and saturation and so on for common, day and night mode can be set up separately. The image effect can be quickly seen by switching the configuration file.

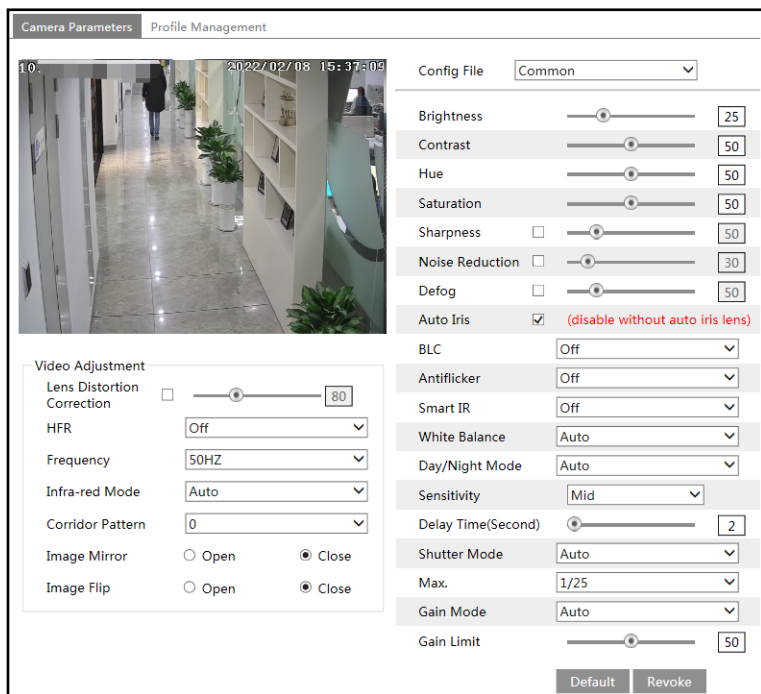

Brightness: Set the brightness level of the camera's image.

Contrast: Set the color difference between the brightest and darkest parts.

Hue: Set the total color degree of the image.

Saturation: Set the degree of color purity. The purer the color, the brighter the image is.

Sharpness: Set the resolution level of the image plane and the sharpness level of the image edge.

Noise Reduction: Decrease the noise and make the image more thorough. Increasing the value will make the noise reduction effect better but it will reduce the image resolution.

Defog: Activating this function and setting an appropriate value as needed in foggy, dusty, smoggy or rainy environment to get clear images.

Auto Iris: If your camera is auto Iris, please enable it.

Backlight Compensation (BLC):

- Off: disables the backlight compensation function. It is the default mode.
- HWDR: WDR can adjust the camera to provide a better image when there are both very bright and very dark areas simultaneously in the field of the view by lowering the brightness of the bright area and increasing the brightness of the dark area.

Recording will be stopped for a few seconds while the mode is changing from non-WDR to WDR mode.

- HLC: lowers the brightness of the entire image by suppressing the brightness of the image's bright area and reducing the size of the halo area.
- BLC: If enabled, the auto exposure will activate according to the scene so that the object

of the image in the darkest area will be seen clearly.

Antiflicker:

- Off: disables the anti-flicker function. This is used mostly in outdoor installations.
- 50Hz: reduces flicker in 50Hz lighting conditions.
- 60Hz: reduces flicker in 60Hz lighting conditions.

Smart IR: Choose “ON” or “OFF”. This function can effectively avoid image overexposure so as to make the image more realistic. The higher the level is, the more overexposure compensation will be given.

White Balance: Adjust the color temperature according to the environment automatically.

Day/Night Mode: Choose “Auto”, “Day”, “Night” or “Timing”.

Shutter Mode: Choose “Auto” or “Manual”. If manual is chosen, the digital shutter speed can be adjusted.

Gain Mode: Choose “Auto” or “Manual”. If “Auto” is selected, the gain value will be automatically adjusted (within the set gain limit value) according to the actual situation. If “Manual” is selected, the gain value shall be set manually. The higher the value is, the brighter the image is.

Lens Distortion Correction: When the image appears distortion to some extent, please enable this function and adjust the level according to the actual scene to correct the distortion.

HFR: High Frame Rate. If “ON” is selected, the system will restart and then the maximum value of the frame rate of the main stream can be set to 60 fps /50fps.

Frequency: 50Hz and 60Hz can be optional.

Infrared Mode: Choose “Auto”, “On” or “Off”. Some modes may not support this mode.

Corridor Pattern: Corridor viewing modes can be used for situations such as long hallways. 0, 90, 180 and 270 are available. The default value is 0.

Image Mirror: Turn the current video image horizontally.


Image Flip: Turn the current video image vertically.

Schedule Settings of Image Parameters:

Click the “Profile Management” tab as shown below.

The screenshot shows a web interface with two tabs: "Camera Parameters" and "Profile Management". The "Profile Management" tab is active. Below the tabs, there are two dropdown menus. The first is labeled "Schedule" and has "Full Time" selected. The second is labeled "Config File" and has "Common" selected. Below these dropdowns is a "Save" button.


Set full time schedule for common, day, night mode and specified time schedule for day and night. Choose “Timing” in the drop-down box of schedule as shown below.

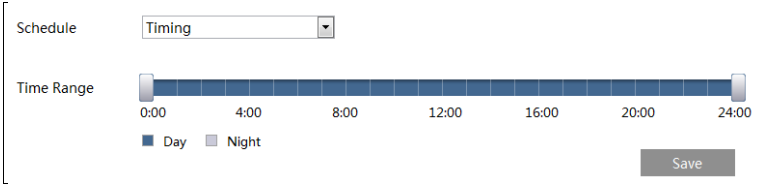

Drag “☀️” icons to set the time of day and night. Blue means day time and blank means night time. If the current mode of camera parameters is set to schedule, the image configuration mode will automatically switch between day and night according to the schedule.

4.2.2 Video / Audio Configuration

Go to Image→Video / Audio interface as shown below. In this interface, set the resolution, frame rate, bitrate, video quality and so on subject to the actual network condition.

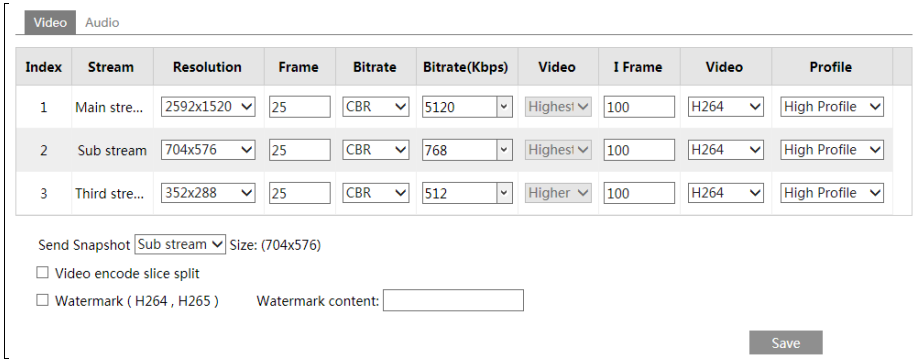

Three video streams can be adjustable.

Resolution: The size of image.

Frame rate: The higher the frame rate, the video is smoother.

Bitrate type: CBR and VBR are optional. Bitrate is related to image quality. CBR means that no matter how much change is seen in the video scene, the compression bitrate will be kept constant. VBR means that the compression bitrate will be adjusted according to scene changes. For example, for scenes that do not have much movement, the bitrate will be kept at a lower value. This can help optimize the network bandwidth usage.

Bitrate: it can be adjusted when the mode is set to CBR. The higher the bitrate, the better the image quality will be.

Video Quality: It can be adjusted when the mode is set to VBR. The higher the image quality, the more bitrate will be required.

I Frame interval: It determines how many frames are allowed between a “group of pictures”. When a new scene begins in a video, until that scene ends, the entire group of frames (or pictures) can be considered as a group of pictures. If there is not much movement in the scene, setting the value higher than the frame rate is fine, potentially resulting in less bandwidth

usage. However, if the value is set too high, and there is a high frequency of movement in the video, there is a risk of frame skipping.

Video Compression: MJPEG, H264+, H264, H264S (Smart H.264), H265, H265+ or H265S (Smart H.265) can be optional. MJPEG is not available for main stream. If H.265/H.265+/H.265S is chosen, make sure the client system is able to decode H.265/H.265+/H.265S.

Compared to H.265+/H.265, smart H.265 can spontaneously adjust the bitrate distribution according to the requirements of the actual scene. For example, when there is no human or vehicle detected, the bitrate will be automatically reduced with no effect on image quality by using H.265S. Compared to H.265, H.265+ saves more storage space with the same maximum bitrate in most scenes. Compared to H.264, H.265 reduces the transmission bitrate under the same resolution, frame rate and image quality.


Profile: For H.264. Baseline, main and high profiles are selectable.

Send Snapshot: Set the snapshot stream.

Video encode slice split: If this function is enabled, smooth image can be gotten even though using the low-performance PC.

Watermark: When playing back the local recorded video in the search interface, the watermark can be displayed. To enable it, check the watermark box and enter the watermark text.

Click the “Audio” tab to go to the interface as shown below.

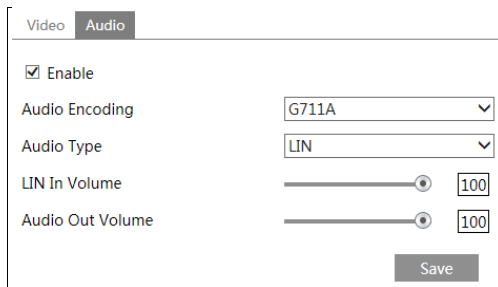

Audio Encoding: G711A and G711U are selectable.

Audio Type: LIN or MIC can be optional.

LIN IN/MIC IN Volume: LIN IN Volume can be set here. If MIC is selected, MIC IN volume can be set.

Audio Out Volume: This function is available for the model with audio out interface.

4.2.3 OSD Configuration

Go to Image→OSD interface as shown below.



Set time stamp, device name, OSD content and picture overlap here. After enabling the corresponding display and entering the content, drag them to change their position. Then click the “Save” button to save the settings.



Picture Overlay Settings:
 Check “OSD Content1”, choose “Picture Overlay” and click “Browse” to select the overlap picture. Then click “Upload” to upload the overlap picture. The pixel of the image shall not exceed 200*200, or it cannot be uploaded.

4.2.4 Video Mask

Go to Image→Video Mask interface as shown below. A maximum of 4 zones can be set up.



To set up video mask:

1. Enable video mask.
2. Click the “Draw Area” button and then drag the mouse to draw the video mask area.
3. Click the “Save” button to save the settings.
4. Return to the live to verify that the area have been drawn as shown as blocked out in the image.




To clear the video mask:


Click the “Clear” button to delete the current video mask area.

4.2.5 ROI Configuration

Go to Image→ROI Config interface as shown below. An area in the image can be set as a region of interest. This area will have a higher bitrate than the rest of the image, resulting in better image quality for the identified area.

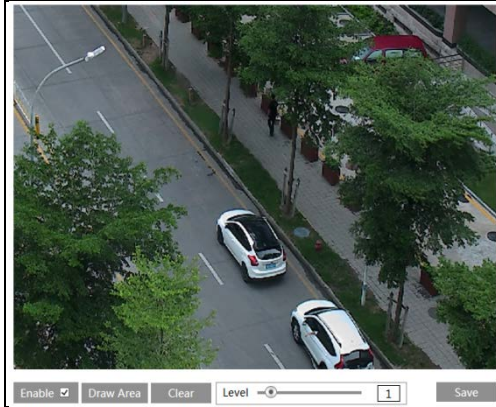


1. Check “Enable” and then click the “Draw Area” button.
2. Drag the mouse to set the ROI area.
3. Set the level.
4. Click the “Save” button to save the settings.

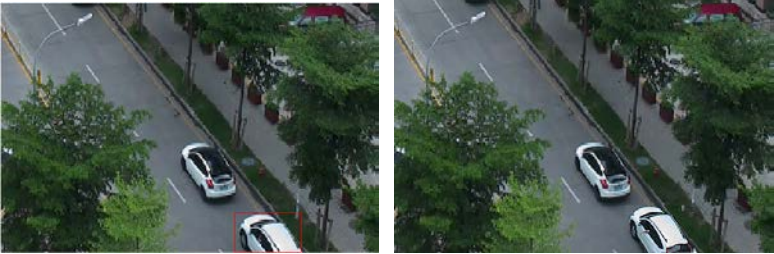

4.2.6 Lens Control

This function is only available for the model with motorized zoom lens. Within this section, zoom and focus can be controlled. If the image is out of focus after a manual adjustment, one key focus can be used to set the focus automatically. Go to Config→Image→Zoom/Focus interface to set.

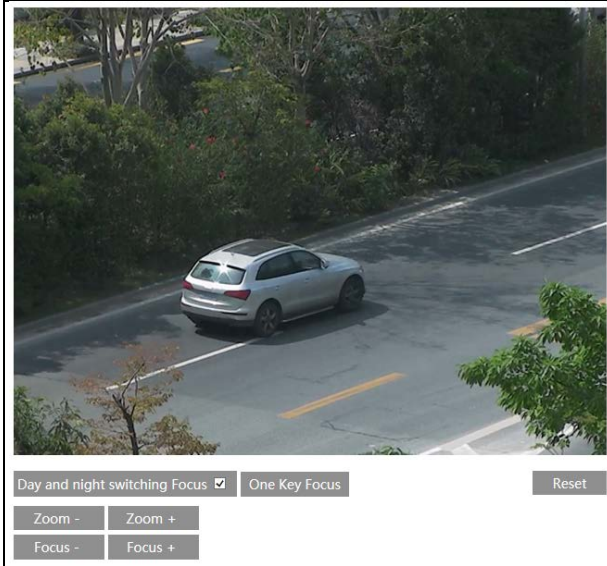

4.3 PTZ Configuration

This function is only available for the model with RS485 interface. It can be used with a compatible external PTZ enclosure. Go to PTZ→Protocol interface as shown below.

Protocol	PELCOD ▾
Address	1
Baud-Rate	2400 ▾
<input type="button" value="Save"/>	

4.4 Alarm Configuration

4.4.1 Motion Detection

Go to Alarm→Motion Detection to set motion detection alarm.

The screenshot shows a web interface for configuring motion detection. At the top, there are three tabs: 'Detection Config' (selected), 'Area and Sensitivity', and 'Schedule'. Below the tabs, there is a 'Detection Config' section with the following elements:

- An 'Enable' checkbox, which is checked.
- An 'Alarm Holding Time' field set to '20 Seconds' with a dropdown arrow.
- A 'Trigger Alarm Out' section containing an 'Alarm Out' checkbox, which is unchecked.
- A 'Trigger SD Snapshot' checkbox, which is unchecked.
- A 'Trigger SD Recording' checkbox, which is unchecked.
- A 'Trigger Email' checkbox, which is unchecked.
- A 'Trigger FTP' checkbox, which is unchecked.

At the bottom of the form is a 'Save' button.

1. Check “Enable” check box to activate motion based alarms. If unchecked, the camera will not send out any signals to trigger motion-based recording to the NVR or CMS, even if there is motion in the video.

Alarm Out: If selected, this would trigger an external relay output that is connected to the camera on detecting a motion based alarm (some models may support two alarm output interfaces. Please select alarm out according to the actual situation).


Trigger SD Snapshot: If selected, the system will capture images on motion detection and save the images on an SD card.

Trigger SD Recording: If selected, video will be recorded on an SD card on motion detection.

Trigger Email: If “Trigger Email” and “Attach Picture” are checked (email address must be set first in the Email configuration interface), the captured pictures and triggered event will be sent into those addresses.

Trigger FTP: If “Trigger FTP” is checked, the captured pictures will be sent into FTP server address. Please refer to FTP configuration chapter for more details.

2. Set motion detection area and sensitivity. Click the “Area and Sensitivity” tab to go to the interface as shown below.

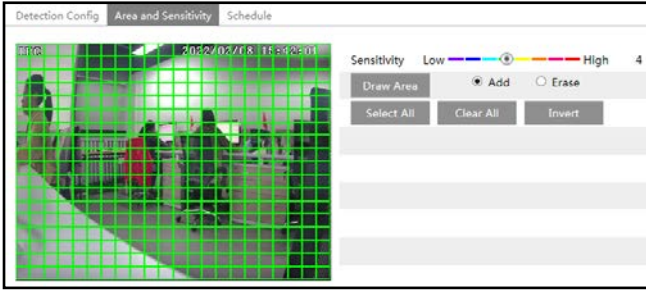

Move the “Sensitivity” scroll bar to set the sensitivity. Higher sensitivity value means that motion will be triggered more easily.

Select “Add” and click “Draw”. Drag the mouse to draw the motion detection area; Select “Erase” and drag the mouse to clear motion detection area.


After that, click the “Save” to save the settings.

3. Set the schedule for motion detection. The schedule setup steps of the motion detection are the same as the schedule recording setup (See [Schedule Recording](#)).

4.4.2 Other Alarms

- **SD Card Full**

1. Go to Config→Alarm→Anomaly→SD Card Full.

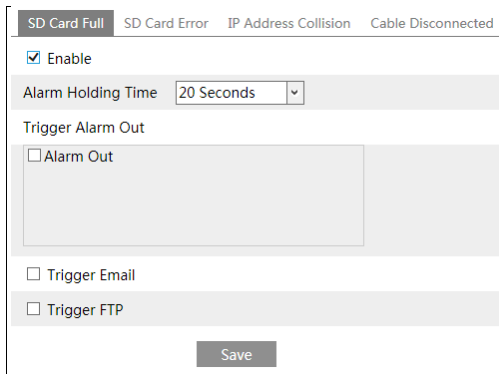

2. Click “Enable” and set the alarm holding time.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [Motion Detection](#) chapter for details.

- **SD Card Error**

When there are some errors in writing SD card, the corresponding alarms will be triggered.

1. Go to Config→Alarm→Anomaly→SD Card Error as shown below.

SD Card Full SD Card Error IP Address Collision Cable Disconnected

Enable

Alarm Holding Time 20 Seconds

Trigger Alarm Out

Alarm Out

Trigger Email

Trigger FTP

Save

2. Click “Enable” and set the alarm holding time.
3. Set alarm trigger options. Trigger alarm out, Email and FTP. The setup steps are the same as motion detection. Please refer to [Motion Detection](#) chapter for details.

● **IP Address Conflict**

1. Go to Config→Alarm→Anomaly→IP Address Collision as shown below.

SD Card Full SD Card Error IP Address Collision Cable Disconnected

Enable

Alarm Holding Time 20 Seconds

Trigger Alarm Out

Alarm Out

Save

2. Click “Enable alarm” and set the alarm holding time.
3. Trigger alarm out. When the IP address of the camera is in conflict with the IP address of other devices, the system will trigger the alarm out.

● **Cable Disconnection**

1. Go to Config→Alarm→Anomaly→Cable Disconnected as shown below.

SD Card Full SD Card Error IP Address Collision **Cable Disconnected**

Enable

Alarm Holding Time 20 Seconds

Trigger Alarm Out

Alarm Out

Save

2. Click “Enable” and set the alarm holding time.
3. Trigger alarm out. When the camera is disconnected, the system will trigger the alarm out.

4.4.3 Alarm In

To set sensor alarm (alarm in):

Go to Config→Alarm→Alarm In interface as shown below.

Alarm Config Schedule

Enable

Alarm Type NO

Alarm Holding Time 20 Seconds

Sensor Name

Trigger Alarm Out

Alarm Out

Trigger SD Snap

Trigger SD Recording

Trigger Email

Trigger FTP

Day/night switch linkage

Save

1. Click “Enable” and set the alarm type, alarm holding time and sensor name.
2. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [Motion Detection](#) chapter for details.

Day/Night Switch Linkage: If enabled, choose daytime or night. When the sensor is triggered by the external environment, it will link the camera to switch to daytime mode or night mode.

3. Click “Save” button to save the settings.

4. Set the schedule of the sensor alarm. The setup steps of the schedule are the same as the schedule recording setup. (See [Schedule Recording](#)).
If there are two sensors, please select the sensor ID. Click “Apply settings to” to quickly apply the settings to the other alarm input.

4.4.4 Alarm Out

This function is only available for some models. Go to Config→Alarm→Alarm Out.

Alarm Out Mode	Alarm Linkage	▼
Alarm Out Name	alarmOut1	
Alarm Holding Time	20 Seconds	▼
Alarm Type	NO	▼
<input type="button" value="Save"/>		

Alarm Out ID: Some models may support two alarm output interfaces. The alarm out can be set respectively by selecting alarm out ID.

Alarm Out Mode: Alarm linkage, manual operation, day/night switch linkage and timing are optional.

Alarm Linkage: Having selected this mode, select alarm out name, alarm holding time at the “Alarm Holding Time” pull down list box and alarm type.

Manual Operation: Having selected this mode, select the alarm type and click “Open” to trigger the alarm out immediately; click “Close” to stop alarm.

Alarm Out Mode	Manual Operation	▼
Alarm Type	NO	▼
Manual Operation	<input type="button" value="Open"/>	<input type="button" value="Close"/>
<input type="button" value="Save"/>		

Day/Night Switch Linkage: Having selected this mode, select the alarm type and then choose to open or close alarm out when the camera switches to day mode or night mode.

Alarm Out Mode	Day/night switch linkage
Alarm Type	NO
Day	Close
Night	Close

Timing: Select the alarm type. Then click “Add” and drag the mouse on the timeline to set the schedule of alarm out; click “Erase” and drag the mouse on the timeline to erase the set time schedule. After this schedule is saved, the alarm out will be triggered in the specified time.

Alarm Out Mode	Timing
Alarm Type	NO

Time Range

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24

06:45-15:30 Manual Input

Erase Add

4.4.5 Alarm Server

Go to Alarm→Alarm Server interface as shown below. Set the server address, port, heartbeat and heartbeat interval. When an alarm occurs, the camera will transfer the alarm event to the alarm server. If an alarm server is not needed, there is no need to configure this section.

Server Address	<input type="text"/>
Port	0
Heartbeat	Disable
Heartbeat interval	30 Second

4.5 Event Configuration


- For more accuracy, here are some recommendations for installation.
- Cameras should be installed on stable surfaces, as vibrations can affect the accuracy of detection.
 - Avoid pointing the camera at the reflective surfaces (like shiny floors, mirrors, glass, lake surfaces and so on).
 - Avoid places that are narrow or have too much shadowing.
 - Avoid scenario where the object’s color is similar to the background color.
 - At any time of day or night, please make sure the image of the camera is clear and with adequate and even light, avoiding overexposure or too much darkness on both sides.

4.5.1 Abandoned/Missing Object Detection

Alarms will be triggered when the objects are removed from or left at the pre-defined area.

To set object removal:

Go to Config→Event→Object Removal interface as shown below.

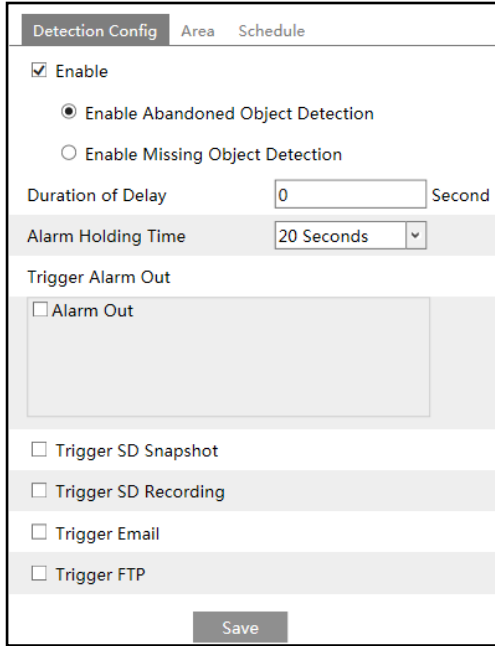

1. Enable object removal detection and then select the detection type.

Enable Abandoned Object Detection: Alarms will be triggered if there are items left in the pre-defined area.

Enable Missing Object Detection: Alarms will be triggered if there are items missing in the pre-defined area.


Duration of Delay: it is the alarm delay time of the object left in the region or removed from the region (ranges from 10~3600s). For example, if “Enable Abandoned Object Detection” is selected and the duration of delay is set as 10, alarms will be triggered after the object is left and stay in the region for 10s, but when someone takes away the object within 10s, alarms will not be triggered.

Alarm Holding Time: the time duration from alarm beginning to alarm end.

2. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to [Motion Detection](#) chapter for details.

3. Click “Save” button to save the settings.

4. Set the alarm area of the object removal detection. Click the “Area” tab to go to the interface as shown below.

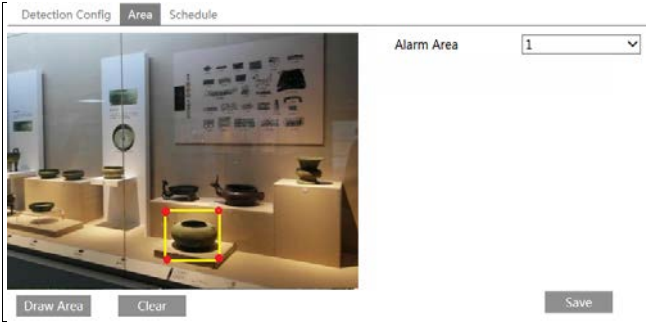

Set the alarm area number and then enter the desired alarm area name. Only one alarm area can be added. Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

5. Set the schedule of the object removal detection. The setup steps of schedule are the same as the schedule recording (See [Schedule Recording](#)).

※ **The configuration requirements of camera and surrounding areas**


1. The range of the detection object should occupy from 1/50 to 1/3 of the entire image.
2. The detection time of objects in the camera shall be from 3 to 5 seconds.
3. The defined area cannot be covered frequently and continuously (like people and traffic flow).
4. It is necessary for missing object detection that the drawn frame must be very close to the margin of the object in enhancing the sensitivity and accuracy of the detection.
5. Abandoned/missing object detection cannot determine the objects’ ownership. For instance, there is an unattended package in the station. Abandoned object detection can detect the package itself but it cannot determine to whom it belongs to.
6. Try not to enable abandoned/missing object detection when light changes greatly in the scene.
6. Try not to enable object removal detection when light changes greatly in the scene.
7. Try not to enable object removal detection if there are complex and dynamic environments in the scene.
8. Adequate light and clear scenery are very important to object removal detection.

4.5.2 Video Exception

This function can detect changes in the surveillance environment affected by the external factors.

To set exception detection:

Go to Config→Event→Exception interface as shown below.

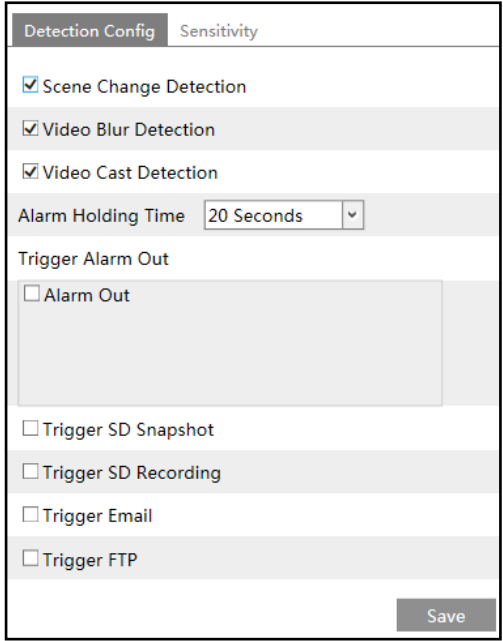

1. Enable the applicable detection that's desired.

Scene Change Detection: Alarms will be triggered if the scene of the monitor video has changed.


Video Blur Detection: Alarms will be triggered if the video becomes blurry.

Video Cast Detection: Alarms will be triggered if the image is abnormal caused by color deviation.

2. Set the alarm holding time and alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.

3. Click “Save” button to save the settings.

4. Set the sensitivity of the exception detection. Click “Sensitivity” tab to go to the interface as shown below.

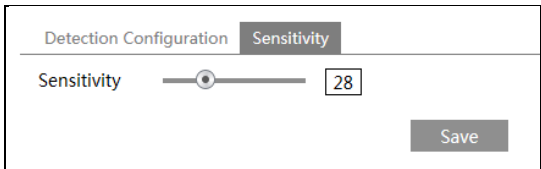

Drag the slider to set the sensitivity value or directly enter the sensitivity value in the textbox. Click “Save” button to save the settings.

The sensitivity value of Scene Change Detection: The higher the value is, the more sensitive the system responds to the amplitude of the scene change.

The sensitivity value of Video Blur Detection: The higher the value is, the more sensitive

the system responds to the blurriness of the image.


The sensitivity value of Video Cast Detection: The higher the value is, the more sensitive the system responds to the color shift of the image.

※ **The requirements of camera and surrounding area**

1. Auto-focusing function should not been enabled for exception detection.
2. Try not to enable exception detection when light changes greatly in the scene.
3. Please contact us for more detailed application scenarios.

4.5.3 Line Crossing

Line Crossing: Alarms will be triggered if the target crosses the pre-defined alarm lines. Go to Config→Event→Line Crossing interface as shown below.

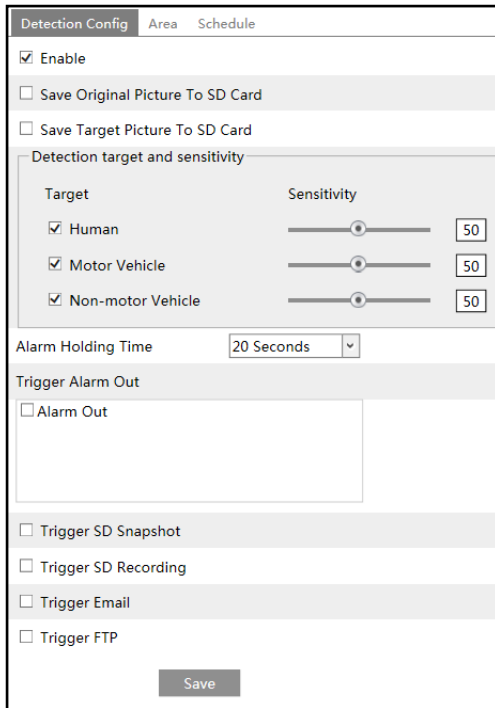

1. Enable line crossing detection and select the snapshot type and the detection target.

Save Original Picture to SD Card: If it is enabled, the detected original pictures will be captured and saved to the SD card when the targets cross the alarm line.

Save Target Picture to SD Card: If it is enabled, the detected target cutout pictures will be captured and saved to the SD card when the targets cross the alarm line.

Note: To save snapshots to the local PC, please enable “Local Smart Snapshot Storage” in the local config interface first. To save snapshots to the SD card, please install an SD card first.

Detection Target:

Human: Select it and then alarms will be triggered if someone crosses the pre-defined alarm lines.

Motor Vehicle: Select it and then alarms will be triggered if a vehicle with four or more wheels (eg. a car, bus or truck) crosses the pre-defined alarm lines.

Non-motor Vehicle: Select it and then alarms will be triggered if a vehicle with two wheels (eg. a motorcycle or bicycle) crosses the pre-defined alarm lines.

All of the three types of objects can be selected simultaneously. Please select the detection objects as needed. If no object/target is selected, alarms will not be triggered even if line crossing detection is enabled.

2. Set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [Motion Detection](#) chapter for details.
4. Click “Save” button to save the settings.
5. Set area and sensitivity of the line crossing alarm. Click the “Area and Sensitivity” tab to go to the interface as shown below.



Set the alarm line number and direction. Up to 4 lines can be added. Multiple lines cannot be added simultaneously.

Direction: A<->B, A->B and A<-B optional. This indicates the direction of someone or a vehicle crosses over the alarm line.

A<->B: Alarms will be triggered when someone or a vehicle crosses over the alarm line from B to A or from A to B.

A->B: Alarms will be triggered when someone or a vehicle crosses over the alarm line from A to B.

A<-B: Alarms will be triggered when someone or a vehicle crosses over the alarm line from B to A.

Click the “Draw Area” button and then drag the mouse to draw a line in the image. Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the lines. Click the “Save” button to save the settings.


6. Set the schedule of the line crossing alarm. The setup steps of the schedule are the same as the schedule recording setup (See [Schedule Recording](#)).

✘ **Configuration of camera and surrounding area**

1. Auto-focusing function should not be enabled for line crossing detection.
2. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn't be too low.
3. Cameras should be mounted at a height of 2.8 meters or above.
4. Keep the mounting angle of the camera at about 45°.
5. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image.
6. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
7. Adequate light and clear scenery are crucial for line crossing detection.

4.5.4 Region Intrusion

Region Intrusion: Alarms will be triggered if the target intrudes into the pre-defined areas. This function can be applicable to important supervision places, danger areas and prohibited areas, like military administrative zones, high danger areas, no man's areas, etc. Go to Config→Event→Intrusion interface as shown below.

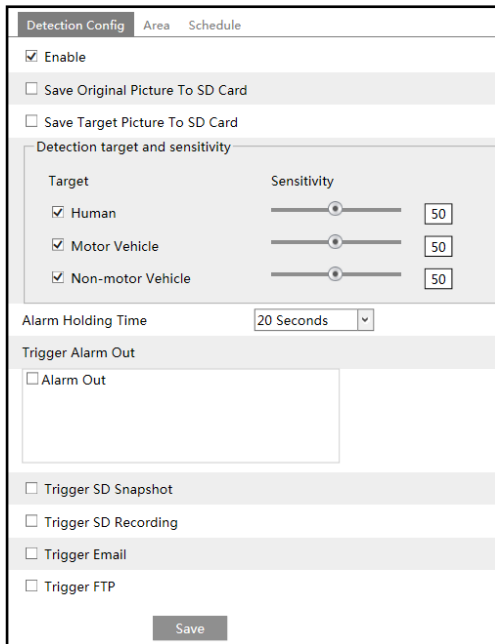

1. Enable intrusion detection and select the snapshot type and the detection target.
2. Set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [Motion Detection](#) chapter for details.

4. Click the “Save” button to save the settings.
5. Set the alarm area of the intrusion detection. Click the “Area” tab to go to the interface as shown below.



- Set the alarm area number on the right side. Up to 4 alarm areas can be added. Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.
6. Set the schedule of the intrusion detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

※ Configuration requirements of camera and surrounding area

1. Auto-focusing function should not be enabled for intrusion detection.
2. Avoid the scenes with many trees or the scenes with various light changes (like many flashing headlights). The ambient brightness of the scenes shouldn't be too low.
3. Cameras should be mounted at a height of 2.8 meters or above.
4. Keep the mounting angle of the camera at about 45°.
5. The detected objects should not be less than 1% of the entire image and the largest sizes of the detected objects should not be more than 1/8 of the entire image.
6. Make sure cameras can view objects for at least 2 seconds in the detected area for accurate detection.
7. Adequate light and clear scenery are crucial to intrusion detection.

4.5.5 Region Entrance

Region Entrance: Alarms will be triggered if the target enters the pre-defined areas. Go to Config→Event→Region Entrance interface as shown below.

Detection Config
Area
Schedule

Enable

Save Original Picture To SD Card

Save Target Picture To SD Card

Detection target and sensitivity

Target	Sensitivity
<input checked="" type="checkbox"/> Human	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border-bottom: 1px solid gray; position: relative;"> <div style="position: absolute; right: -5px; top: -5px; width: 10px; height: 10px; border-radius: 50%; background-color: gray;"></div> </div> <div style="border: 1px solid gray; width: 30px; text-align: center; margin-left: 5px;">50</div> </div>
<input checked="" type="checkbox"/> Motor Vehicle	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border-bottom: 1px solid gray; position: relative;"> <div style="position: absolute; right: -5px; top: -5px; width: 10px; height: 10px; border-radius: 50%; background-color: gray;"></div> </div> <div style="border: 1px solid gray; width: 30px; text-align: center; margin-left: 5px;">50</div> </div>
<input checked="" type="checkbox"/> Non-motor Vehicle	<div style="display: flex; align-items: center;"> <div style="flex-grow: 1; border-bottom: 1px solid gray; position: relative;"> <div style="position: absolute; right: -5px; top: -5px; width: 10px; height: 10px; border-radius: 50%; background-color: gray;"></div> </div> <div style="border: 1px solid gray; width: 30px; text-align: center; margin-left: 5px;">50</div> </div>

Alarm Holding Time 20 Seconds

Trigger Alarm Out

Trigger SD Snapshot

Trigger SD Recording


Trigger Email

Trigger FTP

Save

1. Enable region entrance detection and select the snapshot type and the detection target.
2. Set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [Motion Detection](#) chapter for details.
4. Click the “Save” button to save the settings.
5. Set the alarm area of the region entrance detection. Click the “Area” tab to go to the interface as shown below.

Detection Config
Area
Schedule



Alarm Area 1

Stop Draw
Clear

Save

38


Set the alarm area number on the right side. Up to 4 alarm areas can be added. Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

6. Set the schedule of the region entrance detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).


* The configuration requirements of camera and surrounding area are the same as intrusion detection.

4.5.6 Region Exiting

Region Exiting: Alarms will be triggered if the target exits from the pre-defined areas. Go to Config→Event→Region Exiting interface as shown below.

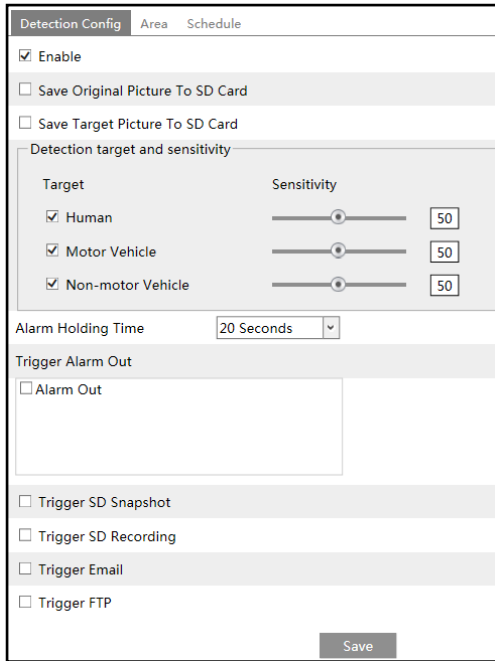

1. Enable region exiting detection and select the snapshot type and the detection target.
2. Set the alarm holding time.
3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [Motion Detection](#) chapter for details.
4. Click the “Save” button to save the settings.
5. Set the alarm area of the region exiting detection. Click the “Area” tab to go to the interface as shown below.

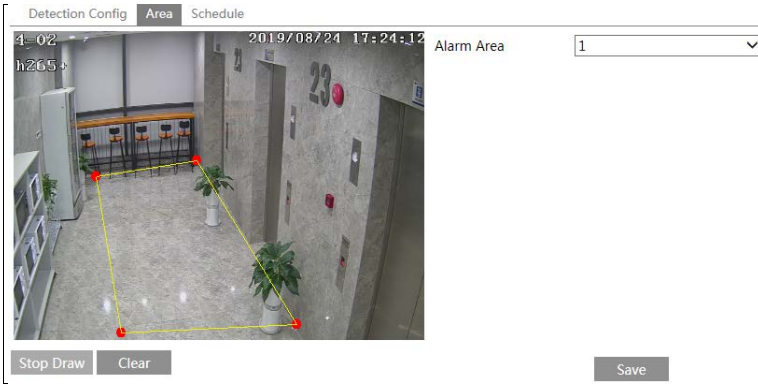

Set the alarm area number on the right side. Up to 4 alarm areas can be added. Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.


6. Set the schedule of the region exiting detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

* The configuration requirements of camera and surrounding area are the same as intrusion detection

4.5.7 Target Counting by Line

This function is to calculate the number of the people or vehicles crossing the alarm line through detecting, tracking and counting the shapes of the people or vehicles.

1. Go to Config→Event→Target Counting by Line as shown below.

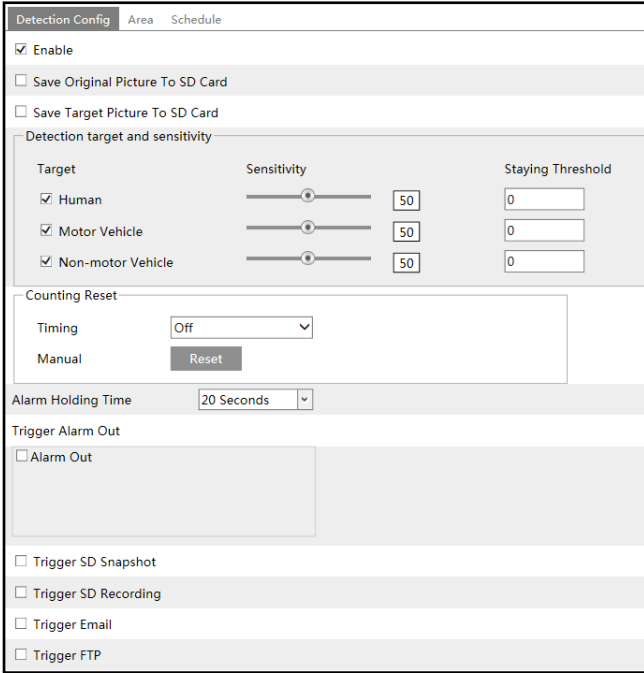

2. Enable target counting and select the snapshot type and the detection target.


Detection Target: Select the target to calculate. Human, motor vehicle and Non-motor vehicle can be selected.

Staying Threshold: When the targets (human/vehicle) staying in the specified area exceed the threshold, alarms will be triggered.

Counting Reset: The current number of the target counting can be reset. You can choose to reset the counting daily, weekly or monthly. Click “Reset” to manually reset the current number of crossing line people/car/bike counting.

3. Set the alarm trigger options. The setup steps are the same as motion detection. Please refer to motion detection chapter for details.

4. Set the alarm line. Click the “Area” tab to go to the interface as shown below.

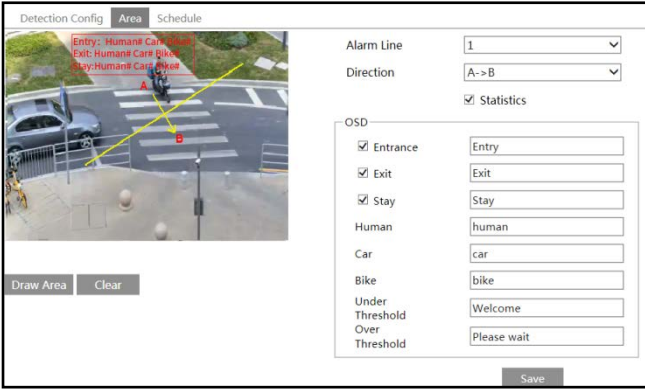

Set the alarm line number and direction. Only one alarm line can be added.

Direction: A->B and A<-B can be optional. The direction of the arrow is entrance.

Statistics: If enabled, you can see the statistical information in the live view interface. If disabled, the statistical information will not be displayed in the live view interface.


The statistical OSD information can be customized as needed.

Click the “Draw Area” button and then drag the mouse to draw a line in the image. Check “Statistics” and then move the red box to change the position of the statistical information displayed on the screen. Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the lines.

Click the “Save” button to save the settings.


5. Set the schedule of the target counting. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

6. View the statistical information in the live view interface.

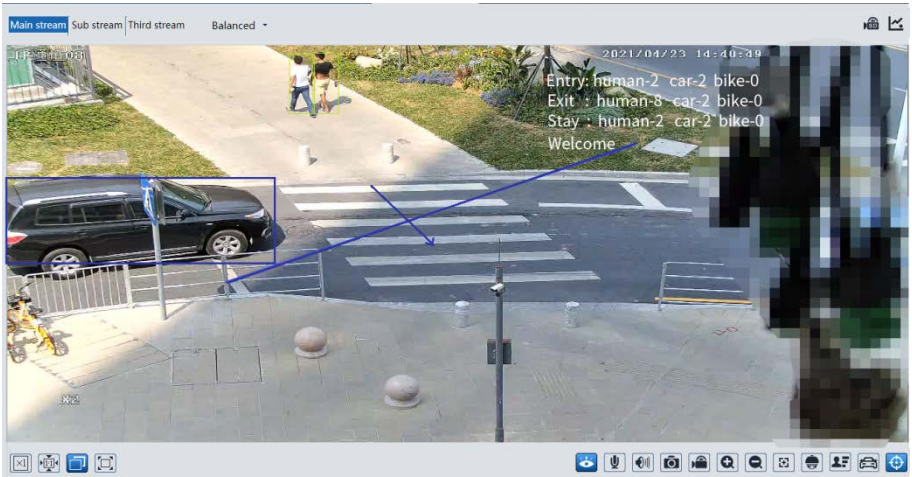

7. View the statistical information of target counting by line. Click “Statistics” to enter the

following interface.

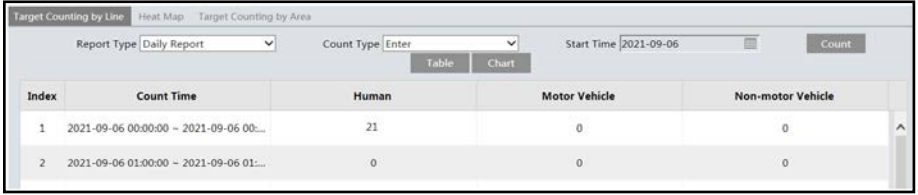

Index	Count Time	Human	Motor Vehicle	Non-motor Vehicle
1	2021-09-06 00:00:00 - 2021-09-06 00:...	21	0	0
2	2021-09-06 01:00:00 - 2021-09-06 01:...	0	0	0

Select the report type. Daily report, weekly report, monthly report and annual report are selectable.

Select the count type. Enter or leave can be optional.

Select the start time and then click “Count”. Then the counting result will display in the statistic result area. Click Table or Chart to display the result in different way.



4.5.8 Target Counting by Area

This function is to calculate the number of the people or vehicles intruding into the pre-defined area through detecting, tracking and counting the shapes of the people or vehicles.

1. Go to Config→Event→Target Counting by Area as shown below.

2. Enable target counting by area, select the snapshot type, the detection target, counting reset and alarm linkages. The setup steps are the same as the target counting by line.
3. Set the statistic area. Click the “Area” tab to go to the interface as shown below.

Select the alarm area number on the right side. Only one alarm area can be added.
Statistics: If enabled, you can see the statistical information in the live view interface. If


disabled, the statistical information will not be displayed in the live view interface.

The statistical OSD information can be customized as needed.

Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Check “Statistics” and then move the red box to change the position of the statistical information displayed on the screen. Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

4. Set the schedule of the target counting by area. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

5. View the statistical information in the live view interface.

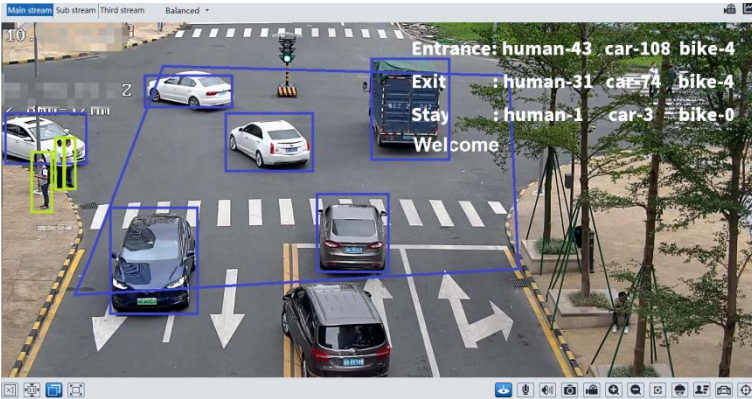

6. View the statistical information of target counting by area. Click Statistics→Target Counting by Area to enter the following interface.

Report Type: Day Report		Count Type: Enter		Start Time: 2021-04-29 00:00:00		Count	Table	Chart
Index	Count Time	Human	Motor Vehicle	Non-motor Vehicle				
13	2021-04-29 12:00:00 - 2021-04-29 12:59:59	0	0			0		
14	2021-04-29 13:00:00 - 2021-04-29 13:59:59	0	0			0		
15	2021-04-29 14:00:00 - 2021-04-29 14:59:59	0	0			0		
16	2021-04-29 15:00:00 - 2021-04-29 15:59:59	0	0			0		
17	2021-04-29 16:00:00 - 2021-04-29 16:59:59	0	0			0		
18	2021-04-29 17:00:00 - 2021-04-29 17:59:59	5	12			1		

Please select report type, count type and start time as needed. Then click “Count” to search the statistic result. Click “Chart” to view statistic result in a line chart.

4.5.9 Crowd Density Detection

This function can detect the density of the people in a specified area (like square, supermarket). Go to Config→Event→Crowd Density as shown below.

The screenshot shows the 'Detection Config' tab with the following settings:

- Enable
- Refresh Frequency: 1 Seconds
- Density Alarm Threshold: 50%
- Alarm Holding Time: 20 Seconds
- Trigger Alarm Out:
 - Alarm Out
 - Trigger SD Snapshot
 - Trigger SD Recording
 - Trigger Email
 - Trigger FTP
- Save button


1. Enable the crowd density detection.
2. Set “Refresh Frequency”, “Density Alarm Threshold” and “Alarm Holding Time”.

Refresh Frequency: The refresh frequency of the detection result.

Density Alarm Threshold: Alarms will be triggered once the percentage of the crowd density in a specified area exceeds the pre-defined threshold value.

3. Set alarm trigger options. The setup steps are the same as motion detection. Please refer to [Motion Detection](#) chapter for details.

4. Set an alarm area for the crowd density detection. Click the “Area” tab as shown below. Click “Draw Area” and drag the mouse to draw a rectangle area. Drag the border lines of the rectangle to modify its size and move the rectangle to change its position. Click “Stop Draw” to stop drawing the area. Click “Clear” to clear the area.

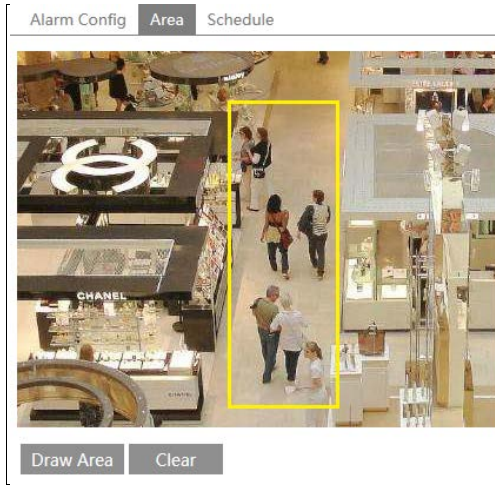


5. Set the schedule of the crowd density detection. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

Note: The camera only can roughly calculate the crowd density through detecting the human faces. The head or back of the person detected is not counted.

※Configuration of camera and surrounding area

1. The camera lens should face to the people flow. The direction of the people flow is allowed to deviate slightly from the direction of the camera lens (The angle (a) shall be less than 45°). It is recommended that the angle between the lens of the camera and the floor (b) shall range from 30° to 60°.

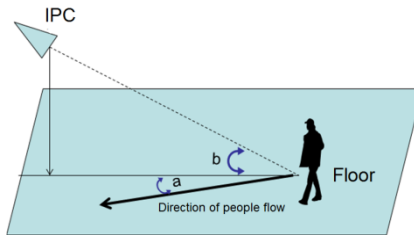

2. The size range of a single person image should take up from 1% to 5% of the entire image and the height range of a single person image should occupy from 1/5 to 1/2 of the entire image.


3. This function is inapplicable to the scene where there are many moving objects except human shape. (eg. moving cars)

4. A lot of trees and billboards will affect the detection results in the detected area.

4.5.10 Face Comparison

The setting steps are as follows.

1. Go to Config→Event→Face Comparison interface.

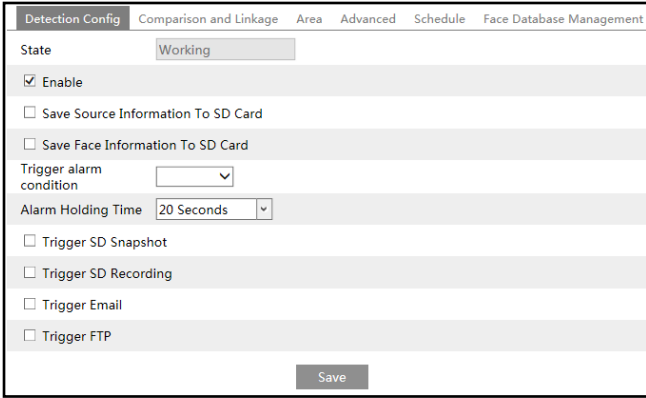

2. Enable the face detection function.

Save Source Information to SD Card: if checked, the whole picture will be saved to the SD card when detecting a face.

Save Face Information to SD Card: if checked, the captured face picture will be saved to the SD card when detecting a face.

Note: To save images to the local PC, please enable the local smart snapshot storage first (Config→System→Local Config).


3. Set alarm triggering condition, alarm holding time and alarm trigger options.

Trigger alarm condition: all or mask off can be selectable.


All: Alarms will be triggered when the camera detects a face (with/without a mask).

Mask off: Alarms will be triggered when the detected person is not wearing a mask on the face.

4. Set alarm detection area. Click “Draw Area” and drag the border lines of the rectangle to modify its size. Move the rectangle to change its position. Click “Stop Draw” to stop drawing the area. Click “Clear” to clear the area. Then set the detectable face size by defining the maximum value and the minimum value (The default size range of a single face image occupies from 3% to 50% of the entire image).

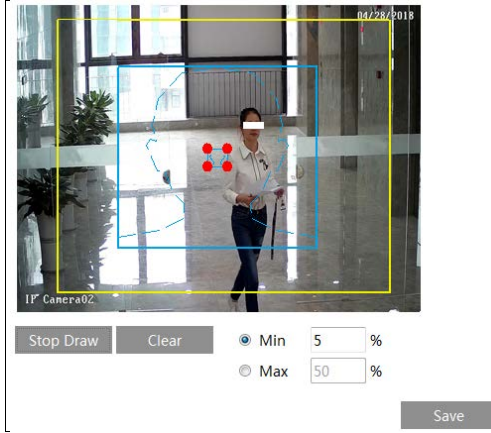

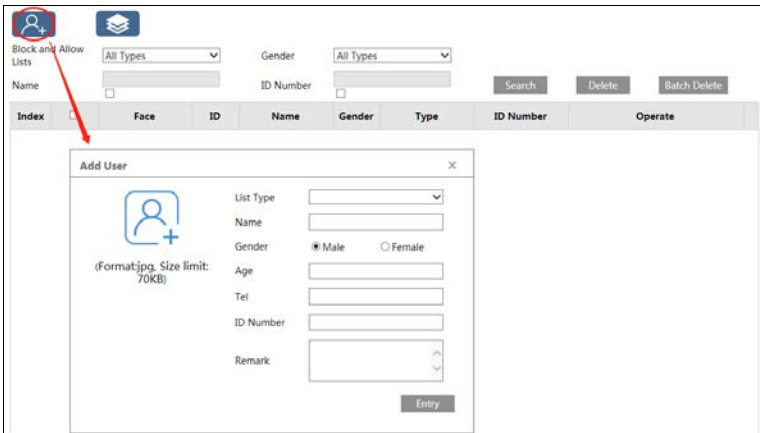

5. Face database management: click “Face Database Management” tab. This will enter the following interface.




There are four ways to add face pictures.

① Adding face pictures one by one

Click  to pop up an adding user box. Then click  to select a face picture saved on the local PC. Please select the picture according to the specified format and size limit. After that, fill out the relevant information of the face picture and click “Entry” to add.

② Adding face pictures in bulk

Click  and then add multiple face pictures once according to the prompted rules.

③ Add face pictures by using face album management tool


④ Add the captured picture in the live mode (See *Add captured face pictures to the face database*).

After adding face pictures, you can search them by name, gender, ID number and so on.




Click “Modify” to change people information and click “Delete” to delete this face picture.

6. Set face comparison trigger options. Click “Comparison and Linkage” to go to the following interface.

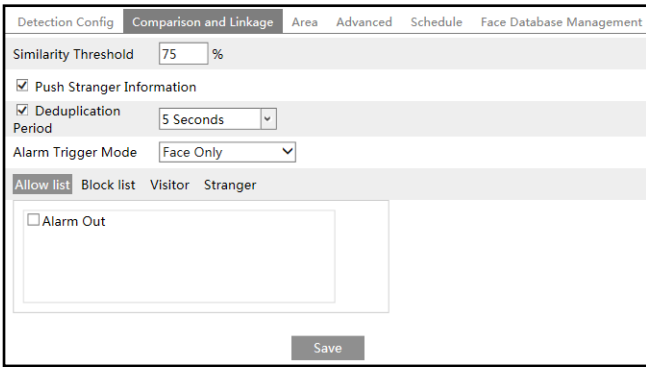

Similarity threshold: When the similarity of the captured face picture and the face picture added into the face database exceeds the similarity threshold, alarms will be triggered.

Push Stranger: Push the comparison alarm information of the stranger. After it is enabled, the comparison information of the stranger will be shown on the left comparison area of the live interface (see the following picture).

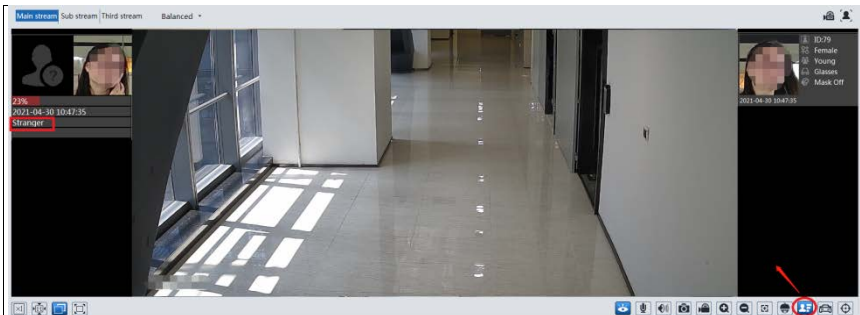

Deduplication Period: In the set period, delete the repeated comparison results.

Alarm Trigger Mode: Face only. When the captured face is successfully recognized, alarms will be triggered.

Alarm Trigger Mode: Face only mode. When the captured face picture is matched successfully, alarms will be triggered.

Alarm Output: Select the list type and then checkmark alarm out. Then alarm output will be triggered when the captured face is matched successfully with the face image of the selected list.

7. Set the schedule of the face detection and comparison. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

8. Advanced configuration.

Application Scenes: “Access control”, “security monitoring” or “customize” can be selected. Snapshot Interval: If 5 seconds is selected, the camera will capture the same target once every 5 seconds during its continuous tracking period.

Snapshot Number: If the snapshot number is enabled and set (eg. 3), the camera will capture the same target once every 5 seconds and it will capture this target 3 times at most during its continuous tracking period. If the snapshot number is disabled, the camera will capture the same target once every 5 seconds until the target disappears in the detected area.

Proximity Priority Comparison: When several persons are in the recognition area at the same time, the person closer to the camera is recognized first.


Comparison in free time: When the processor is busy, the comparison of the current detected person will not be performed immediately (for example, there is not enough time for the processor to perform all comparisons, because so many people are detected at the same time). It will continue after the processor load is reduced.

● **Face Match View**

After all face comparison settings are set successfully, enter the live view interface. Click



to view the captured face pictures and face comparison information.

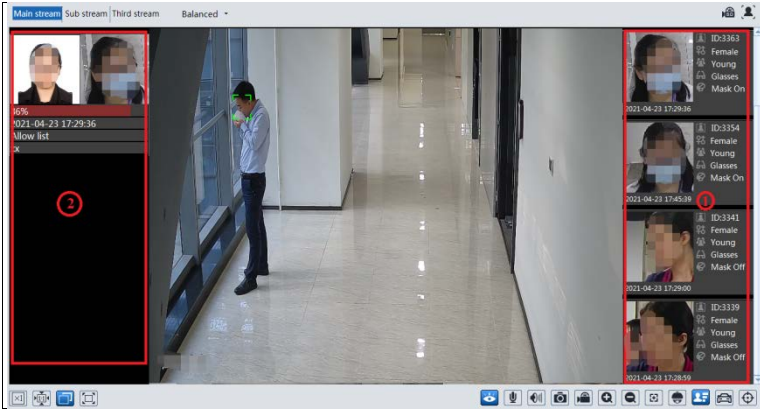


Area ①: captured face pictures; area ②: face comparison area

In area ①, you can view the detailed information of the captured person, such as gender, age group, mask-wearing status and glasses-wearing status.

In area ②, you can view the detailed face comparison information, such as the similarity, capture time, list type, etc. If “Push Stranger” is enabled, the stranger comparison information will be displayed too.

● **View the comparison details**

In area ②, click the compared face picture to bring the following window. In this interface, you can view the detailed comparison information.

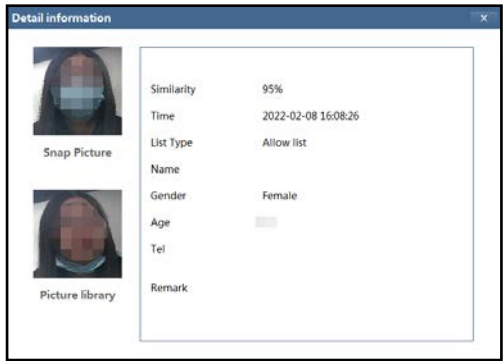

● **Add captured face pictures to the face database**


Click a captured picture in area ①. This will bring a face picture adding box.

The screenshot shows a window titled "Add User" with a close button in the top right corner. On the left, there is a placeholder for a user's face picture. To the right of the picture are several fields: "Time" (2022-02-08 16:06:18), "ID" (3106), "List Type" (a dropdown menu showing "Allow list"), "Name" (an empty text box), "Gender" (a dropdown menu showing "Male"), "Age" (an empty text box), "Tel" (an empty text box), "Card NO." (an empty text box), and "Remark" (a larger empty text box). At the bottom center of the window is a grey button labeled "Entry".

Fill out the relevant information and click “Entry” to add this face picture.

✘ Configuration requirements of camera and surrounding area

- 1. Cameras must be installed in the area with stable and adequate light sources.
- 2. The installation height ranges from 2.0m to 3.5m, adjustable according to the focal-length of different lenses and object distances.
- 3. The depression angle of the camera shall be less than or equal to 15°.

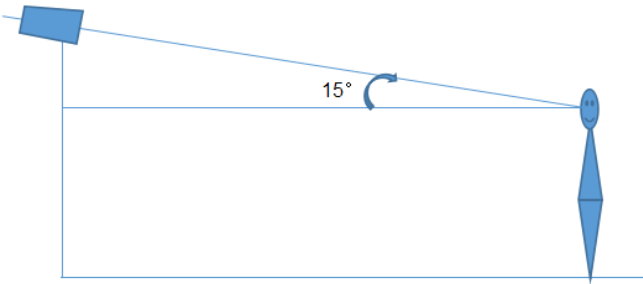

- 4. The object distance depends on the focal-length of the lens mounted in the camera.
- 5. To ensure the accuracy of face detection, the captured faces are only allowed to deviate less than 30° leftward or rightward or 20° upward or downward.
- 6. The following scenes are not applicable, like crowded scenes (airport, railway station, square, etc), backlight scenes, crossroads and so on.

4.5.11 License Plate Detection Settings

License plate detection function is to detect and compare license plate numbers. Alarms will be triggered when a license plate is detected.

Vehicle license plate detection and comparison settings:


- 1. Go to Config→Event→ANPR as shown below.

<input checked="" type="checkbox"/> Enable
<input type="checkbox"/> Save Original Picture To SD Card
<input type="checkbox"/> Save Target Picture To SD Card
License Plate Detection Area <input type="text" value="Asia"/> <input type="text" value="chineseMainlan"/>
<input type="checkbox"/> Capture Plate Absence Vehicle
Alarm Holding Time <input type="text" value="3 Seconds"/>
<input type="checkbox"/> Trigger SD Snapshot
<input type="checkbox"/> Trigger SD Recording
<input type="checkbox"/> Trigger Email
<input type="checkbox"/> Trigger FTP
<input type="button" value="Save"/>

2.Enable ANPR. Select Save Original Picture/Target Picture to SD Card, License Plate Detection Area, and Capture Plate Absence Vehicle as needed.

3.Set alarm holding time and alarm trigger options. The alarm trigger setup steps are the same as motion detection setup. Please refer to [Motion Detection](#) chapter for details.

4. Set the alarm detection area and the blocked area.


Detection Config	Comparison and Linkage	Area	Advanced	Schedule	Vehicle Database										
			<table border="1"> <tr> <td>Detection Area</td> <td>Blocked Area</td> </tr> <tr> <td><input checked="" type="radio"/> Min <input type="text" value="3"/> %</td> <td><input type="radio"/> Max <input type="text" value="30"/> %</td> </tr> <tr> <td><input type="button" value="Draw Area"/></td> <td><input type="button" value="Clear"/></td> </tr> <tr> <td colspan="2">License Plate Exposure <input type="checkbox"/> <input type="range" value="1"/> <input type="text" value="1"/></td> </tr> <tr> <td colspan="2"><input type="button" value="Save"/></td> </tr> </table>			Detection Area	Blocked Area	<input checked="" type="radio"/> Min <input type="text" value="3"/> %	<input type="radio"/> Max <input type="text" value="30"/> %	<input type="button" value="Draw Area"/>	<input type="button" value="Clear"/>	License Plate Exposure <input type="checkbox"/> <input type="range" value="1"/> <input type="text" value="1"/>		<input type="button" value="Save"/>	
Detection Area	Blocked Area														
<input checked="" type="radio"/> Min <input type="text" value="3"/> %	<input type="radio"/> Max <input type="text" value="30"/> %														
<input type="button" value="Draw Area"/>	<input type="button" value="Clear"/>														
License Plate Exposure <input type="checkbox"/> <input type="range" value="1"/> <input type="text" value="1"/>															
<input type="button" value="Save"/>															

To set the detection area

Click “Draw Area” and drag the border lines of the rectangle to modify its size. Click “Stop Draw” to stop drawing the area. Click “Clear” to clear the area. Then set the detectable size by defining the maximum value and the minimum value (The default size range of a single number plate image occupies from 5% to 50% of the entire image).


To set the blocked area:

Select the number of the undetected area. Then click “Draw Area” to draw a closed area. Up to 4 areas can be set up. After you set the blocked area, this area will not be detected.

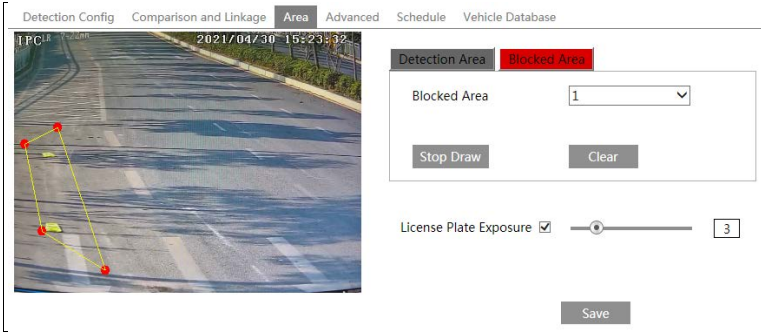

5. Set the schedule of the ANPR. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

6. Add vehicles to the vehicle Database. Click the vehicle database tab to go to the following interface.

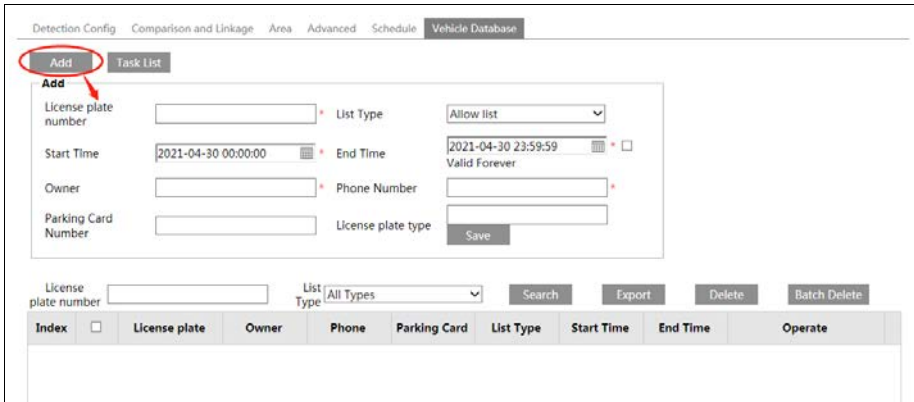


● **Add vehicles**

Click “Add” to extend a vehicle adding box as shown in the above figure. Enter the license plate number, select list type, start and end time, enter owner, license plate type, phone number and so on. Then click “Save” to save the vehicle information.

List type: temporary vehicle, allow list and block list can be selected.

Click “Task List” to add multiple vehicles at one time as shown below.

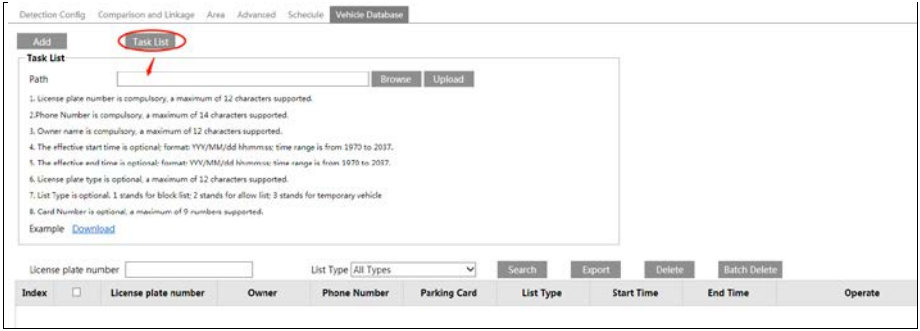


Please edit the vehicle information according to the requirements shown on the above interface. If you don't know how to edit the file, please click "Download" to download an example file and then follow the example to edit. After that, click "Browse" to choose the vehicle information file and click "Upload" to import all vehicle information.

● **Search vehicles**

After the vehicles are added, you can search them in the vehicle list. Enter the license plate number and list type and then click "Search" to search the added vehicle information. Click "Modify" to modify its information. Click "Delete" to delete this vehicle information.

7. Set the license plate comparison and alarm linkage. Click the "Comparison and linkage" tab to go to the following interface.

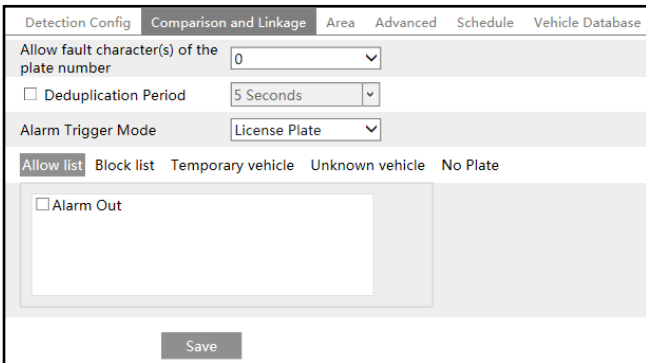


Set the fault tolerance, alarm list and check "alarm out". Finally, click "Save" to save all the settings.

Allow fault character(s) of the plate number: up to 2 characters are allowed. For example, if "2" is selected, the captured license plate will be matched successfully and trigger the corresponding alarm even if there are 2 characters (or less) of the captured license plate not matched with the license plate of the vehicle list.

Deduplication Period: In the set period, delete the repeated comparison results.

Alarm Output: Select the list type and then checkmark alarm out. Then alarm output will be triggered when the captured plate number is matched successfully with the plate number of the selected list. If “Unknown vehicle” and vehicles without plate are captured, alarm out will be triggered immediately.


8. Advanced Settings. Click the “Advanced” tab to go to the following interface.

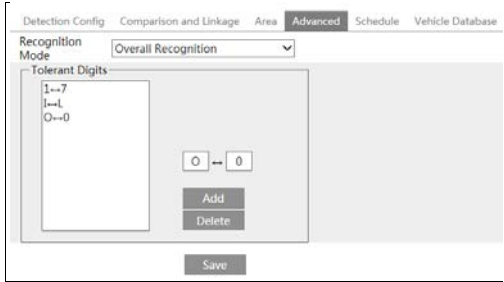


Recognition Mode: Overall Recognition, Recognizing when approaching, Recognizing when driving away.

Tolerant Digitals: please set the tolerant character pair as needed. For example: 1 and L, supposing that the plate number “ABCL” has been added to the vehicle database, when the plate number “ABC1” is detected by the camera, then these two plate numbers will be matched successfully, and vice versa.


Multiple tolerant digital pairs can be set as needed.

After all above information are set, go to the live interface and click  to see the captured pictures as shown below.

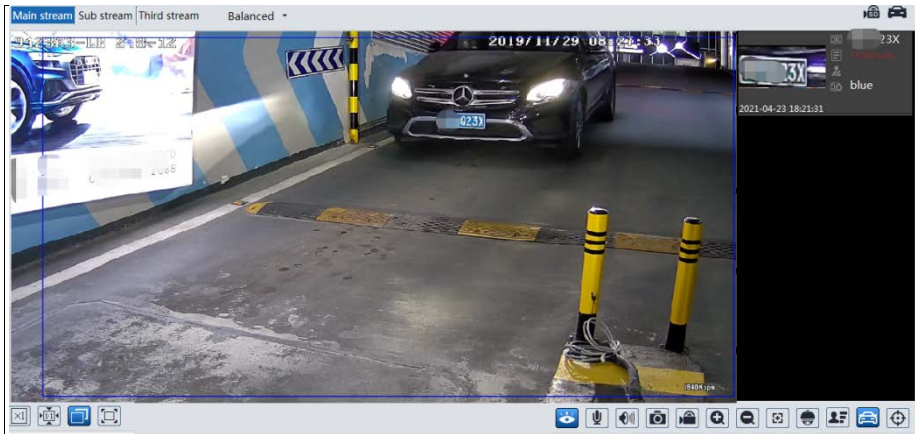

When the captured license plate is matched with the license plate of the vehicle database, the list type will be displayed under the license plate number. Click the matched license plate

picture, the matched details will pop up as shown below.

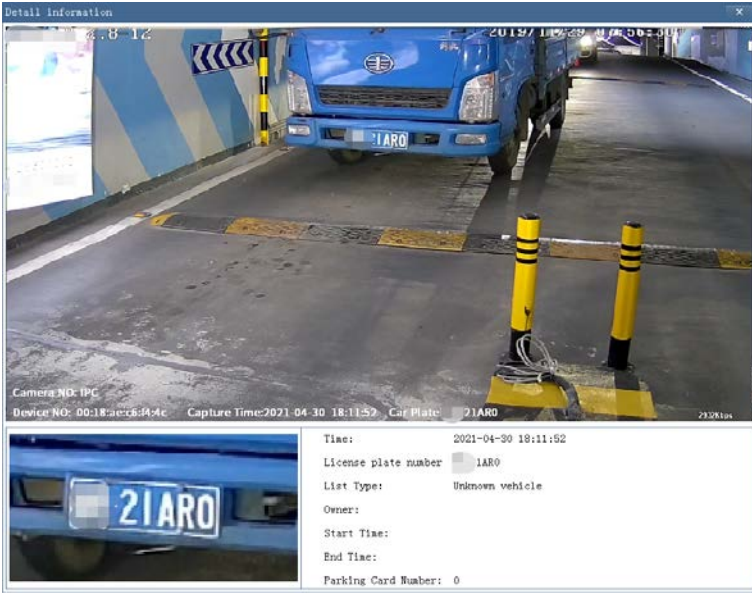


※ Configuration requirements of camera and surrounding area

- The monitoring image shall try to cover the lane, entering/exiting vehicles and these vehicles' plate number shall be always seen in the video.
- Try to avoid the objects that will block the camera, such as pillars, obstacles, doors, etc.
- Avoid the scenes with many trees or other moving objects (like humans, non-motor vehicles).
- The monitoring road shall be straight within 50 meters in front of/behind the location of the camera installation and make sure the camera points at the front or rear of the vehicle.

4.5.12 Heat Map

Heat Map is to display the flow distribution of people/vehicles in pre-defined areas by different colors.

- 1.Enable Heat Map and then set the detection target type as needed.

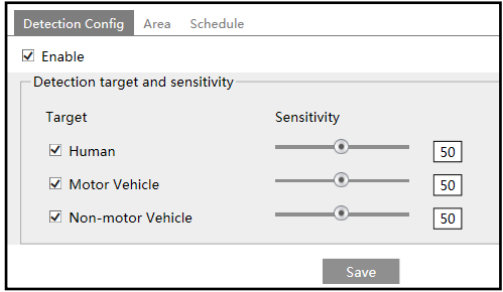

2. Set heat map display area. Up to 4 areas can be set.



Click the “Draw Area” button and then click around the area where you want to set as the alarm area in the image on the left side (the alarm area should be a closed area). Click the “Stop Draw” button to stop drawing. Click the “Clear” button to delete the alarm area. Click the “Save” button to save the settings.

3. Set the schedule of heat map. The setup steps of the schedule are the same as schedule recording setup (See [Schedule Recording](#)).

4. View the heat map data. Click Chart→Heat Map to go to the following interface. Set the start time and the end time. Click “Count” to view the heat map as shown below. The default heat map is people flow data display. Click “Motor Vehicle” or “Non-motor Vehicle” to view the corresponding data.



4.6 Network Configuration

4.6.1 TCP/IP

Go to Config→Network→TCP/IP interface as shown below. There are two ways for network connection.

IPv4	IPv6	PPPoE Config	IP Change Notification Config
<input type="radio"/> Obtain an IP address automatically			
<input checked="" type="radio"/> Use the following IP address			
IP Address	<input type="text" value="192.168.226.201"/>	<input type="button" value="Test"/>	
Subnet Mask	<input type="text" value="255.255.255.0"/>		
Gateway	<input type="text" value="192.168.226.1"/>		
Preferred DNS Server	<input type="text" value="210.21.196.6"/>		
Alternate DNS Server	<input type="text" value="8.8.8.8"/>		

Use IP address (take IPv4 for example)-There are two options for IP setup: obtain an IP address automatically by DHCP and use the following IP address. Please choose one of the options as needed.

Test: Test the effectiveness of the IP address by clicking this button.

Use PPPoE-Click the “PPPoE Config” tab to go to the interface as shown below. Enable PPPoE and then enter the user name and password from your ISP.

IPv4 IPv6 **PPPoE Config** IP Change Notification Config

Enable

User Name

Password

Save

Either method of network connection can be used. If PPPoE is used to connect internet, the camera will get a dynamic WAN IP address. This IP address will change frequently. To be notified, the IP change notification function can be used.

Click “IP Change Notification Config” to go to the interface as shown below.

IPv4 IPv6 PPPoE Config **IP Change Notification Config**

Trigger Email

Trigger FTP

Save

Trigger Email: when the IP address of the device is changed, the new IP address will be sent to the email address that has been set up.

Trigger FTP: when the IP address of the device is changed, the new IP address will be sent to FTP server that has been set up.

4.6.2 Port

Go to Config→Network→Port interface as shown below. HTTP port, Data port and RTSP port can be set.

HTTP Port

HTTPS Port

Data Port

RTSP Port

Persistent connection Port Enable

WebSocket Port

Save

HTTP Port: The default HTTP port is 80. It can be changed to any port which is not occupied.

HTTPS Port: The default HTTPSs port is 443. It can be changed to any port which is not occupied.

Data Port: The default data port is 9008. Please change it as necessary.


RTSP Port: The default port is 554. Please change it as necessary.

Persistent Connection Port: The port is used for a persistent connection of the third-party platform to push smart data, like face pictures.

WebSocket Port: Communication protocol port for plug-in free preview.

4.6.3 Server Configuration

This function is mainly used for connecting network video management system.

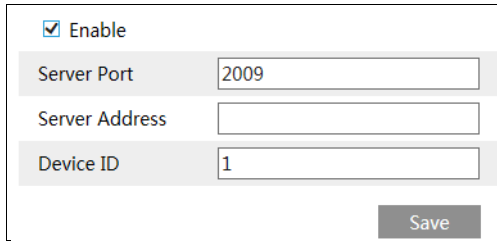

The screenshot shows a configuration window with a border. At the top left, there is a checked checkbox labeled "Enable". Below it are three input fields: "Server Port" containing the number "2009", "Server Address" which is empty, and "Device ID" containing the number "1". At the bottom right of the window is a grey button labeled "Save".


1. Check “Enable”.
2. Check the IP address and port of the transfer media server in the ECMS/NVMS. Then enable the auto report in the ECMS/NVMS when adding a new device. Next, enter the remaining information of the device in the ECMS/NVMS. After that, the system will automatically allot a device ID. Please check it in the ECMS/NVMS.
3. Enter the above-mentioned server address, server port and device ID in the corresponding boxes. Click the “Save” button to save the settings.

4.6.4 Onvif

The camera can be searched and connected to the third-party platform via ONVIF/RTSP protocol.

If “Activate Onvif User” is enabled in the device activation interface, the ONVIF user can be activated simultaneously. When you connect the camera through the ONVIF protocol in the third-party platform, you can use this onvif user to connect.

You can also add new users in the Onvif interface.

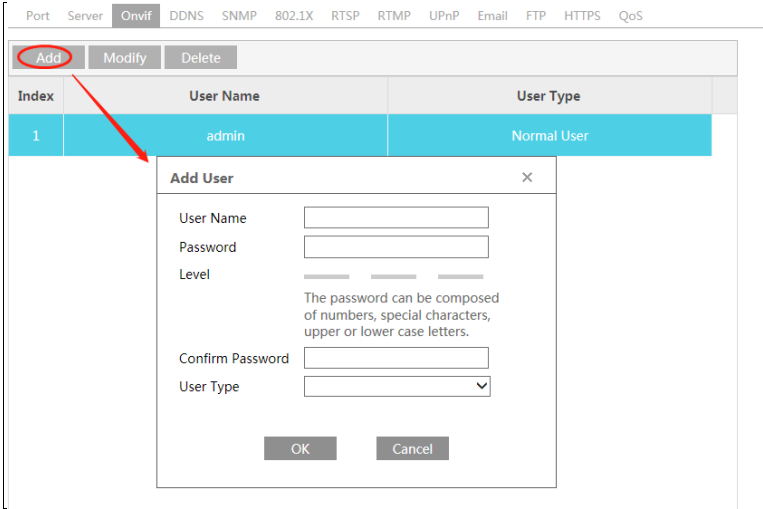


Note: when adding the device to the third-party platform with ONVIF/RTSP protocol, please enter the username and password created in the above interface.

4.6.5 DDNS


If the camera is set up with a DHCP connection, DDNS should be set for the internet.

1. Go to Config→Network→ DDNS.

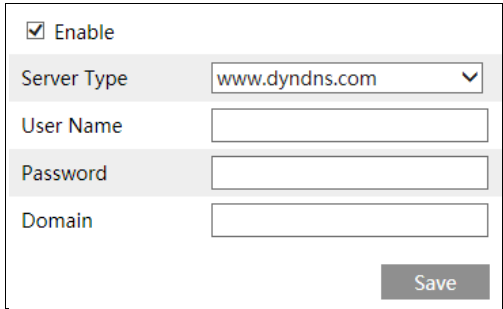

2. Apply for a domain name. Take www.dvrddns.com for example.
Enter www.dvrddns.com in the IE address bar to visit its website. Then Click the “Registration” button.

 NEW USER REGISTRATION

USER NAME	<input type="text" value="XXXX"/>
PASSWORD	<input type="password" value="•••••"/>
PASSWORD CONFIRM	<input type="password" value="•••••"/>
FIRST NAME	<input type="text" value="XXX"/>
LAST NAME	<input type="text" value="XXX"/>
SECURITY QUESTION	My first phone number. ▾
ANSWER	<input type="text" value="XXXXXXXX"/>
CONFIRM YOU'RE HUMAN	 New Captcha <input type="text"/> Enter the text you see above
<input type="button" value="Submit"/> <input type="button" value="Reset"/>	

Create domain name.

You must create a domain name to continue.

Domain name must start with (a-z, 0-9). Cannot end or start, but may contain a hyphen and is not case-sensitive.

dvrddns.com

After the domain name is successfully applied for, the domain name will be listed as below.

Search by Domain

Click a name to edit your domain settings.

NAME	STATUS	DOMAIN
654321ABC	✔	654321abc.dvrddns.com

Last Update: *Not yet updated!* IP Address: 210.21.229.139

[Create additional domain names](#)

3. Enter the username, password, domain you apply for in the DDNS configuration interface.
4. Click the “Save” button to save the settings.

4.6.6 SNMP

To get camera status, parameters and alarm information and remotely manage the camera, the SNMP function can be used. Before using SNMP, please install an SNMP management tool and set the parameters of the SNMP, such as SNMP port, trap address.

1. Go to Config→Network→SNMP.

SNMP v1/v2	
<input type="checkbox"/> Enable SNMPv1	
<input type="checkbox"/> Enable SNMPv2	
Read SNMP Community	<input type="text"/>
Write SNMP Community	<input type="text"/>
Trap Address	<input type="text" value="..."/>
Trap Port	<input type="text" value="0"/>
Trap community	<input type="text"/>
SNMP v3	
<input type="checkbox"/> Enable SNMPv3	
Read User Name	<input type="text"/>
Security Level	<input type="text" value="auth, priv"/>
Authentication Algorithm	<input checked="" type="radio"/> MD5 <input type="radio"/> SHA
Authentication Password	<input type="text"/>
Private-key Algorithm	<input checked="" type="radio"/> DES <input type="radio"/> AES
Private-key Algorithm	<input type="text"/>
Write User Name	<input type="text"/>
Security Level	<input type="text" value="auth, priv"/>
Authentication Algorithm	<input checked="" type="radio"/> MD5 <input type="radio"/> SHA
Authentication Password	<input type="text"/>
Private-key Algorithm	<input checked="" type="radio"/> DES <input type="radio"/> AES
Private-key Algorithm	<input type="text"/>
Other Settings	
SNMP Port	<input type="text" value="0"/>

2. Check the corresponding version checkbox (Enable SNMPv1, Enable SNMPv2, Enable SNMPv3) according to the version of the SNMP software that will be used.
3. Set the values for “Read SNMP Community”, “Write SNMP Community”, “Trap Address”, “Trap Port” and so on. Please make sure the settings are the same as that of the SNMP software.

Note: Please use the different version in accordance with the security level you required. The higher the version is, the higher the level of the security is.

4.6.7 802.1x

If it is enabled, the camera’s data can be protected. When the camera is connected to the network protected by the IEE802.1x, user authentication is needed.

<input checked="" type="checkbox"/> Enable
Protocol Type <input type="text" value="EAP_MD5"/>
EAPOL Version <input type="text" value="1"/>
User Name <input type="text" value="test"/>
Password <input type="password" value="•••••"/>
Confirm Password <input type="password" value="•••••"/>

To use this function, the camera shall be connected to a switch supporting 802.1x protocol. The switch can be reckoned as an authentication system to identify the device in a local network. If the camera connected to the network interface of the switch has passed the authentication of the switch, it can be accessed via the local network.

Protocol type and EAPOL version: Please use the default settings.

User name and password: The user name and password must be the same with the user name and password applied for and registered in the authentication server.

4.6.8 RTSP

Go to Config→Network→RTSP.

<input checked="" type="checkbox"/> Enable
Port <input type="text" value="554"/>
Address <input type="text" value="rtsp://IP or domain name:port/profile1"/>
<input type="text" value="rtsp://IP or domain name:port/profile2"/>
<input type="text" value="rtsp://IP or domain name:port/profile3"/>
Multicast address
Main stream <input type="text" value="239.0.0.0"/> <input type="text" value="50554"/> <input type="checkbox"/> Automatic start
Sub stream <input type="text" value="239.0.0.1"/> <input type="text" value="51554"/> <input type="checkbox"/> Automatic start
Third stream <input type="text" value="239.0.0.2"/> <input type="text" value="52554"/> <input type="checkbox"/> Automatic start
Audio <input type="text" value="239.0.0.3"/> <input type="text" value="53554"/> <input type="checkbox"/> Automatic start
<input type="checkbox"/> Allow anonymous login (No username or password required)
<input type="button" value="Save"/>

Select “Enable” to enable the RTSP function.

Port: Access port of the streaming media. The default number is 554.

RTSP Address: The RTSP address (unicast) format that can be used to play the stream in a media player.

Multicast Address

Main stream: The address format is “rtsp://IP address: rtsp port/profile1?transportmode=mcast”.

Sub stream: The address format is “rtsp://IP address: rtsp port/profile2?transportmode=mcast”.

Third stream: The address format is

“rtsp://IP address: rtsp port/profile3?transportmode=mcst”.

Audio: Having entered the main/sub stream in a VLC player, the video and audio will play automatically.

If “Allow anonymous login...” is checked, there is no need to enter the username and password to view the video.

If “auto start” is enabled, the multicast received data should be added into a VLC player to play the video.

Note:1. This camera supports local video preview through a VLC player. Enter the RTSP address (unicast or multicast, eg. rtsp://192.168.226.201:554/profile1?transportmode=mcst) in a VLC player to realize the simultaneous video preview with the web client.

- 2. The IP address mentioned above cannot be the address of IPv6.
- 3. Avoid the use of the same multicast address in the same local network.
- 4. When playing the video through the multicast streams in a VLC player, please pay attention to the mode of the VLC player. If it is set to TCP mode, the video cannot be played.
- 5. If the coding format of the video of the main stream is MJPEG, the video may be disordered at some resolutions.

4.6.9 RTMP

You can access the third-party (like YouTube) to realize video live view through RTMP protocol.

Go to Config→Network→RTMP.

Enable (Only supports H264)

Stream Type: Main stream Sub stream Third stream

Reconnect After Timeout: Second

Server Address:

Connection Status:

Check “Enable”, select stream type, set the reconnection time after timeout and server address as needed.

Server address: Enter the server address allocated by the third party server.

After that, click “Save” to save the settings. Then click “Refresh” to view the connection status.

4.6.10 UPNP

If this function is enabled, the camera can be quickly accessed through the LAN.

Go to Config→Network→UPnP. Enable UPnP and then enter UPnP name.

Enable

UPnP Name

4.6.11 Email

If you need to trigger Email when an alarm happens or IP address is changed, please set the Email here first.

Go to Config→Network →Email.

Sender

Sender Address

User Name Anonymous Login

Password

Server Address

Secure Connection ▼

SMTP Port

Send Interval(S) (10-3600)

Recipient

Recipient Address

Sender Address: sender’s e-mail address.

User name and password: sender’s user name and password (you don’t have to enter the username and password if “Anonymous Login” is enabled).

Server Address: The SMTP IP address or host name.

Select the secure connection type at the “Secure Connection” pull-down list according to what’s required.

SMTP Port: The SMTP port.

Send Interval(S): The time interval of sending email. For example, if it is set to 60 seconds and multiple motion detection alarms are triggered within 60 seconds, they will be considered as only one alarm event and only one email will be sent. If one motion alarm event is triggered and then another motion detection alarm event is triggered after 60 seconds, two emails will be sent. When different alarms are triggered at the same time, multiple emails will be sent separately.


Click the “Test” button to test the connection of the account.

Recipient Address: receiver’s e-mail address.

4.6.12 FTP

After an FTP server is set up, captured pictures from events will be uploaded to the FTP server.

1. Go to Config→Network →FTP.

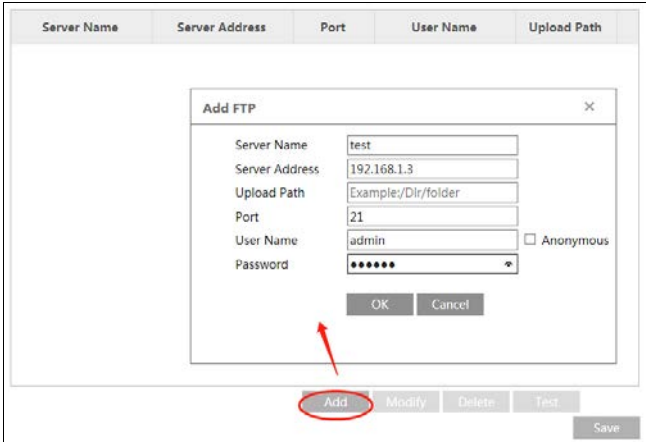

2. Click “Add” to add the information of the FTP. After that, click “Save” to save the settings.

Server Name: The name of the FTP server.


Server Address: The IP address or domain name of the FTP.

Upload Path: The directory where files will be uploaded to.

Port: The port of the FTP server.

User Name and Password: The username and password that are used to login to the FTP server.

3. In the event setting interface (like intrusion, line crossing, etc.), trigger FTP as shown below.

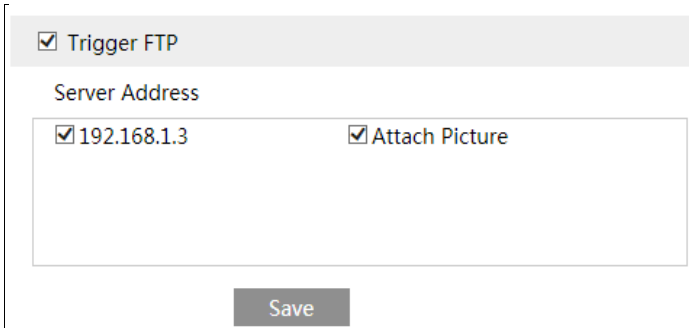

Please refer to [4.1.4 Storage-Snapshot Setting](#) for the parameter settings of the sending snapshots

Rule of FTP storage path: /device MAC address/event type/date/time/

For example: a face detection alarm occurs

FTP file path : \00-18-ae-a8-da-2a\VFD\2021-01-09\14\

Event name table:

File Name	Event Type
IP	IP address change
MOTION	Motion Detection
SENSOR	Sensor Alarm
TRIPWIRE	Line Crossing Detection
PERIMETER	Region Intrusion Detection
OSC	Object Left/Missing
AVD	Video Exception
CDD	Crowd Density Detection
VFD	Face Recognition
VEHICE	License Plate Recognition
AOIENTRY	Region Entering
AOILEAVE	Region Exiting
PASSLINECOUNT	Target Counting by Line Crossing
TRAFFIC	Target Counting by Region Intrusion
SDFULL	SD Full
SDERROR	SD Error

Jpg image naming rule:

Event type_Year(4digits)-Month(2digits)-Day(2 digits)-Hour(2 digits)-Minute(2 digits)-Second(2 digits)-Millisecond(3 digits)_index(3digits).jpg

Description:

1. Event type: refers to the above table.
2. Zero shall be added if the digits are insufficient.

For example: MOTION_2021-03-16-16-20-07-529_032.jpg

Txt file naming rule:

Event type_Year(4digits)-Month(2digits)-Day(2 digits)-Hour(2 digits)-Minute(2 digits)-Second(2 digits)-Millisecond(3 digits)_index(3digits).txt

TXT file content:

device name: xxx mac: device MAC address Event Type time:


For example: device name: IPC mac: 00-18-ae-a8-da-2a MOTION time: 2021-03-16 12:20:07

Correspondence between txt file and jpeg file: the index of the txt file and jpeg file will be named as the same when the event is triggered each time.

4.6.13 HTTPS

HTTPS provides authentication of the web site and protects user privacy.

Go to Config →Network→HTTPS as shown below.

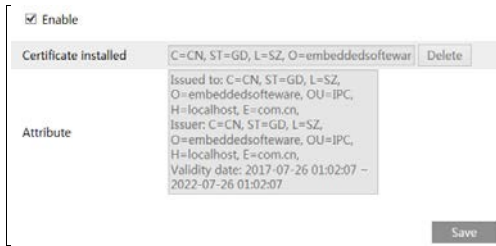

There is a certificate installed by default as shown above. Enable this function and save it. Then the camera can be accessed by entering https://IP: https port via the web browser (eg. https://192.168.226.201:443).

A private certificate can be created if users don't want to use the default one. Click "Delete" to cancel the default certificate. Then the following interface will be displayed.



- * If there is a signed certificate, click "Browse" to select it and then click "Install" to install it.
- * Click "Create a private certificate" to enter the following creation interface.

Enable

Installation type

Have signed certificate, install directly

Create a private certificate

Create a certificate request

Create a private certificate

Click the “Create” button to create a private certificate. Enter the country (only two letters available), domain (camera’s IP address/domain), validity date, password, province/state, region and so on. Then click “OK” to save the settings.

* Click “Create a certificate request” to enter the following interface.

Enable

Installation type

Have signed certificate, install directly

Create a private certificate

Create a certificate request

Create a certificate request

Click “Create” to create the certificate request. Then download the certificate request and submit it to the trusted certificate authority for signature. After receiving the signed certificate, import the certificate to the device.

4.6.14 QoS

QoS (Quality of Service) function is used to provide different quality of services for different network applications. With the deficient bandwidth, the router or switch will sort the data streams and transfer them according to their priority to solve the network delay and network congestion by using this function.

Go to Config→Network→QoS.

Video/Audio DSCP	<input type="text" value="13"/>
Alarm DSCP	<input type="text" value="35"/>
Manager DSCP	<input type="text" value="53"/>

Video/Audio DSCP: The range is from 0 to 63.

Alarm DSCP: The range is from 0 to 63.

Manager DSCP: The range is from 0 to 63.

Generally speaking, the larger the number is, the higher the priority is.

4.7 Security Configuration

4.7.1 User Configuration

Go to Config→Security→User interface as shown below.

Add Modify Delete Safety Question		
Index	User Name	User Type
1	admin	Administrator

Add user:

1. Click the “Add” button to pop up the following textbox.

Add User
✕

User Name

Password

Level

The password can be composed of numbers, special characters, upper or lower case letters.

Confirm Password

User Type

Select All

Remote storage settings

Remote image settings

Remote PTZ control

Remote alarm server configuration

Remote intelligent event configuration

Remote network advanced configuration

Remote security management

OK
Cancel

2. Enter user name in “User Name” textbox.

3. Enter the password in the “Password” and “Confirm Password” textbox. Please set the password according to the requirement of the password security level (Go to Config→Security→Security Management→Password Security interface to set the security level).

4. Choose the user type and select the desired user permissions.

5. Click the “OK” button and then the newly added user will be displayed in the user list.

Modify user:

1. Select a user to modify password in the user configuration list box.

2. The “Edit user” dialog box pops up by clicking the “Modify” button.

Edit User
✕

User Name

Old Password

New Password

Level

The password can be composed of numbers, special characters, upper or lower case letters.

Confirm Password

User Type

Select All

Remote storage settings

Remote image settings

Remote PTZ control

Remote alarm server configuration

Remote intelligent event configuration

Remote network advanced configuration

Remote security management

OK
Cancel

Admin can modify its password and change the user type and permission of other users here. Other users only can modify their password in this interface.

Delete user:

1. Select the user to be deleted in the user configuration list box.
2. Click the “Delete” button to delete the user.

Note: The default administrator account cannot be deleted.

Safety Question

You can set the safety questions and answers here for the default admin user.

4.7.2 Online User


Go to Config→Security→Online User to view the user who is viewing the live video.

Index	Client Address	Port	User Name	User Type	
1	192.168.17.232	55760	admin	Administrator	<input type="button" value="Kick Out"/>

An administrator user can kick out all the other users (including other administrators).

4.7.3 Block and Allow Lists

Go to Config→Security→Block and Allow Lists as shown below.

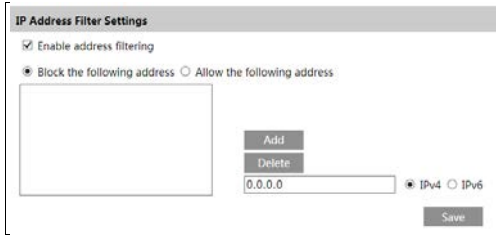


The setup steps are as follows:

Check the “Enable address filtering” check box.

Select “Block/Allow the following address”, IPv4/IPv6 and then enter IP address in the address box and click the “Add” button.

4.7.4 Security Management

Go to Config→Security→Security Management as shown below.

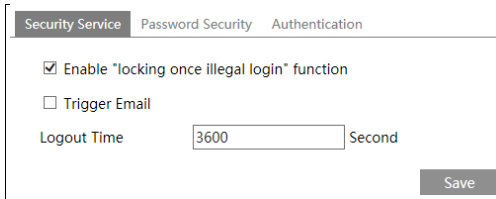


In order to prevent against malicious password unlocking, “locking once illegal login” function can be enabled here. If this function is enabled, login failure after trying five times will make the login interface locked. The camera can be logged in again after a half hour or after the camera reboots.

Trigger Email: if enabled, e-mail will be sent when logging in/out or illegal login lock occurs.

Logout time: Set the logout time as needed. For example: 3600s, you will be automatically logged out after 3600s and then you need to enter the username and password again to log in.

● Password Security

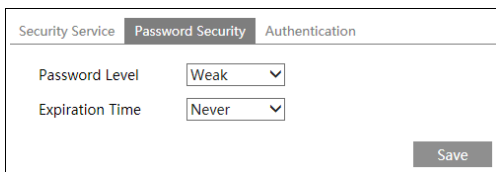

Please set the password level and expiration time as needed.

Password Level: Weak, Medium or Strong.

Weak level: Numbers, special characters, upper or lower case letters can be used. You can choose one of them or any combination of them when setting the password.

Medium Level: 8~16 characters, including at least two of the following categories: numbers, special characters, upper case letters and lower case letters.

Strong Level: 8~16 characters. Numbers, special characters, upper case letters and lower case letters must be included.

For your account security, it is recommended to set a strong password and change your password regularly.

HTTP Authentication: Basic or Token is selectable.

Security Service Password Security Authentication

HTTP Authentication Basic

Save

4.8 Maintenance Configuration

4.8.1 Backup and Restore

Go to Config→Maintenance→Backup & Restore.

The screenshot displays a web-based configuration interface for a network camera, organized into four distinct sections:

- Import Setting:** Features a text input field for "Path" with a "Browse" button to its right, and a dark grey button labeled "Import Setting" centered below the field.
- Export Settings:** Contains a single dark grey button labeled "Export Settings" centered in the section.
- Run Log Config:** Includes a checkbox for "Enable", a "Log Level" input field with the value "6", and a "File Size" input field with the value "1024". Below these fields are two dark grey buttons: "Save" and "Export".
- Default Settings:** Shows a "Keep" label followed by a list of three items, each with an unchecked checkbox: "Network Config", "Security Configuration", and "Image Configuration". A dark grey button labeled "Load Default" is positioned at the bottom of this section.

● **Import & Export Settings**

Configuration settings of the camera can be exported from a camera into another camera.

1. Click "Browse" to select the save path for import or export information on the PC.
2. Click the "Import Setting" or "Export Setting" button.

Note: The login password needs to be entered after clicking the "Import Setting" button.

● **Running Log Settings**

After enabling it, select the log level and file size and click "Save". Then the system will collect logs accordingly. When the device error occurs, you can export these logs and send them to the technician to find out the problem.

● **Default Settings**

Click the "Load Default" button and then verify the password to restore all system settings to the default factory settings except those you want to keep.

4.8.2 Reboot

Go to Config→Maintenance→Reboot.

Click the “Reboot” button and then enter the password to reboot the device.

Timed Reboot Setting:

If necessary, the camera can be set up to reboot on a time interval. Enable “Time Settings”, set the date and time, click the “Save” button and then enter the password to save the settings.

4.8.3 Upgrade

Go to Config→Maintenance→Upgrade. In this interface, the camera firmware can be updated.

The screenshot shows a web interface titled "Local upgrade". It contains a text input field labeled "Path" with a cursor inside. To the right of the input field are two buttons: "Browse" and "Upgrade".

1. Click the “Browse” button to select the save path of the upgrade file
2. Click the “Upgrade” button to start upgrading the firmware.
3. Enter the correct password and then the device will restart automatically

Caution! Do not close the browser or disconnect the camera from the network during the upgrade.

4.8.4 Operation Log

To query and export log:

1. Go to Config→Maintenance→Operation Log.

The screenshot shows the "Operation Log" interface. At the top, there are filters for "Main Type" (set to "Operation") and "Sub Type" (set to "Log in"). Below these are "Start Time" (2021-05-08 00:00:00) and "End Time" (2021-05-08 23:59:59) fields, along with "Search" and "Export" buttons. The main part of the interface is a table with the following data:

Index	Time	Main Type	Sub Type	User Name	Login IP	Hostname
1	2021-05-08 10:49:30	Operation	Log in	admin	10.20.52.7	
2	2021-05-08 10:06:33	Operation	Log in	admin	10.20.52.7	


2. Select the main type, sub type, start and end time.
3. Click “Search” to view the operation log.
4. Click “Export” to export the operation log.


5.1 Image Search


Click Search to go to the interface as shown below. Images that are saved on the SD card or saved locally to the PC can be found here.


● Local Image Search

1. Choose “Picture”—“Local”.

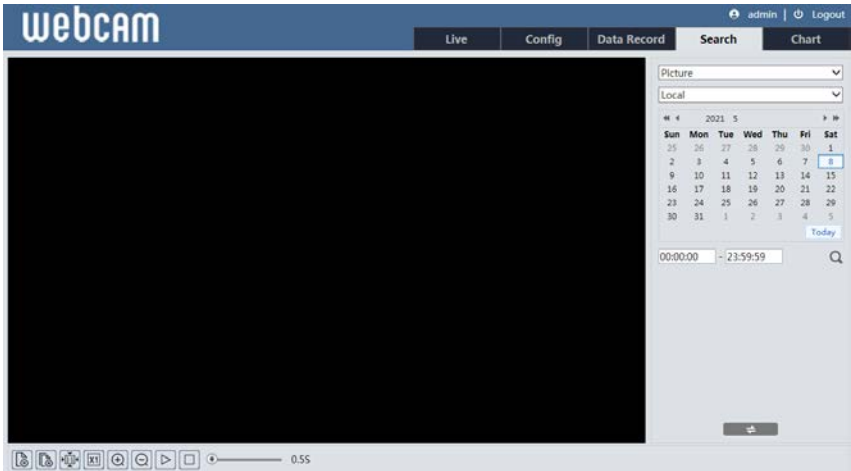

2. Set time: Select date and choose the start and end time.
3. Click  to search the images.
4. Double click a file name in the list to view the captured photos as shown above.

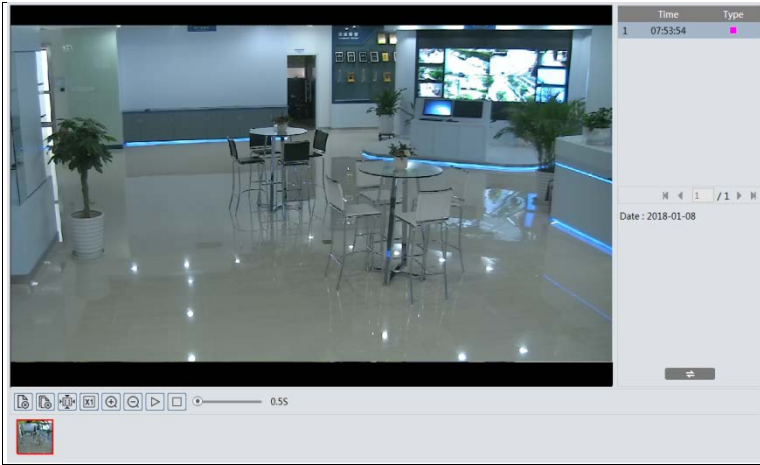




Click  to return to the previous interface.

Note: When using the plug-in free browser, the local images cannot be searched.

● **SD Card Image Search**

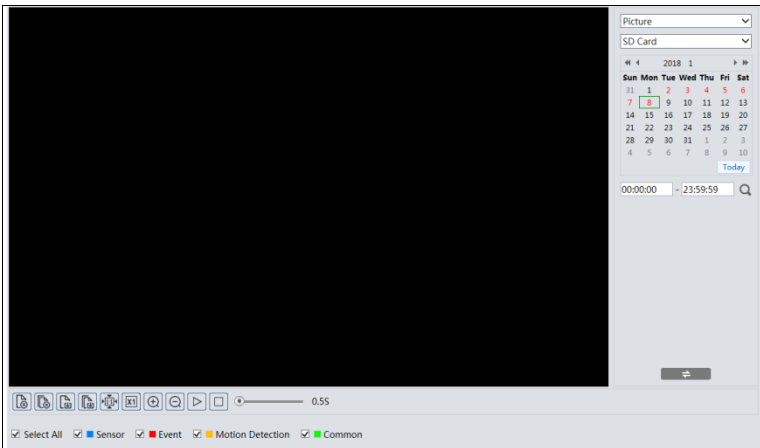1. Choose “Picture”—“SD Card”.



2. Set time: Select date and choose the start and end time.
 3. Choose the alarm events at the bottom of the interface.
 4. Click  to search the images.
 5. Double click a file name in the list to view the captured photos.
- Click  to return to the previous interface.


The descriptions of the buttons are shown as follows.

Icon	Description	Icon	Description
	Close: Select an image and click this button to close the image.		Close all: Click this button to close all images.
	Save: Click this button to select the path for saving the image on the PC.		Save all: Click this button to select the path for saving all pictures on the PC.
	Fit size: Click to fit the image on the screen.		Actual size: Click this button to display the actual size of the image.
	Zoom in: Click this button to digitally zoom in.		Zoom out: Click this button to digitally zoom out.
	Slide show play: Click this button to start the slide show mode.		Stop: Click this button to stop the slide show.
	Play speed: Play speed of the slide show.		

5.2 Video Search





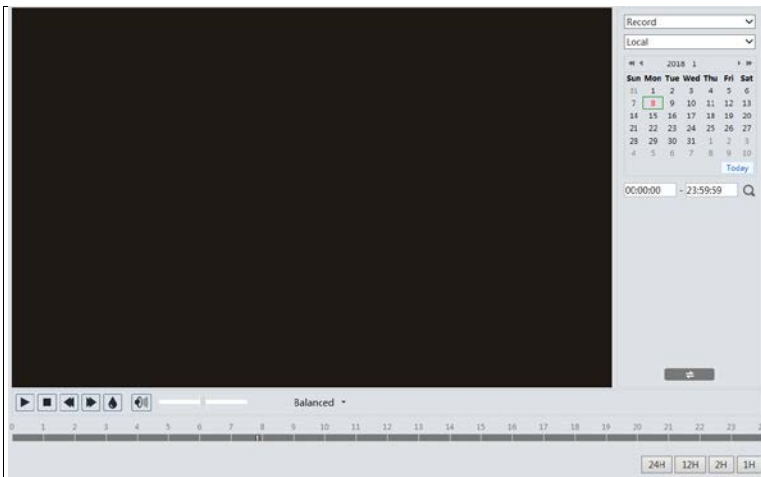


5.2.1 Local Video Search

Click Search to go to the interface as shown below. Videos were recorded locally to the PC can be played in this interface.



1. Choose “Record”—“Local”.
2. Set search time: Select the date and choose the start and end time.
3. Click to search the images.
4. Double click on a file name in the list to start playback.




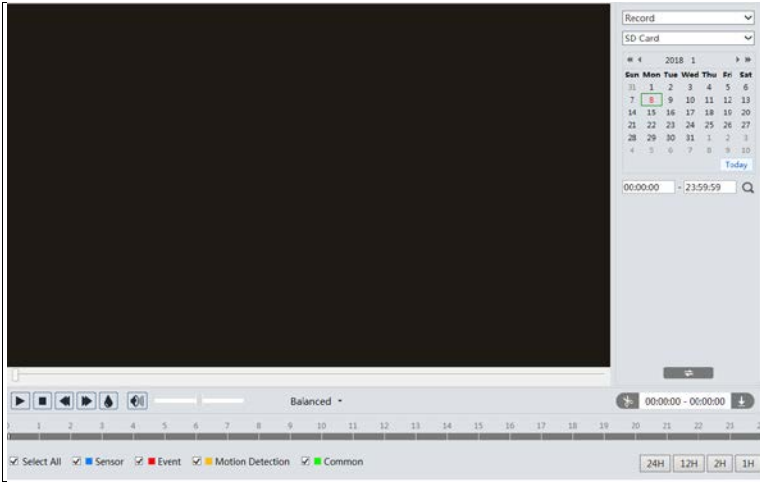
Icon	Description	Icon	Description
	Play button. After pausing the video, click this button to continue playing.		Pause button
	Stop button		Speed down
	Speed up		Watermark display
	Enable / disable audio; drag the slider to adjust the volume after enabling audio.		

Note: When using the plug-in free browser, the local videos cannot be searched.


5.2.2 SD Card Video Search

Click Search to go to the interface as shown below. Videos that were recorded on the SD card can be played in this interface.

1. Choose “Record”—“SD Card”.
2. Set search time: Select the date and choose the start and end time.
3. Click  to search the images.



4. Select the alarm events at the bottom of the interface.
5. Select mix stream (video and audio stream) or video stream as needed.
6. Double click on a file name in the list to start playback.

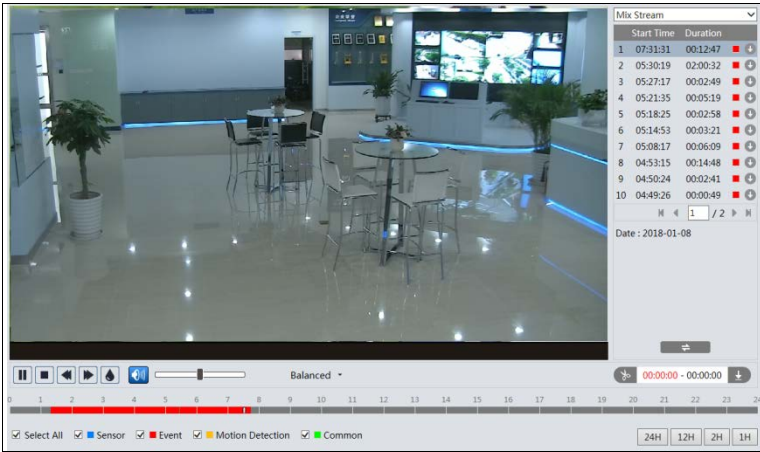





Note: ◀ and ▶ cannot be displayed in the above interface via the plug-in free browser. Additionally, for plug-in free playback, playback mode switch (balanced/real-time/fluent mode) and downloading functions are not supported too.

The time table can be shown in 24H/12H/2H/1H format by clicking the corresponding buttons.

Video clip and downloading

1. Search the video files according to the above mentioned steps.

- 2. Select the start time by clicking on the time table.
- 3. Click  to set the start time and then this button turns blue ().
- 4. Select the end time by clicking on the time table. Then click  to set the end time.
- 5. Click  to download the video file in the PC.

Index	Process	Record	Start Time	End Time	Path	Operate
1	100%	Cut	2018-01-16 01:1...	2018-01-16 01:1...	Favorites	<input type="button" value="Open"/>


D:\Favorites

- Click “Set up” to set the storage directory of the video files.
- Click “Open” to play the video.
- Click “Clear List” to clear the downloading list.
- Click “Close” to close the downloading window.

6 Face & Plate Recognition Result Search

6.1 Face Recognition Result Search

Click Data Record→Face Log tab to go to the face recognition result search interface. Set the start time and end time and click “Search” to view the face recognition result.

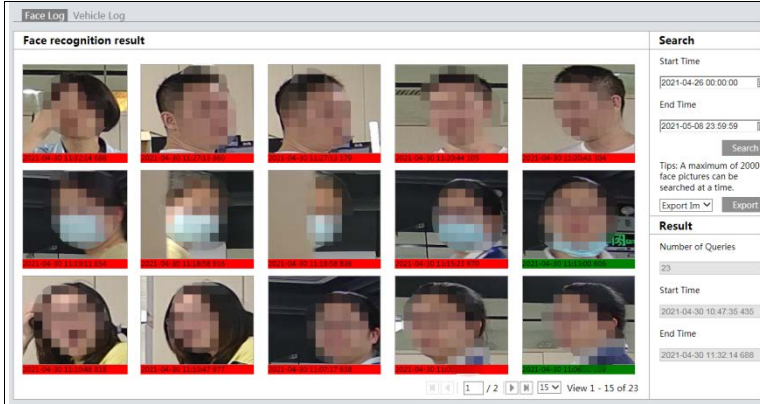

Red time tag means no comparison result. Green time tag means there is a comparison result. Click the picture with green time tag and then the face comparison information can be viewed as shown below.



6.2 License Plate Recognition Result Search

Click Data Record→Vehicle Log tab to go to the license plate recognition result search interface.

Set the start time and end time and click “Search” to view the license plate recognition result. You can also filter the plate number by selecting the list type or entering the desired license plate number.



Please export image and file as needed. Click the searched license plate picture to view the original picture.



Appendix 1 Troubleshooting

How to find the password?

A: The password for *admin* can be reset through “Edit Safety Question” function.

Click “Forget Password” in the login window and then enter the corresponding answer of the selected question in the popup window. After you correctly answer all questions, you can reset the password for *admin*. If you forget the answer of the question, this way will be invalid, please contact your dealer for help.

B: The passwords of other users can be reset by *admin*.

Fail to connect devices through IE browser.

A: Network is not well connected. Check the connection and make sure it is connected well.

B: IP address is not available. Reset the IP address.

C: Web port number has been changed: contact administrator to get the correct port number.

D: Exclude the above reasons. Restore to default setting by IP-Tool.


IP tool cannot search devices.

It may be caused by the anti-virus software in your computer. Please exit it and try to search device again.

IE cannot download ActiveX control.

A. IE browser may be set up to block ActiveX. Follow the steps below.

① Open IE browser and then click Tools-----Internet Options.

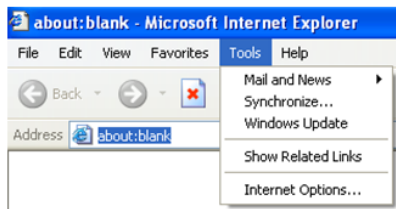


② Select Security-----Custom Level....

③ Enable all the options under “ActiveX controls and plug-ins”.

④ Click OK to finish setup.

B. Other plug-ins or anti-virus blocks ActiveX. Please uninstall or close them.

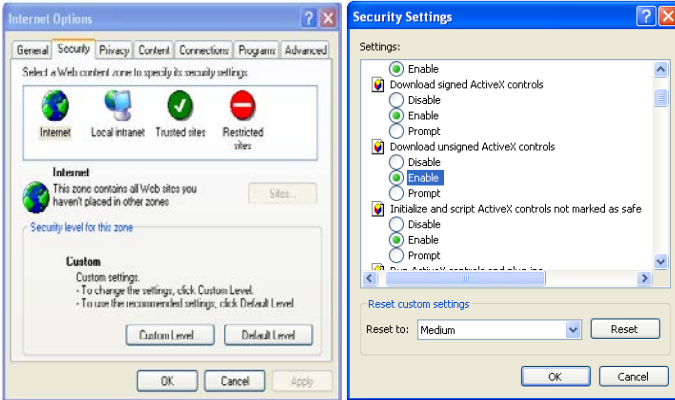


No sound can be heard.

A: Audio input device is not connected. Please connect and try again.

B: Audio function is not enabled at the corresponding channel. Please enable this function.

How to modify IP address through IP-Tool?

A: After you install the IP-Tool, run it as shown below.

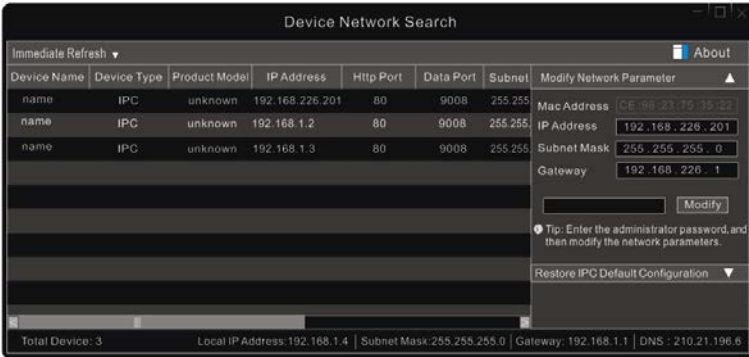

The default IP address of this camera is 192.168.226.201. Click the information of the camera listed in the above table to show the network information on the right hand. Modify the IP address and gateway of the camera and make sure its network address is in the same local network segment as the computer's. Please modify the IP address of your device according to the practical situation.

Modify Network Parameter ▲

Mac Address CE :98 :23 :75 :35 :22

IP Address 192 .168 . 1 .201

Subnet Mask 255 .255 .255 .0

Gateway 192 .168 . 1 .1

••••• Modify

For example, the IP address of your computer is 192.168.1.4. So the IP address of the camera shall be changed to 192.168.1.X. After modification, please enter the password of “admin” which is set in the device activation interface in advance and then click the “Modify” button to change the network parameters.