




Quick Installation Guide


Wi-Fi 6 3000Mbps Indoor Mesh Wi-Fi

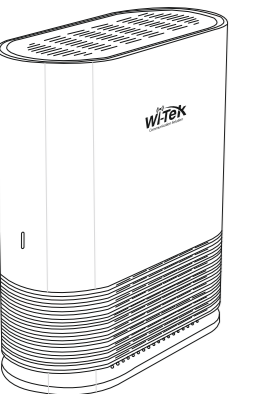


Wi-AX3000M

www.wireless-tek.com


1. Packing Content

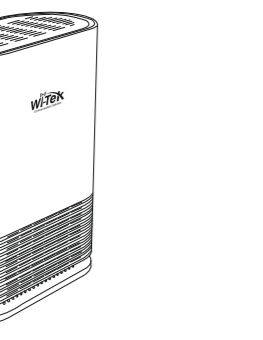

Mesh Wi-Fi x 1

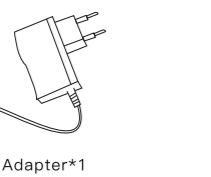

Power Adapter*1

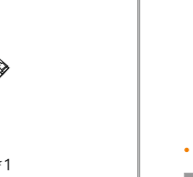

Ethernet Cable*1





Quick Installation Guide*1

2. Overview

For WI-AX3000M

• Side Panel

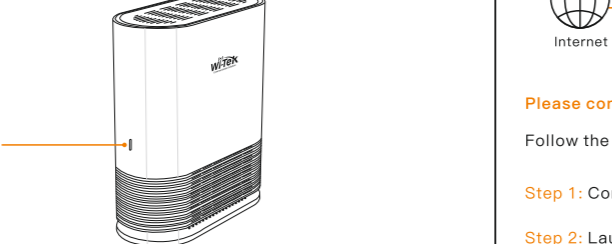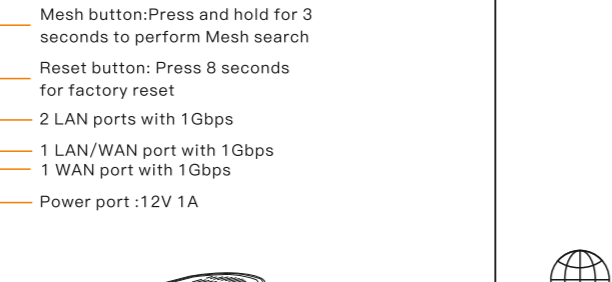


• Port and Button

Port&Button	Description
RESET	Reset button, which is used to restore the factory. Holding down the reset button for 8 seconds to revert to factory settings
WAN	10/100/1000Mbps Base-T Ethernet Port, which is connected to ISP modem for Internet access
LAN	10/100/1000Mbps Base-T Ethernet port, which is generally connected to wired LAN devices such as PC

• LED Indicator

LED indicators	Status	Description
MESH	Red Blinking	System upgrade or restart
	Green On	Normal system operation
	Blue Fast Blinking	The Mesh link is being established
	Blue On	The Mesh link has been established
	Blue Slow Blinking	The Mesh signal is poor or the Mesh link is disconnected

3. Set up the Router

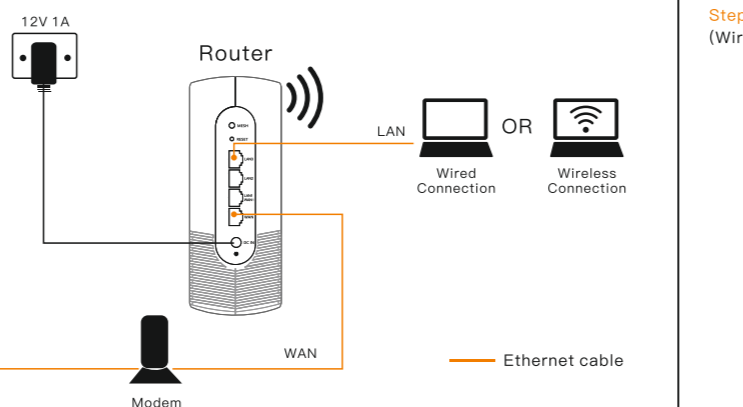

Please connect devices according to the above topology.

Follow the steps for quick Router configuration, using initial setup wizard:


Step 1: Connect your PC to router via Ethernet or Wireless

Step 2: Launch your web browser then enter in the address bar and specify the default login key: admin.




3. Set up the Router


Step 3: After going into the Configuration UI, please choose the working mode. (Wireless Router Mode is default mode)

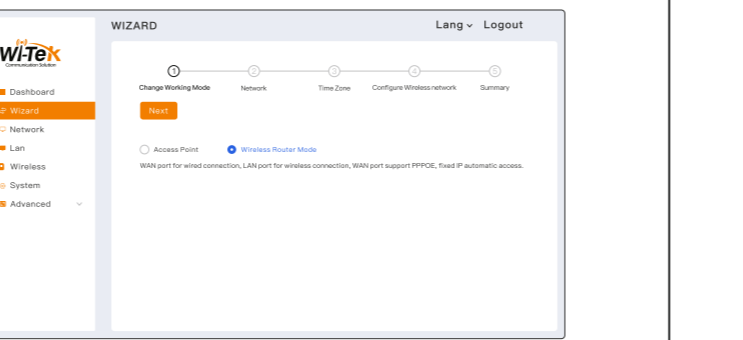

Step 4: Choose the type of Internet connections(the default WAN type is DHCP mode)

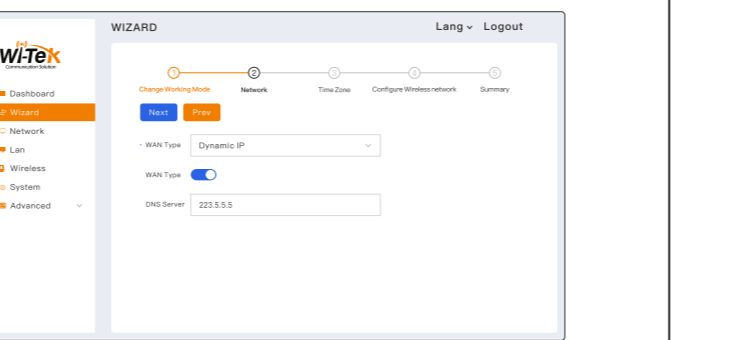


4. Adding Mesh node

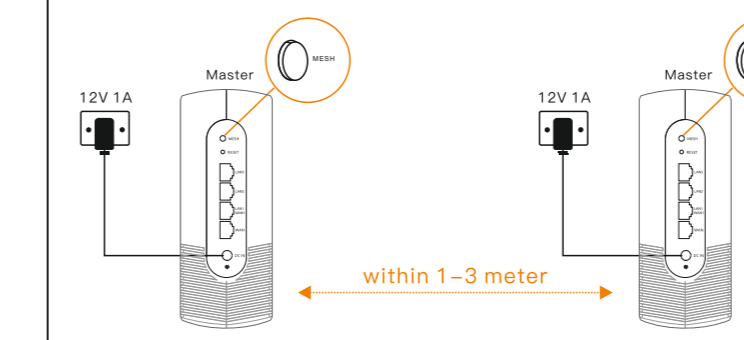


1. Power on mesh devices and short press the mesh button of the master node for 3 seconds until it blinks.

2. Wait for 1 minutes and then mesh indicators of mesh devices both turns solid blue, which shows successful connections.


Step 5: Setup the Time Zone

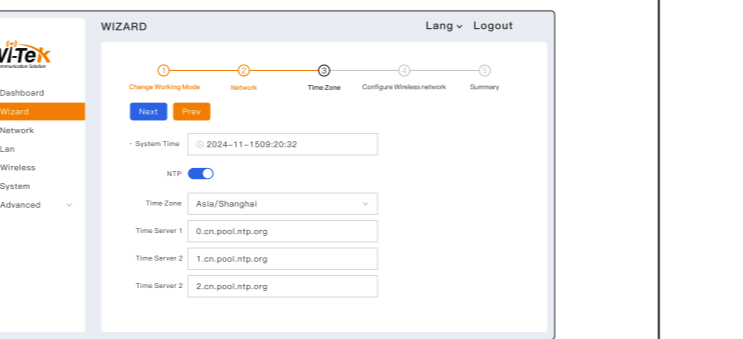

Step 6: Modify the SSID and Wi-Fi key you want.

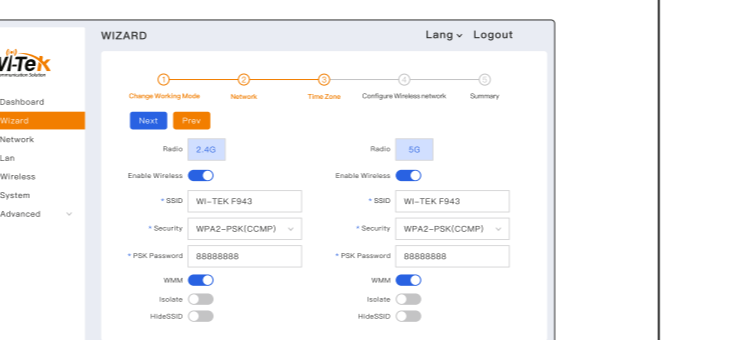


Step 7: Check if your setup is true. If yes, please click confirm.

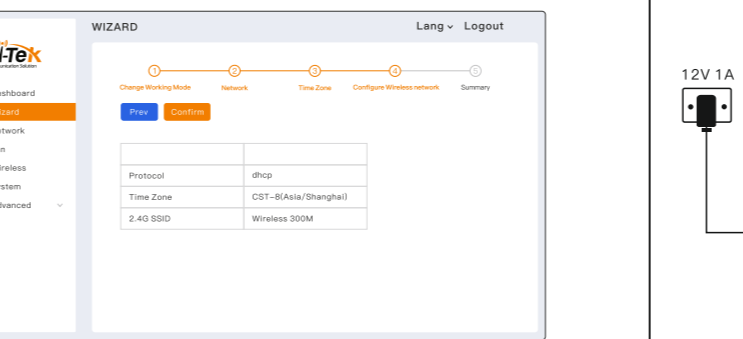


5.Quick Setup Wizard on Wi-Tek Cloud APP

• 1.Go in the APP UI as followings and then create a EasyMesh network project.

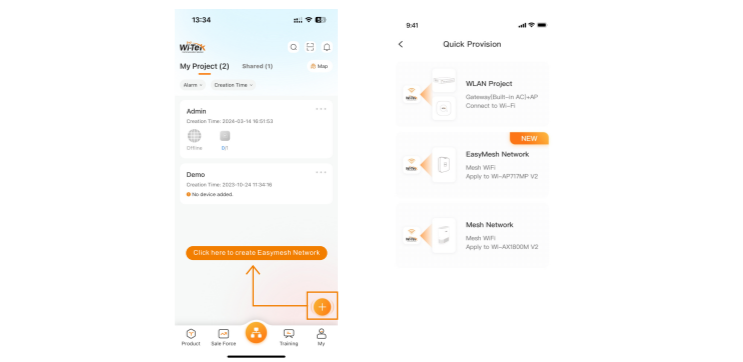


• 2.Please follow steps as followings : Power on your Mesh device and connect it to the Internet, then restore it to the factory.

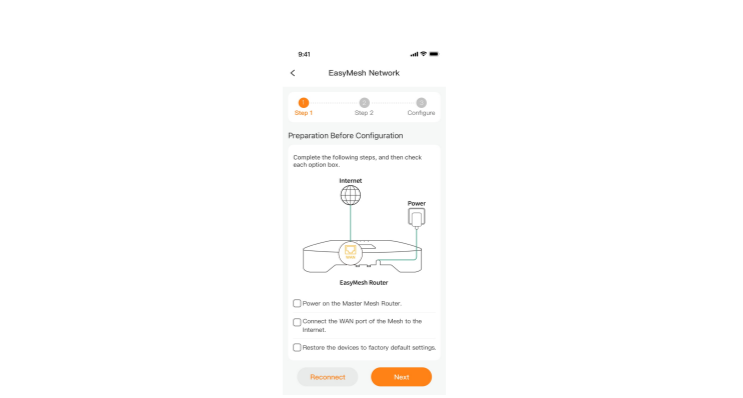


• 3.Connect your phone to Wi-Fi

Note: The initial SSID is starting with "WI-TEK_XXXX" and the default password is 88888888.

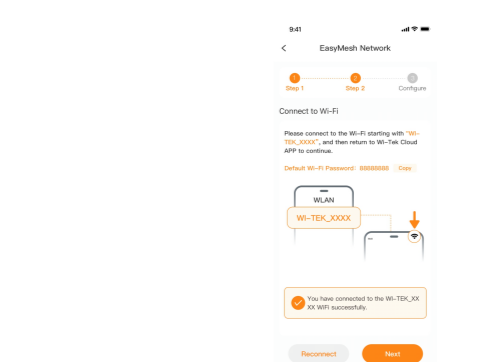

• 4.After completing the steps above, you can configure your network.

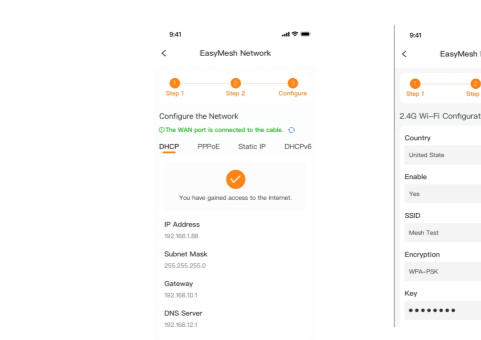

• 5.Setup Complete

After finishing configuring the network, your Mesh network is now up.

Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

- If the product defects within the warranty period, we will provide professional maintenance service.
- Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.
- Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card loss will disqualify the product from limited warranty.



Technical Support Company Website Cloud Management

Wireless-Tek Technology Limited
 Address: Building 3, Units 1801-1807, 1812, Huaqiang Era Plaza, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen City, Guangdong Province, China.
 Website: www.wireless-tek.com
 Tel: 86-0755-32811290
 Email: sales@wireless-tek.com
 Technical Support: tech@wireless-tek.com

