

DS-K1F600U-D6E Series Enrollment Station

User Manual

Legal Information

©2020 Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

About this Manual

The Manual includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of this Manual at the Hikvision website (<u>https://</u>

www.hikvision.com/).

Please use this Manual with the guidance and assistance of professionals trained in supporting the Product.

Trademarks

HIKVISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.

Other trademarks and logos mentioned are the properties of their respective owners.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS MANUAL AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

Data Protection

During the use of device, personal data will be collected, stored and processed. To protect data, the development of Hikvision devices incorporates privacy by design principles. For example, for device with facial recognition features, biometrics data is stored in your device with encryption method; for fingerprint device, only fingerprint template will be saved, which is impossible to reconstruct a fingerprint image.

As data controller, you are advised to collect, store, process and transfer data in accordance with the applicable data protection laws and regulations, including without limitation, conducting security controls to safeguard personal data, such as, implementing reasonable administrative and physical security controls, conduct periodic reviews and assessments of the effectiveness of your security controls.

Available Model

Product Name	Model	Description
Enrollment Station	DS-K1F600U-D6E	Supports enroll face and card No.
	DS-K1F600U-D6E-F	Supports enroll face, fingerprint, and card No.

Use only power supplies listed in the user instructions:

Model	Manufacturer	Standard
ADS-26FSG-12 12018EPB	SHENZHEN HONOR ELECTRONIC CO LTD	РВ
ADS-26FSG-12 12018EPI-01	SHENZHEN HONOR ELECTRONIC CO LTD	PI
ADS-26FSG-12 12018EPCU	SHENZHEN HONOR ELECTRONIC CO LTD	PCU
ADS-26FSG-12 120EPG	SHENZHEN HONOR ELECTRONIC CO LTD	PG
MSA-C1500IC12.0-18P-BR	MOSO Power Supply Technology Co., Ltd	PBR

Regulatory Information

FCC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC compliance: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.

2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see:www.recyclethis.info

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into Dangers and Cautions:

Dangers: Neglecting any of the warnings may cause serious injury or death.

Cautions: Neglecting any of the cautions may cause injury or equipment damage.

\triangle	\triangle
	Cautions: Follow these precautions to prevent potential injury or material damage.

A Danger:

- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- 1. This equipment is not suitable for use in locations where children are likely to be present.
 - 2. CAUTION: Risk of explosion if the battery is replaced by an incorrect type.

3. Improper replacement of the battery with an incorrect type may defeat a safeguard (for example, in the case of some lithium battery types).

4. Do not dispose of the battery into fire or a hot oven, or mechanically crush or cut the battery, which may result in an explosion.

5. Do not leave the battery in an extremely high temperature surrounding environment, which may result in an explosion or the leakage of flammable liquid or gas.

6. Do not subject the battery to extremely low air pressure, which may result in an explosion or the leakage of flammable liquid or gas.

- 7. Dispose of used batteries according to the instructions.
- This equipment is not suitable for use in locations where children are likely to be present.
- Never place the equipment in an unstable location. The equipment may fall, causing serious personal injury or death.
- To prevent possible hearing damage, do not listen at high volume levels for long periods.
- All the electronic operation should be strictly compliance with the electrical safety regulations, fire prevention regulations and other related regulations in your local region.
- Please use the power adapter, which is provided by normal company. The power consumption cannot be less than the required value.
- Do not connect several devices to one power adapter as adapter overload may cause over-heat or fire hazard.
- Please make sure that the power has been disconnected before you wire, install or dismantle the device.
- When the product is installed on wall or ceiling, the device shall be firmly fixed.

- If smoke, odors or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.
- Do not ingest battery, Chemical Burn Hazard. This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
 Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the device yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)

A Cautions:

- No naked flame sources, such as lighted candles, should be placed on the equipment.
- The USB port of the equipment is used for connecting to a mouse, a keyboard, or a USB flash drive only.
- The serial port of the equipment is used for debugging only.
- Keep upside when moving or using the equipment.
- Do not drop the device or subject it to physical shock, and do not expose it to high electromagnetism radiation. Avoid the equipment installation on vibrations surface or places subject to shock (ignorance can cause equipment damage).
- Do not place the device in extremely hot (refer to the specification of the device for the detailed operating temperature), cold, dusty or damp locations, and do not expose it to high electromagnetic radiation.
- The device cover for indoor use shall be kept from rain and moisture.
- Exposing the equipment to direct sun light, low ventilation or heat source such as heater or radiator is forbidden (ignorance can cause fire danger).
- Do not aim the device at the sun or extra bright places. A blooming or smear may occur otherwise (which is not a malfunction however), and affecting the endurance of sensor at the same time.
- Please use the provided glove when open up the device cover, avoid direct contact with the device cover, because the acidic sweat of the fingers may erode the surface coating of the device cover.
- Please use a soft and dry cloth when clean inside and outside surfaces of the device cover, do not use alkaline detergents.
- Please keep all wrappers after unpack them for future use. In case of any failure occurred, you need to return the device to the factory with the original wrapper. Transportation without the original wrapper may result in damage on the device and lead to additional costs.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.
- Biometric recognition products are not completely applicable to anti-spoofing environments. If you require a higher security level, use multiple authentication modes.

- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 100~240 VAC or 12 VDC according to the IEC60950-1 standard. Please refer to technical specifications for detailed information.
- Please take care of your card and report card loss in time when card is lost.
- Multiple card types are supported. Please select an appropriate card type according to the card performance and the usage scenarios.
- Working temperature: -10 °C to 50 °C (14 °F to 122 °F)

Contents

Chapter 1 Overview 1
Chapter 2 Appearance 2
Chapter 3 Activation
3.1 Activate via Device 4
3.2 Activate via SADP 5
Chapter 4 Select Language7
Chapter 5 Enroll Administrator's Face
Chapter 6 Enroll via Device
6.1 Enroll Face via Device
6.2 Enroll Fingerprint via Device 10
6.3 Enroll Card via Device 11
Chapter 7 Enroll via Client Software 13
7.1 Enroll Face via Client Software 13
7.2 Enroll Fingerprint via Client Software 15
7.3 Enroll Card via Client Software 19
7.4 Get Person Information from Enrollment Station 21
7.5 Import Person Information in Batch 22
Chapter 8 Basic Operation 24
8.1 Login by Administrator 24
8.2 Add Administrator 25
8.3 Communication Settings 26
8.4 Manage Enrollment 27
8.5 Basic Settings 28
8.5.1 Set Time 28
8.5.2 Set Sound 29
8.5.3 Set Enrollment Rule 30

Appendix C. Communication Matrix and Device Command	41
Appendix B. Tips for Scanning Fingerprint	39
Appendix A. Tips When Collecting/Comparing Face Picture	38
8.8 System Maintenance	36
8.7.3 Clear Enrolled Data	35
8.7.2 Export Enrolled Data	34
8.7.1 Import User	33
8.7 Data Management	33
8.6 Set Biometric Parameters	32
8.5.4 Other Settings	31

Chapter 1 Overview

Introduction

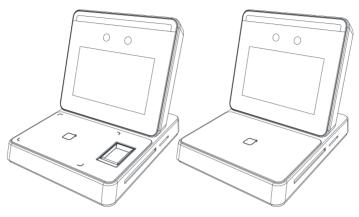


Figure 1-1 Product Appearance

The enrollment station can realize multiple user information's enrollment on one device. It supports enrolling face picture, fingerprint (parts of the device model support), 13.56 MHz IC card No., and 125KHz ID card No.

Features

- 3.97-inch LCD touch screen for face recognition, parameters configuration, live view, etc.
- 2 MP wide-angle dual-lens
- Face anti-spoofing
- Deep learning algorithm
- 2,000 user capacity, 2,000 face capacity, 20,000 card capacity, and 20,000 fingerprint capacity
- Enrolls data via the device and transmits the data from the device to the platform via TCP/IP protocol.

Enrolls data remotely via the client software

- Stand-alone operation
- Manage, search and set device data after logging in the device locally
- Supports communicating with the platform via USB or network. (This function may vary with different models.)

Chapter 2 Appearance

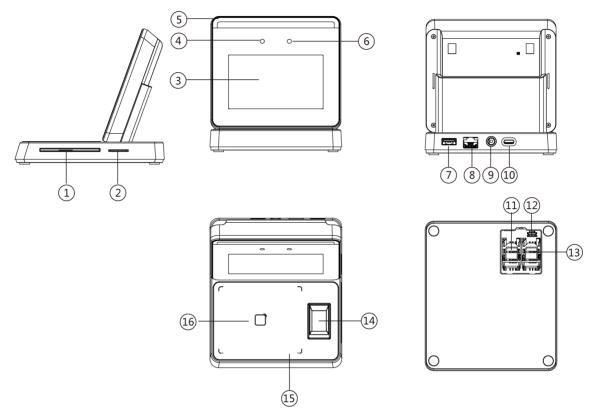


Figure 2-1 Appearance

Table 2-1 Appearance Description

No.	Description
1	PSAM3 Card Slot (Reserved)
2	PSAM4 Card Slot (Reserved)
3	Screen
4	Camera
5	Supplement Light
6	Camera
7	USB Interface

No.	Description
	i Note
	For data import and export.
8	Network Interface
9	Power Interface
10	Type-C USB
	i Note
	For data communication.
11	PSAM Card Slot (Reserved)
12	Debugging Port
	i Note
	For debugging use only.
13	PSAM Card Slot (Reserved)
14	Fingerprint Module
	i Note
	Parts of the device models support.
15	Indicator
16	Card Presenting Area

Chapter 3 Activation

You should activate the device before the first login. After powering on the device, the system will switch to Device Activation page.

Activation via the device, SADP tool and the client software are supported.

The default values of the device are as follows:

- The default IP address: 192.0.0.64
- The default port No.: 8000
- The default user name: admin

3.1 Activate via Device

If the device is not activated, you can activate the device after it is powered on.

On the Activate Device page, create a password and confirm the password. Tap **Activate** and the device will be activated.

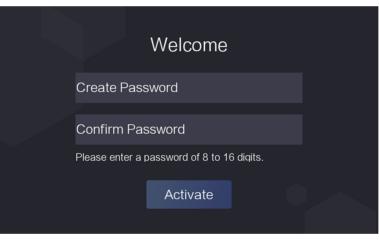


Figure 3-1 Activation Page

ACaution

The password strength of the device can be automatically checked. We highly recommend you change the password of your own choosing (using a minimum of 8 characters, including at least three kinds of following categories: upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you change your password regularly, especially in the high security system, changing the password monthly or weekly can better protect your product.

Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.

After activation, if you need to add the device to the client software or other platforms, you should edit the device IP address. For details, see *Communication Settings*.

3.2 Activate via SADP

SADP is a tool to detect, activate and modify the IP address of the device over the LAN.

Before You Start

- Get the SADP software from the supplied disk or the official website <u>http://</u> <u>www.hikvision.com/en/</u>, and install the SADP according to the prompts.
- The device and the PC that runs the SADP tool should be within the same subnet.

The following steps show how to activate a device and modify its IP address. For batch activation and IP addresses modification, refer to *User Manual of SADP* for details.

Steps

- 1. Run the SADP software and search the online devices.
- 2. Find and select your device in online device list.
- 3. Input new password (admin password) and confirm the password.

STRONG PASSWORD RECOMMENDED-We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

4. Click Activate to start activation.

		Security	IPv4 Address	Port	Software Version IPv4 Gateway	HTTP P	ort Device Serial No.	
001	\$10.4000000 a	Active	10.16.6.20	8000	VLD Rode 1998. 10.16.6.254	80	DS-408102-201204041304	
002	D5-0HE303-A	Active	10.16.6.21	8000	10.16.6.254	80	DS-494035-402003080404	A
003	D5-628528-48	Active	10.16.6.213	8000	10.16.6.254	N/A	D5-K2852X-A221541207VE	
004	DS-19408-5/K2G	Active	10.16.6.179	8000	VL0.5 (0.16.6.254	N/A	Di inan iyuutaman a	The device is not activated
005	D5-13408-018%G	Active	10.16.6.127	8000	10.16.6.254	N/A	DE LINER CORNELISATION	The defice is not defined
005	UNICHIN DEVICE TYPE	Active	10.16.6.250	8000	10.16.6.254	80	20411100044803406798	
	007			14	Inactive		192.0.0.64	
009	05-15508%-040/K2GW	Acti Se	lect in	activ	e device.	80	Di USURA MUNICIPALITA	You can modify the network parameters at the device activation.
		00		activ	ie device.			Activate Now
					Inpu	t ai	nd confirm	New Password:
								Strong
					pass		and a second sec	Confirm Password:

Status of the device becomes Active after successful activation.

- **5.** Modify IP address of the device.
 - 1) Select the device.
 - 2) Change the device IP address to the same subnet as your computer by modifying the IP address manually.
 - 3) Input the admin password and click **Modify** to activate your IP address modification.

Chapter 4 Select Language

After activation, you should select a language.

Steps

1. After activation, tap **OK** on the pop-up window. You will enter the language page.

Select Langu	lage
English	
日本語	
ภาษาไทย	
Next	

Figure 4-1 Select Language

- 2. Select a language according to the actual needs.
- **3.** Click **Next** to save the settings.

Chapter 5 Enroll Administrator's Face

After selecting language, you should enroll an administrator's face for further operation. The administrator can login the device backend to manage and configure data.

Steps

1. After selecting the language, tap **Next** on the pop-up window. You will enter the face enrollment page.

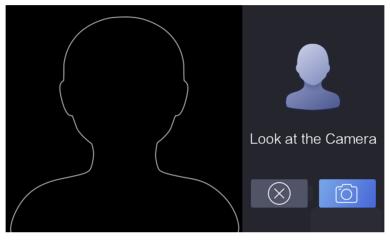


Figure 5-1 Face Enrollment Page

2. Enroll the administrator's face.

1) Tap 👩 and follow the instructions to enroll the face.

iNote

Make sure that the enrolling face is in face shaped area.

2) Tap \bigotimes to exit the face enrollment page and back to the initial page.

iNote

After logging in the device backend, you can enter the **Administrator** module to edit the administrator's information. For details, see <u>Add Administrator</u>.

Chapter 6 Enroll via Device

6.1 Enroll Face via Device

Before You Start

- Power on and activate the device. For details about the activation, see Activation .
- Enable Face Required in <u>Set Enrollment Rule</u> after logging in the device backend.

Steps

- 1. Tap 💽 on the initial page.
- Optional: If you have added an administrator's face in <u>Add Administrator</u> and enabled Verify by Administrator in <u>Set Enrollment Rule</u>, you should verify the administrator's permission.



Figure 6-1 Authenticate Administrator Page

- Make sure the face is in the face recognition frame when authentication.

iNote

For details about face recognition, see *<u>Tips When Collecting/Comparing Face Picture</u>*.

- Tap on the right side and enter the administrator's name and password.
- **3.** Enter the User Enrollment page.
 - For user not added: Create an employee ID and tap **Add** or present a card on the card presenting area.
 - For user added: Enter the created employee ID and tap **Search** or present a card on the card presenting area.
- 4. Enroll face.
 - 1) Tap 🛽 to enter the face enrollment page.
 - 2) Tap 👩 and follow the instructions to enroll the face.

Make sure that face is in the face recognition frame.

- 3) **Optional:** Tap 👩 to enroll the face again.
- 4) Tap 💽 to complete the face enrollment.

iNote

For details about face recognition, see *<u>Tips When Collecting/Comparing Face Picture</u>*.

5. Optional: Tap 📝 to edit the employee ID.

6.2 Enroll Fingerprint via Device

Before You Start

- Power on and activate the device. For details about the activation, see Activation .
- Set fingers in **Select Finger** in <u>Set Enrollment Rule</u> after logging in the device backend.

Steps

- 1. Tap 💽 on the initial page.
- Optional: If you have added an administrator's face in <u>Add Administrator</u> and enabled Verify by Administrator in <u>Set Enrollment Rule</u>, you should verify the administrator's permission.



Figure 6-2 Authenticate Administrator Page

- Make sure the face is in the face recognition frame when authentication.

iNote

For details about face recognition, see *<u>Tips When Collecting/Comparing Face Picture</u>*.

- Tap <a>[6] on the right side and enter the administrator's name and password.
- 3. Enter the User Enrollment page.
 - For user not added: Create an employee ID and tap **Add** or present a card on the card presenting area.

- For user added: Enter the created employee ID and tap **Search** or present a card on the card presenting area.
- 4. Enroll fingerprint.
 - 1) Tap 厕 to enter the Select Finger page.
 - 2) Select a finger on the Select Finger page.

You can set fingers in <u>Set Enrollment Rule</u>.

3) Follow the instructions and press a finger on the fingerprint module.

If the fingerprint is enrolled, the enrolled fingerprint on Select Finger page will turn to blue.

- 4) **Optional:** Tap the enrolled fingerprint (in blue) and tap **OK** in the dialogue box to clear the enrolled data and enroll a new fingerprint.
- 5. Optional: Tap 👔 to edit the employee ID.

6.3 Enroll Card via Device

Before You Start

- Power on and activate the device. For details about the activation, see Activation .
- Set Card Number per User and Card No. Length in <u>Set Enrollment Rule</u> after logging in the device background.

Steps

- **1.** Tap **on the initial page**.
- Optional: If you have added an administrator's face in <u>Add Administrator</u> and enabled Verify by Administrator in <u>Set Enrollment Rule</u>, you should verify the administrator's permission.



Figure 6-3 Authenticate Administrator Page

- Make sure the face is in the face recognition frame when authentication.

For details about face recognition, see *<u>Tips When Collecting/Comparing Face Picture</u>*.

- Tap and the right side and enter the administrator's name and password.

- **3.** Enroll card.
 - Present card on the card presenting area and tap **OK** in the dialogue box. Create an employee ID and tap **Next**.
 - Create an employee ID in the input box, and tap **Add** to enter the User Enrollment page. Tap and present card on the card presenting area.
 - Enter the created employee ID and tap **Search** to enter the User Enrollment page. Tap and present card on the card presenting area.

iNote

The ID can only be set as the original length.

4. Optional: Tap 📝 to edit the employee ID.

Chapter 7 Enroll via Client Software

7.1 Enroll Face via Client Software

Before You Start

- Download and install the client software on your computer before enrollment.
- Power on and activate the device. For details about the activation, see Activation .

Follow the steps below to enroll face.

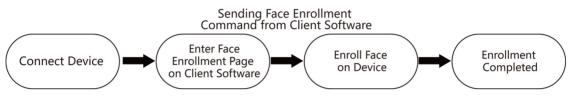


Figure 7-1 Flow Diagram of Enrolling Face

Steps

- 1. Power on the device.
- 2. Place the device on the desk.
- 3. Login the client software on the computer.
- 4. Add an organization.
 - 1) Click Person to enter the Person page.
 - 2) Click Add on the upper left of the page.

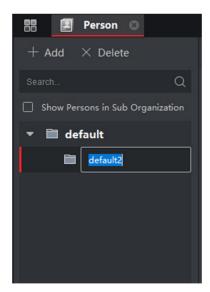


Figure 7-2 Add Organization

3) Create an organization name.

Up to 10 levels of organizations can be added.

The added organizations will be displayed in the list on the left of the page.

- 5. Add person.
 - 1) Select an organization from the list on the left.
 - 2) Click Add on right panel.
 - 3) Set the person's basic information, including the person's name, email, tel, effective period, and remark.

Add		×
Basic Information		
* Person ID	1	
* Name	+	
Gender	Male O Female Add Face	
Email		
Tel		
Effective Period	2019/05/31 00:00:00-2029/05/30 23:59:59	
Remark		
- Credential		
Card		
+		
	dd and New Add Cancel	

Figure 7-3 Add Person

iNote

Once the person information is expired, the credentials and access control settings of the person will be invalid and the person will have no authorization to access the doors.

- 6. Set enrollment station.
 - If the enrollment station is connected with the platform via USB interface, click **Local Collection** on the Add window.

1) Enable **Verify by Device** to check whether the device managed in the client can recognize the face in the photo.

2) Select Enrollment Station from the drop-down list.

3) Click Login and set the enrollment station's user name and password.

4) (Optional) Enable Face Anti-Spoofing and set the liveness level according to your actual needs.

5) Click **OK**.

- If the enrollment station is connected with the platform via the network, click **Remote Collection** on the Add window.

1) Enable **Verify by Device** to check whether the device managed in the client can recognize the face in the photo.

- 2) Select Enrollment Station from the drop-down list.
- 3) Click Login and set the enrollment station's IP address, port No., user name and password.

4) (Optional) Enable Face Anti-Spoofing and set the liveness level according to your actual needs.

5) Click **OK**.

- **7.** Enroll face on the device.
 - 1) Face the enrollment station's camera and capture a picture according to the instructions on the enrollment station.
 - 2) Click 🕤 to capture again.

3) Click OK.

- **8.** Confirm to add the person.
 - Click Add to add the person and close the Add Person window.
 - Click Add and New to add the person and continue to add other persons.

7.2 Enroll Fingerprint via Client Software

Before You Start

- Download and install the client software on your computer before enrollment.
- Power on and activate the device. For details about the activation, see <u>Activation</u>.

Follow the steps below to enroll fingerprint.

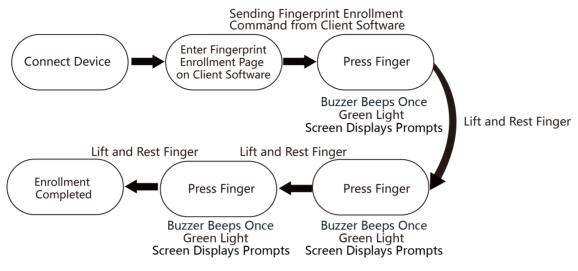


Figure 7-4 Flow Diagram of Enrolling Fingerprint

Steps

- 1. Power on the device.
- **2.** Place the device on the desk.
- 3. Login the client software on the computer.
- 4. Add an organization.
 - 1) Click Person to enter the Person page.
 - 2) Click Add on the upper left of the page.

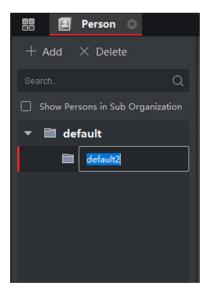


Figure 7-5 Add Organization

3) Create an organization name.

Up to 10 levels of organizations can be added.

The added organizations will be displayed in the list on the left of the page.

- 5. Add person.
 - 1) Select an organization from the list on the left.
 - 2) Click Add on right panel.
 - 3) Set the person's basic information, including the person's name, email, tel, effective period, and remark.

Add		×
Basic Information		
* Person ID	1	
* Name	+	
Gender	Male O Female Add Face	
Email		
Tel		
Effective Period	2019/05/31 00:00:00-2029/05/30 23:59:59	
Remark		
👻 Credential		
Card		
+		
	add and New Add Cancel	

Figure 7-6 Add Person

iNote

Once the person information is expired, the credentials and access control settings of the person will be invalid and the person will have no authorization to access the doors.

6. On the **Credential** → **Fingerprint** panel, click +.

7. Set enrollment station.

Add			×
Collection Mode	Local	O Remote	
Fingerprint Recorder			-
	M))	
		91m.	
	Start		
		Add	Cancel

Figure 7-7 Add Fingerprint Page

- If the enrollment station is connected with the platform via USB interface, click Local.
 - 1) Select **Enrollment Station** as the fingerprint recorder from the drop-down list.
 - 2) Click Login and set the enrollment station's user name and password.
 - 3) Click OK.
- If the enrollment station is connected with the platform via the network, click Remote
 - 1) Select Enrollment Station as the fingerprint recorder from the drop-down list.
 - 2) Click Login and set the enrollment station's IP address, port No., user name and password.
 - 3) Click **OK**.
- 8. Enroll the fingerprint.
 - 1) Click **Start** to start enrollment.
 - 2) Follow the instructions on the enrollment station to enroll the fingerprint.
 - 3) Click **Add** to save the enrollment.
- **9.** Confirm to add the person.
 - Click Add to add the person and close the Add Person window.
 - Click Add and New to add the person and continue to add other persons.

7.3 Enroll Card via Client Software

Before You Start

- Download and install the client software on your computer before enrollment.
- Power on and activate the device. For details about the activation, see Activation .

Follow the steps below to enroll card No.

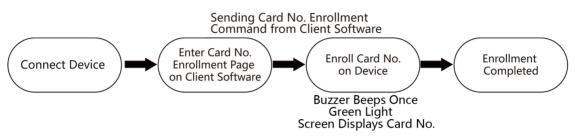


Figure 7-8 Flow Diagram of Enrolling Card

Steps

- **1.** Power on the device.
- **2.** Place the device on the desk.
- 3. Login the client software on the computer.
- **4.** Add an organization.
 - 1) Click Person to enter the Person page.
 - 2) Click Add on the upper left of the page.

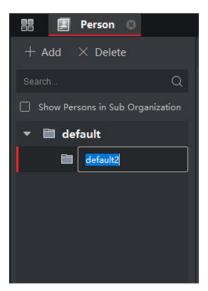


Figure 7-9 Add Organization

3) Create an organization name.

Up to 10 levels of organizations can be added.

The added organizations will be displayed in the list on the left of the page.

- 5. Add person.
 - 1) Select an organization from the list on the left.
 - 2) Click Add on right panel.
 - 3) Set the person's basic information, including the person's name, email, tel, effective period, and remark.

Add		×
Basic Information		
* Person ID	1	
* Name		
Gender	Male	
Email		
Tel		
Effective Period	2019/05/31 00:00:00-2029/05/30 23:59:59	
Remark		
 Credential 		
Card		
+		
A	dd and New Add Cancel	

Figure 7-10 Add Person

iNote

Once the person information is expired, the credentials and access control settings of the person will be invalid and the person will have no authorization to access the doors.

- **6.** On the Add window, Enter **Credential** \rightarrow **Card** .
- **7.** Click **+** \rightarrow **Settings** . to add the card No.
- 8. Set enrollment station.
 - If the enrollment station is connected with the platform via USB interface, click Local.
 - 1) Select Enrollment Station from the drop-down list.
 - 2) Click Login and set the enrollment station's user name and password.

3) Set the RF card type. The device can recognize the checked card type.

4) Click **OK**.

- If the enrollment station is connected with the platform via the network, click Remote.
 - 1) Select Enrollment Station from the drop-down list.
 - 2) Click Login and set the enrollment station's IP address, port No., user name and password.
 - 3) Set the RF card type. The device can recognize the checked card type.

4) Click OK.

- 9. Enter the card No.
 - Enter the card number manually.
 - Place the card on the card enrollment station and click **Read** to get the card No. The card number will display in the Card No. field automatically.
- **10.** Select the card type according to actual needs.

Normal Card

The card is used for opening doors for normal usage.

Duress Card

When the person is under duress, he/she can swipe the duress card to open the door. The door will be unlocked and the client will receive a duress event to notify the security personnel.

Patrol Card

This card is used for the inspection staff to check the their attendance of inspection. By swiping the card on the specified card reader, the person is marked as on duty of inspection at that time.

Dismiss Card

By swiping the card on the card reader, it can stop the buzzing of the card reader.

- 11. Click Add.
- **12.** Confirm to add the person.
 - Click Add to add the person and close the Add Person window.
 - Click Add and New to add the person and continue to add other persons.

7.4 Get Person Information from Enrollment Station

You can get the person information from the device for further operations.

Steps

iNote

- If the person name stored in the device is empty, the person name will be filled with the issued card No. after importing to the client.
- If the card number or person ID (employee ID) stored on the device already exists in the client database, the person with this card number or person ID will not be imported to the client.

- 1. Enter Person module.
- 2. Select an organization to import the persons.
- 3. Click Get from Device.
- **4.** Configure the enrollment station's information.
 - If the enrollment station is connected with the platform via USB interface, click Local.
 - 1) Select Enrollment Station from the drop-down list.
 - 2) Click Login and set the enrollment station's user name and password.
 - 3) Click OK.
 - If the enrollment station is connected with the platform via the network, click Remote
 - 1) Select **Enrollment Station** from the drop-down list.
 - 2) If the platform has not added an enrollment station, click **Login**. If the platform has added an enrollment station, click **Change** to connect to another enrollment station.
 - 3) Set the enrollment station's IP address, port No., user name and password.
 - 3) Click OK.
- 5. Click Get All or Get Partially.

Get All

Import all person's information from the device to the platform.

Get Partially

After matching with the platform, all added person's information will be imported to the platform.

The person information, including person details, person's fingerprint information (if configured), and the linked cards (if configured), will be imported to the selected organization.

7.5 Import Person Information in Batch

You can import the persons information in batch.

Steps

- 1. Enter the Person module.
- 2. Select an organization to import the person.
- 3. Click Get from Device.
- **4.** Configure the enrollment station's information.
 - If the enrollment station is connected with the platform via USB interface, click Local.
 - 1) Select Enrollment Station from the drop-down list.
 - 2) Click Login and set the enrollment station's user name and password.
 - 3) Click OK.
 - If the enrollment station is connected with the platform via the network, click **Remote**.
 - 1) Select Enrollment Station from the drop-down list.

- 2) If the platform has not added an enrollment station, click **Login**. If the platform has added an enrollment station, click **Change** to connect to another enrollment station.
- 3) Set the enrollment station's IP address, port No., user name and password.
- 3) Click **OK**.
- 5. Click Export Template and you can export the template to the PC.
- 6. Edit person's basic information and save.
- **7.** Click **Import**. Select the file edited in Step 6.

The edited basic information will be imported to the client software.

What to do next

After the basic information is imported to the client software, you should enroll other information such as the face, fingerprint, etc. For details, see *Enroll via Client Software*.

Chapter 8 Basic Operation

8.1 Login by Administrator

Login the device backend to set the device basic parameters. If an administrator is added to the device, you can login by verifying the administrator's permission.

Before You Start

Add an administrator and add a face picture for the administrator. For details, see <u>Add</u> <u>Administrator</u>.

Steps

1. Long tap on the initial page for 3 s to enter the administrator authentication page.



Figure 8-1 Authenticate Administrator Page

2. Authenticate the administrator's face to enter the home page.

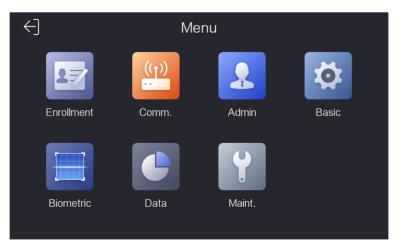


Figure 8-2 Home Page

The device will be locked for 30 minutes after 5 failed face or password attempts.

- **3.** Optional: Tap and you can enter the added admin user name and password to login.
- **4. Optional:** Tap 🔄 and you can exit the page and be back to the initial page.

8.2 Add Administrator

The administrator can login the device backend and configure the device parameters.

Steps

- **1.** Long tap on the initial page for 3 s and login the device home page.
- 2. Tap Admin to enter the Administrator page.

<	Administrator	+
admin 1		Super Administrator >

Figure 8-3 Administrator Page

- 3. Set the administrator's parameters.
 - Edit the super administrator's parameters: Tap **admin** and edit the super administrator's face and password.
 - Add a new administrator: Tap **H** and set the administrator's type, add face and password.

<	Administrator Information	
No.		01
Name		admin
Туре		Super Administrator
Face		Not Configured >
Password		***** >



Super Administrator

Contains all management and operation permissions.

Normal Administrator

Supports enrollment management and communication management. During remote configuration, the normal administrator can only gain parameters.

4. Tap \checkmark , and verify the administrator's identity via face or password.

iNote

- By default, the system contains a super administrator (admin). You cannot edit its No., name, and type. and you cannot delete it.
- The admin user has higher permission level than other administrators.
- The administrator's No. and name cannot be edited on the device. You should authenticate the administrator before editing the other administrator's information.
- Up to 5 administrators can be added.
- The face of the super administrator and normal administrator cannot be the same.
- After verifying the administrator's identity failed for 5 times, the current page will be locked.

8.3 Communication Settings

Set the device wired network and wireless network.

Set Wired Network Parameters

Make sure the device has connected the Ethernet. Long tap on the initial page for 3 s and login the home page. Tap **Comm. → Wired Network**.

<	Wired Network	
IP Address		xx.x.xxx.xxx >
Subnet Mask		255.255.255.0 >
Gateway		xx.x.xxx.xxx >

Figure 8-5 Set Wired Network

Set the device IP address, subnet mask, and gateway.

Set Wireless Network Parameters

The device can connect to the Ethernet via wireless connection. Long tap on the initial page for 3 s and login the home page. Tap **Comm.** \rightarrow **Wi-Fi**.

<		Wi-Fi	
WLA	N		
Select	Network		
	HK-Office		()î
			() ()
	ACS_TEST		()(?
	HK-Office		()) ()
	HK-Office		() ()

Figure 8-6 Wi-Fi Page

After enabling **WLAN**, you should select a Wi-Fi for connection.

Select a Wi-Fi and enable **DHCP** and enter the Wi-Fi's password to connect. Tap 🖉 to connect the Wi-Fi.

Or disable the **DHCP** function, and enter the Wi-Fi's password, IP address, subnet mask, and gateway. Tap 🖉 to connect the Wi-Fi.

Tap 🔀 to disconnect the Wi-Fi.

8.4 Manage Enrollment

You can view the enrolled person information and delete the enrolled data.

Steps

1. Long tap on the initial page for 3 s and login the home page. Tap **Enrollment**.

< Е	nrollment Management (0/22)	
Q Enter Emp	oloyee ID or Present Card		
Incomplete			>
Test1 1		8	<u></u> >
Test2 2		<u>8</u>	@ >
Test3 ³		2	@ >
Test4 4		Q	<u></u> >
- -			

Figure 8-7 Enrollment Management Page

- **2.** You can view all enrolled person's information on this page.
- **3.** You can also perform the following operations.

Incomplete	Tap Incomplete and the system will list the persons which have not enrolled all data.
View Details	Tap a person in the list to view details. Tap 🔚 to delete the person and all enrolled data.
Face/ Fingerprint/	Tap a person in the list to enter the User Information page. You can delete the enrolled data according to actual requirements.
Card	i Note
	Only parts of the device models support fingerprint recognition function. Refer to the actual page for details.
Search	Enter a person's employee ID and tap the search icon, or present a card on the card presenting area. The system will enter the User Information page.

8.5 Basic Settings

8.5.1 Set Time

You can set the device time format and the current time.

Long tap on the initial page for 3 s and login the device home page. Tap **Basic** \rightarrow **Time**.

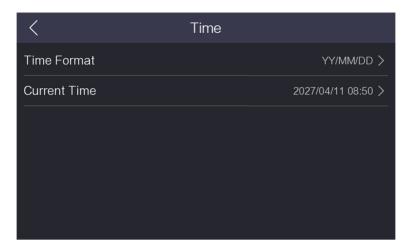


Figure 8-8 Time Settings Page

You can set the device time format and the current time.

8.5.2 Set Sound

Enable or disable the **Keypad Sound** and **Voice Volume**. You can also adjust the **Voice Volume**.

Long tap on the initial page for 3 s and login the device home page. Tap **Basic** \rightarrow **Sound** .

Sound	
	7 >
	Sound

Figure 8-9 Sound Settings

You can enable or disable the device keypad sound and voice volume. Voice volume is also adjustable.



The available volume range is from 0 to 10. The larger the value, the louder the volume. 0 represents disable the voice prompt function.

8.5.3 Set Enrollment Rule

Set the enrollment rules before data enrollment.

Long tap on the initial page for 3 s and login the home page. Tap **Basic** \rightarrow **Enrollment Rules** .

<	Enrollment Rules	
Verify by Administra	tor	
Employee ID Length		32 >
Employee ID Required	I	
Name Required		
Name Length		32 >
Verify Name		
Face Required		
Card Number per User		1 >

Figure 8-10 Enrollment Rules Page

The configurable rules and descriptions are as follows:

Verify by Administrator

If enabling the function, you should verify the administrator's permission before enrollment.

Employee ID Length

Set the employee ID's length when enrolling a person's information.

Employee ID Required

You must enroll the employee ID when enrolling a person's information.

Name Required

You must enroll the person's name when enrolling a person's information.

Name Length

Set the name's length when enrolling a person's information.

Verify Name

When enter a name in the enroll user page, the system will compare the name with all names in the database to avoid name duplication.

Face Required

You must enroll the person's face when enrolling a person's information.

Select Finger

Set the enrolling fingers when enrolling a person's fingerprint.

Card Number per User

Set the maximum card number that a person can enroll.

8.5.4 Other Settings

You can set the device white light brightness, IR light brightness, and video standard. Long tap on the initial page for 3 s and login the device home page. Tap **Basic**.

<	Basic Settings	
Time		>
Sound		>
White Light Brightness	; 0	>
IR Light Brightness	100	>
Select Language	English	>
Video Standard	PAL	>
Enrollment Rules		>

Figure 8-11 Basic Settings Page

White Light Brightness

Set the supplement white light's brightness. The brightness range is from 1 to 100. 0 refers to turning off the light. 1 refers to the darkest, and 100 refers to the brightest.

IR Light Brightness

Set the IR light brightness when the IR light is enabled. The brightness range is from 1 to 100. 0 refers to turning off the light. 1 refers to the darkest, and 100 refers to the brightest.

Select Language

Select the language according to the actual demands.

Video Standard

Set the video frame rate when performing live view remotely. After changing the standard, you should reboot the device to take effect.

PAL

25 frames per second. Suitable for mainland China, Hong Kong (China), the Middle East countries, Europe countries, etc.

NTSC

30 frames per second. Suitable for the USA, Canada, Japan, Taiwan (China), Korea, the Philippines, etc.

8.6 Set Biometric Parameters

You can customize the face parameters to improve the face recognition performance. The configurable parameters includes face anti-spoofing, liveness security level, pitch angle, yaw angle, pupillary distance, and WDR.

Long tap on the initial page for 3 s and login the home page. Tap **Biometric**.

<	Biometric Parameters		
Face Anti-Spoofir	ng		
Liveness Security	Level	Low	>
Pitch Angle		30	>
Yaw Angle		45	>
Pupillary Distance		40	>
WDR		0	

Figure 8-12 Biometric Parameters Page

Table 8-1 Face Picture Parameters

Parameter	Description
Face Anti-Spoofing	Enable or disable the face anti-spoofing function. If enabling the function, the device can recognize whether the person is a live one or not.
	i Note
	Biometric recognition products are not completely applicable to anti- spoofing environments. If you require a higher security level, use multiple authentication modes.
Liveness Security Level	After enabling face anti-spoofing function, you can set the matching security level when performing live face authentication.
Pitch Angle	The maximum pitch angle when starting face authentication. By default, the angle is 30°.

Parameter	Description
Yaw Angle	The maximum yaw angle when starting face authentication. By default, the angle is 45°.
Pupillary Distance	The minimum resolution between two pupils when starting face recognition. The actual resolution should be larger than the configured value.
	By default, the resolution is 40.
WDR	It is suggested to enable the WDR function if installing the device outdoors.
	When there are both very bright and very dark areas simultaneously in the view, you can enable the WDR function to balance the brightness of the whole image and provide clear images with details.

8.7 Data Management

You can import user list, export user list template, export enrolled data, and clear enrolled data.

8.7.1 Import User

Import the user information from the USB flash drive to the device.

Before You Start

Plug the USB flash drive in the USB interface on the device.

Steps

1. Long tap on the initial page for 3 s and login the home page.

2. Tap Data.

<	Data Management	
Import User		>
Export Template		>
Export Enrolled Data		>
Clear Enrolled Data		>

Figure 8-13 Data Management Page

3. Tap Export Template.

The template will be exported to the USB flash drive.

4. Edit the exported table and enroll the user information.

iNote

```
Make sure the edited file is saved in the corresponding folder named "DS-K1F600U-D6E", "DS-K1F600U-D6E-F", or "DS-K1F600U-D6E-IF" in the root directory of the USB flash drive.
```

5. Tap Import User.

iNote

Up to 2000 users can be imported.

Result

The system will read the user information in the USB flash drive automatically and import the data to the device.

8.7.2 Export Enrolled Data

Export enrolled data from the device to the USB flash drive.

Before You Start

Plug the USB flash drive in the USB interface on the device.

iNote

- The supported USB flash drive format is FAT32.
- The system supports the USB flash drive with the storage of 1G to 32G. Make sure the free space of the USB flash drive is more than 512M.
- The exported user data is a DB file, which cannot be edited.

Steps

- **1.** Long tap on the initial page for 3 s and login the home page.
- 2. Tap Data.



Figure 8-14 Data Management Page

3. Tap Export Enrolled Data.

All enrolled data will be exported to the USB flash drive.

8.7.3 Clear Enrolled Data

Delete all enrolled data in the device, including all face pictures, fingerprints, card, etc. Long tap on the initial page for 3 s and login the home page. Tap **Data**.

<	Data Management	
Import User	>	
Export Template	>	
Export Enrolled Data	>	
Clear Enrolled Data	>	

Figure 8-15 Data Management Page

Tap **Clear Enrolled Data** to delete all enrolled data in the device, including all face pictures, fingerprints, card, etc.

8.8 System Maintenance

You can view the device system information and capacity. You can also restore the system to factory settings, default settings, and reboot the system.

Long tap on the initial page for 3 s and login the home page. Tap Maint.

<	Maintenance	
System Information		>
Capacity		>
Restore to Default		>
Restore to Factory		>
Upgrade		>
Reboot		>

Figure 8-16 Maintenance Page

System Information

You can view the device information.

iNote

The page may vary according to different device models. Refers to the actual page for details.

Capacity

You can view the number of administrator, user, face picture, card, and event.

iNote

- Parts of the device models support displaying the fingerprint number. Refers to the actual page for details.
- The capacity varies according to the configured enrollment rules. For details about setting enrollment rules, see <u>Set Enrollment Rule</u>.

Restore to Default

All parameters, except for the communication settings, remotely imported user information, will be restored to the default settings. The system will reboot to take effect.

Restore to Factory

All parameters will be restored to the factory settings. The system will reboot to take effect.

Upgrade

Plug the USB flash drive in the device USB interface. Tap **Upgrade** \rightarrow **OK**, and the device will read the *digicap.dav* file in the USB flash drive to start upgrading.

Reboot

The device will reboot after the confirmation.

Appendix A. Tips When Collecting/Comparing Face Picture

The position when collecting or comparing face picture is as below:

Expression


• Keep your expression naturally when collecting or comparing face pictures, just like the expression in the picture below.



- Do not wear hat, sunglasses, or other accessories that can affect the facial recognition function.
- Do not make your hair cover your eyes, ears, etc. and heavy makeup is not allowed.


Posture

In order to get a good quality and accurate face picture, position your face looking at the camera when collecting or comparing face pictures.

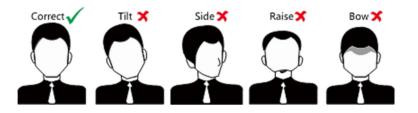

Size

Make sure your face is in the middle of the collecting window.

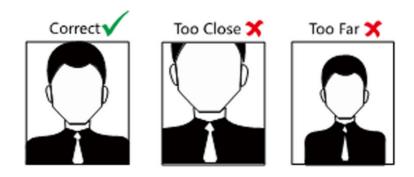


Appendix B. Tips for Scanning Fingerprint

Recommended Finger

Forefinger, middle finger or the third finger.

Correct Scanning


The figure displayed below is the correct way to scan your finger:

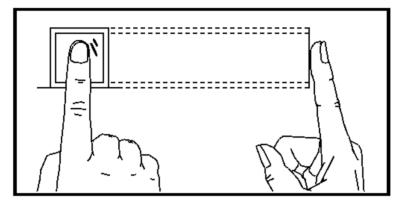

You should press your finger on the scanner horizontally. The center of your scanned finger should align with the scanner center.

Incorrect Scanning

The figures of scanning fingerprint displayed below are incorrect:

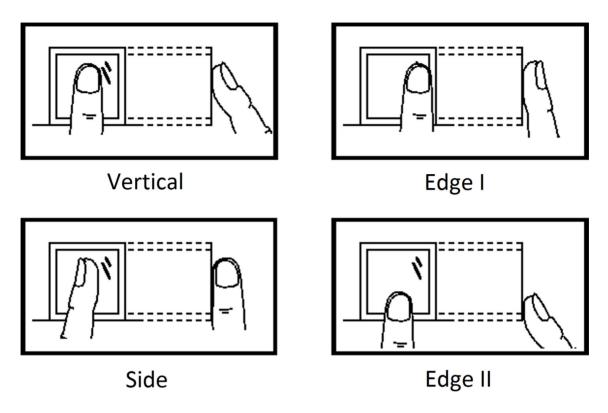

Environment

The scanner should avoid direct sun light, high temperature, humid conditions and rain. When it is dry, the scanner may not recognize your fingerprint successfully. You can blow your finger and scan again.

Others

If your fingerprint is shallow, or it is hard to scan your fingerprint, we recommend you to use other authentication methods.

If you have injuries on the scanned finger, the scanner may not recognize. You can change another finger and try again.

Appendix C. Communication Matrix and Device Command

Communication Matrix

Scan the following QR code to get the device communication matrix. Note that the matrix contains all communication ports of Hikvision access control and video intercom devices.



Figure C-1 QR Code of Communication Matrix

Device Command

Scan the following QR code to get the device common serial port commands. Note that the command list contains all commonly used serial ports commands for all Hikvision access control and video intercom devices.



Figure C-2 Device Command

