



Media Converter

Quick Start Guide

Legal Information

About this Document

- This Document includes instructions for using and managing the Product. Pictures, charts, images and all other information hereinafter are for description and explanation only.
- The information contained in the Document is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version of the Document at the Hikvision website (<https://www.hikvision.com>). Unless otherwise agreed, Hangzhou Hikvision Digital Technology Co., Ltd. or its affiliates (hereinafter referred to as "Hikvision") makes no warranties, express or implied.
- Please use the Document with the guidance and assistance of professionals trained in supporting the Product.

About this Product

This product can only enjoy the after-sales service support in the country or region where the purchase is made.

Acknowledgment of Intellectual Property Rights

- Hikvision owns the copyrights and/or patents related to the technology embodied in the Products described in this Document, which may include licenses obtained from third parties.
- Any part of the Document, including text, pictures, graphics, etc., belongs to Hikvision. No part of this Document may be excerpted, copied, translated, or modified in whole or in part by any means without written permission.
- **HIKVISION** and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions.
- Other trademarks and logos mentioned are the properties of their respective owners.

LEGAL DISCLAIMER

- TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THIS DOCUMENT AND THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, ARE PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, OR FITNESS FOR A PARTICULAR PURPOSE. THE USE OF THE PRODUCT BY YOU IS AT YOUR OWN RISK. IN NO EVENT WILL HIKVISION BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY, OR OTHERWISE, IN CONNECTION WITH THE USE OF THE PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.
- YOU ACKNOWLEDGE THAT THE NATURE OF THE INTERNET PROVIDES FOR INHERENT SECURITY RISKS, AND HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER-ATTACK, HACKER ATTACK, VIRUS INFECTION, OR OTHER INTERNET SECURITY

RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

- YOU AGREE TO USE THIS PRODUCT IN COMPLIANCE WITH ALL APPLICABLE LAWS, AND YOU ARE SOLELY RESPONSIBLE FOR ENSURING THAT YOUR USE CONFORMS TO THE APPLICABLE LAW. ESPECIALLY, YOU ARE RESPONSIBLE, FOR USING THIS PRODUCT IN A MANNER THAT DOES NOT INFRINGE ON THE RIGHTS OF THIRD PARTIES, INCLUDING WITHOUT LIMITATION, RIGHTS OF PUBLICITY, INTELLECTUAL PROPERTY RIGHTS, OR DATA PROTECTION AND OTHER PRIVACY RIGHTS. YOU SHALL NOT USE THIS PRODUCT FOR ANY PROHIBITED END-USES, INCLUDING THE DEVELOPMENT OR PRODUCTION OF WEAPONS OF MASS DESTRUCTION, THE DEVELOPMENT OR PRODUCTION OF CHEMICAL OR BIOLOGICAL WEAPONS, ANY ACTIVITIES IN THE CONTEXT RELATED TO ANY NUCLEAR EXPLOSIVE OR UNSAFE NUCLEAR FUEL-CYCLE, OR IN SUPPORT OF HUMAN RIGHTS ABUSES.
- IN THE EVENT OF ANY CONFLICTS BETWEEN THIS DOCUMENT AND THE APPLICABLE LAW, THE LATTER PREVAILS.

© Hangzhou Hikvision Digital Technology Co., Ltd. All rights reserved.

Applicable Models

This manual is applicable to the models listed in the following table.

Model	Description
DS-3D504TP-A	Gigabit PoE media convertor, 4 × 10/100/1000 Mbps self-adaptive PoE RJ45 port and 1 × gigabit SC fiber optical port, transmitter, 20 km

Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
 Note	Provides additional information to emphasize or supplement important points of the main text.
 Caution	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
 Danger	Indicates a hazard with a high level of risk, which if not avoided, will result in death or serious injury.

CONTENTS

Chapter 1 Introduction	1
1.1 Product Introduction	1
1.2 Packing List	1
1.3 Appearance	2
1.4 Typical Application	3
Chapter 2 Installation	5
2.1 Lightning Protection, ESD Protection, and Grounding.....	5
2.2 Optical Fiber and Optical Component Protection.....	5
2.3 Optical Fiber Connection	6
2.4 Device Installation	6
2.4.1 Desktop Placement	6
2.4.2 Wall-Mounted Installation.....	6
Chapter 3 Grounding	8
3.1 With Grounding Bar	8
3.2 Without Grounding Bar	8
Chapter 4 Powering On	10

Chapter 1 Introduction

1.1 Product Introduction

DS-3D504TP-A is a gigabit PoE media convertor, providing four 10/100/1000 Mbps self-adaptive PoE RJ45 ports and one gigabit SC fiber optical port. The device uses a single-mode optical fiber to transmit and receive data, achieving high-speed and lossless transmission of data signals over a maximum of 20 km transmission distance. In addition, the product complies with IEEE 802.3at standard while maintaining backward compatibility with IEEE 802.3af powered devices (PDs), and supports PoE power management that prioritizes continuous and stable power supply of high-priority ports. Featuring compact size, ease of use, wide dynamic range, and high cost performance, the device is suitable for hotels, scenic spots, factories, office buildings, apartments, parking lots, and security systems to set up an efficient network system.

1.2 Packing List

Please check if the package is damaged first. If the package is intact, unpack it and check whether the accessories provided with the product are available by referring to the packing list. Then, you can continue to install the device.

Table 1-1 Packing List

Accessory	Quantity
Media Convertor	× 1
Power Adapter	× 1
Regulatory Compliance and Safety Information	× 1

1.3 Appearance

Front Panel

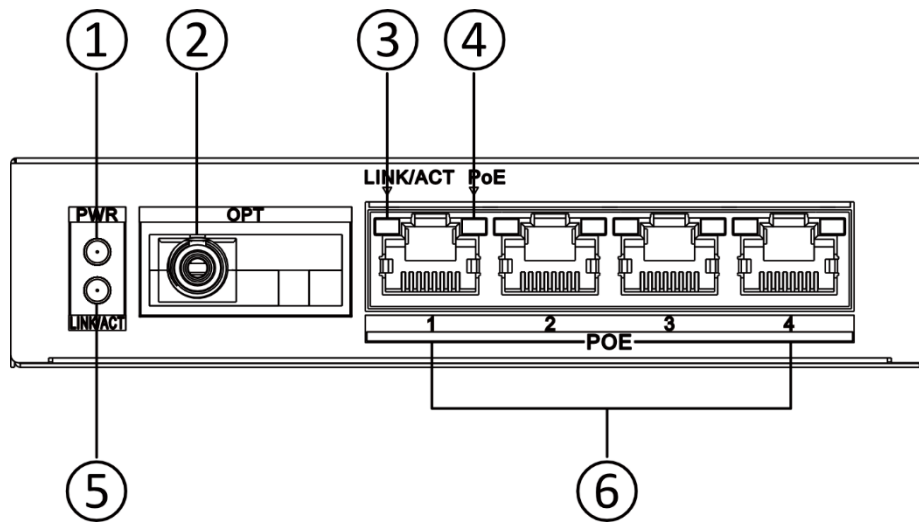


Figure 1-1 DS-3D504TP-A

Rear Panel

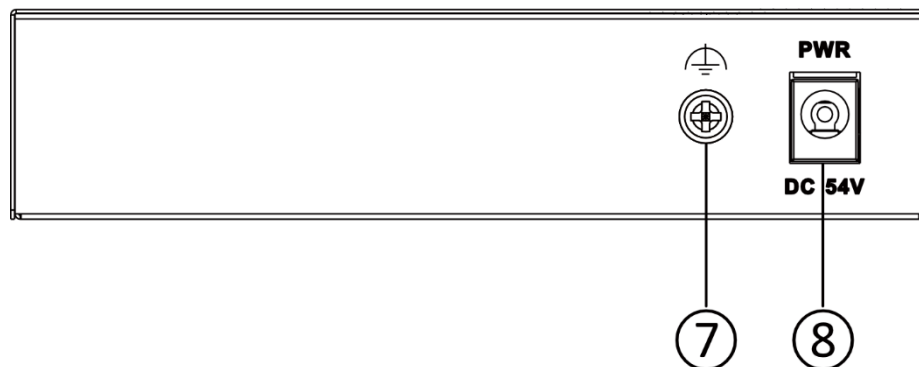


Figure 1-2 DS-3D504TP-A

Table 1-2 Port/Indicator Description

No.	Port/Indicator	Description
①	PWR	Power indicator. ● Solid on: The device is powered on normally. ● Unlit: No power supply connected or power supply is abnormal.
②	OPT	Gigabit SC fiber optical port, connected to another fiber optical port via a single-mode optical fiber.
③	LINK/ACT	RJ45 port indicator. ● Solid on: The 10/100/1000 Mbps self-adaptive PoE RJ45 port is connected.

		● Flashing: The 10/100/1000 Mbps self-adaptive PoE RJ45 port is transmitting or receiving data. ● Unlit: The 10/100/1000 Mbps self-adaptive PoE RJ45 port is disconnected or connection is abnormal.
④	PoE	PoE status indicator. ● Solid on: The device supplies power to a PD normally. ● Unlit: The device is disconnected from a PD or power supply is abnormal.
⑤	OPT LINK/ACT	Fiber optical port indicator. ● Solid on: The gigabit SC fiber optical port is connected via an optical fiber. ● Flashing: The gigabit SC fiber optical port is transmitting or receiving data. ● Unlit: The gigabit SC fiber optical port is disconnected or connection is abnormal.
⑥	PoE LAN	10/100/1000 Mbps self-adaptive PoE RJ45 port, used for connection to a PD such as a network camera (IPC) or switch via a network cable.
⑦	Grounding Terminal	Used for connection to a grounding cable to protect the device from lightning.
⑧	PWR DC 54V	Power jack. Use the attached power adapter to connect the device's power jack to a power socket.

1.4 Typical Application

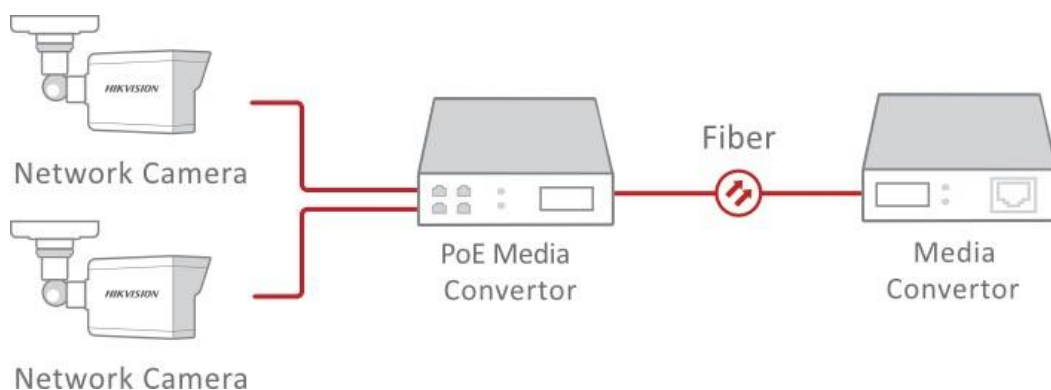


Figure 1-3 Typical Application 1

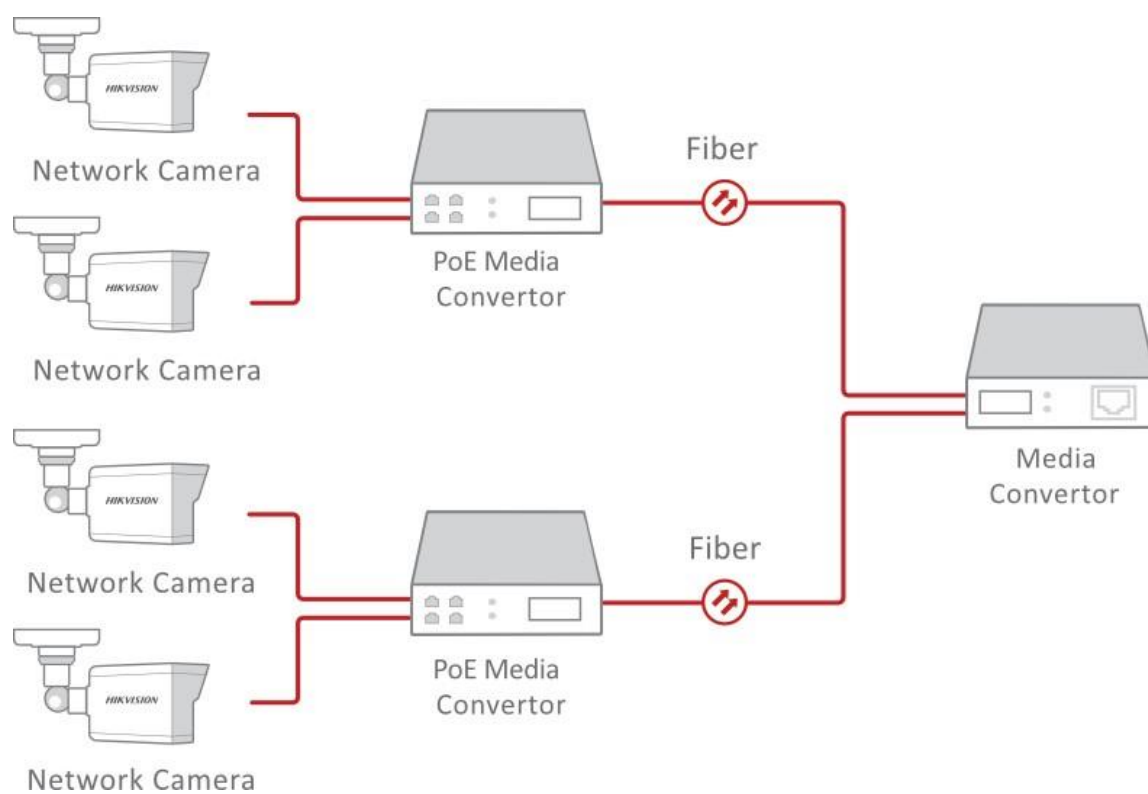


Figure 1-4 Typical Application 2

Chapter 2 Installation

This chapter describes how to install the media convertor. To avoid device damage and other harmful consequences, read this chapter carefully.

Note

- The device is made of metal shell with anti-rust and anti-corrosion treatment on the surface.
- The device shell is not waterproof.

2.1 Lightning Protection, ESD Protection, and Grounding

- When installing the device, fully consider the impact of lightning strikes at the installation site, and take grounding and lightning protection measures.
- Excessive static electricity may damage optical components and data modules in the device. It is recommended to power off the media convertor when you plug or unplug any cables to and from the data port(s) on the device.
- Use a self-prepared grounding cable to connect with the grounding terminal for device grounding. The copper core insulated wire and cable used in the grounding cable should have a cross-sectional area of no less than 6 mm², a buried depth of no less than 0.5 m, and a grounding resistance of less than 4 Ω.

Caution

- Lightning strikes and static electricity may damage internal components of the device.
 - Poor grounding can cause interference to video signals and control signals, seriously leading to inability of front-end devices.
-

2.2 Optical Fiber and Optical Component Protection

- The device uses single-mode optical fibers for data transmission. The installation and transmission specifications of optical fiber links should comply with relevant international or national standards and requirements.
- The optical component(s) of a media convertor is/are fragile. When plugging or unplugging optical fibers, care should be taken to avoid permanent damage to the optical component(s). Reasonably lay out optical fibers in the equipment room. Do not bend an optical fiber overly (recommended curvature radius ≥ 50 mm).
- The optical fiber connector cannot be contaminated. Please gently wipe it with anhydrous alcohol before use; otherwise, the transmission effect may be affected. If the optical fiber

connector is not properly connected, large power loss may occur. Therefore, adjust the optical fiber connector according to the actual situation.

- If the fiber optical ports and optical fibers are not in use for a long time, they should be protected from dust by protective covers.



Caution

The light source generated by the optical component(s) of the media convertor can cause permanent damage to human eyes. Do not look directly at the optical component(s) or the fiber optical ports when the media convertor is powered on. To measure the optical power of a media convertor, use a special instrument such as an optical power meter.

2.3 Optical Fiber Connection

Step 1 Check whether the optical fiber links meet the installation requirements described in the preceding sections.

Step 2 Use an optical fiber to connect the OPT port on the transmitter to the OPT port on the receiver.

Step 3 Check whether the LINK/ACT indicator is solid on to determine whether the optical fiber is properly connected.

2.4 Device Installation

Please select an appropriate installation method according to the actual needs. The following figures are for your reference only.



Note

- Ensure that the desktop or wall is stable and firm enough.
- Keep the room well-ventilated. Leave at least 10 cm heat dissipation space around the device.

2.4.1 Desktop Placement

Place the device on a clean and stable desk.



Caution

Keep the device top facing upward when moving or using the device.

2.4.2 Wall-Mounted Installation

Step 1 Check the distance between the two hanging holes on the rear cover of the device.

Step 2 Insert two self-prepared M4 screws into the wall.

 Note

- The load-bearing capacity of the wall should be three times more than the weight of the device.
- Ensure that the distance between the two screws equals to the distance between the two hanging holes.
- Set aside at least 4 mm of the screw bodies outside the wall.
- You are advised to connect the ports of the device before hanging it.

Step 3 Align the hanging holes with the screws, and hang the device on the screws.

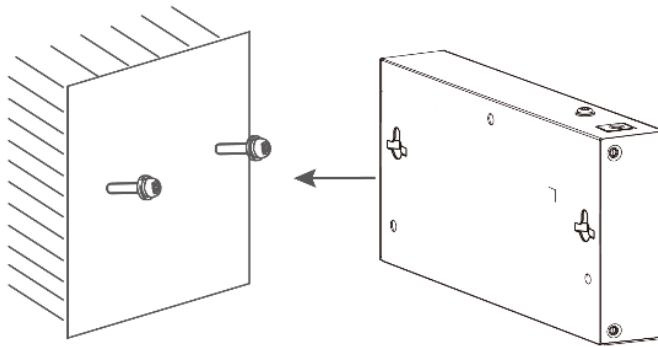


Figure 2-1 Wall Mounting

Chapter 3 Grounding

Grounding is used to quickly release overvoltage and overcurrent induced by lightning on the device, and to protect personal safety. Select an appropriate grounding method according to the installation conditions.

Note

- Please prepare a grounding cable yourself.
- The grounding terminal may be located on the front, rear, or side panel of the device. The following figures are for illustration only.

3.1 With Grounding Bar

Step 1 Connect one end of the grounding cable to the binding post on the grounding bar.

Step 2 Connect the other end of the grounding cable to the grounding terminal of the device and tighten the screw.

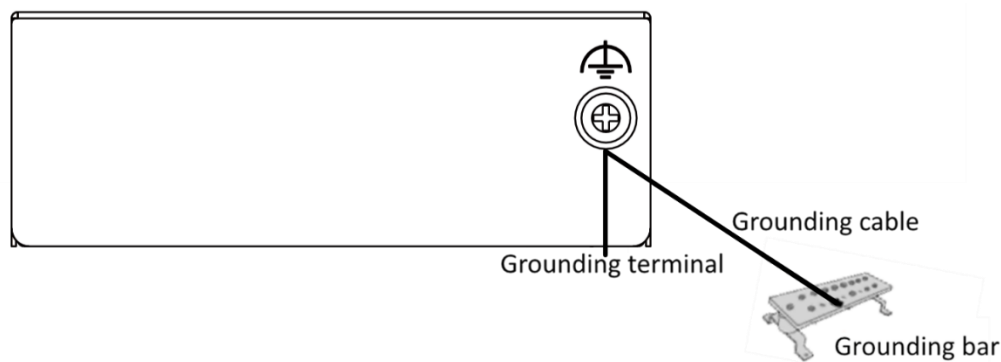


Figure 3-1 Grounding with Grounding Bar

3.2 Without Grounding Bar

Step 1 Bury an angle steel or steel pipe (≥ 0.5 m) into the earth.

Step 2 Weld one end of the grounding cable to the angle steel or steel pipe and embalm the welding point via electroplating or coating.

Step 3 Connect the other end of the grounding cable to the grounding terminal.

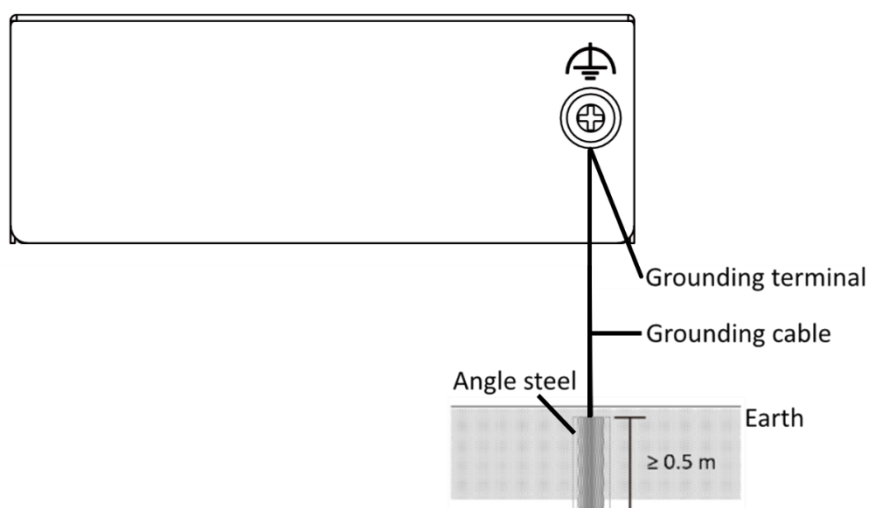



Figure 3-2 Grounding with Angle Steel

Chapter 4 Powering On

Please use the attached power adapter to power on the device.

Before powering on your device, make sure that:

- The operating power supply is compliant with rated input standard.
- Port cables and grounding cables are correctly connected.

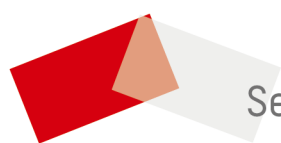

See Far, Go Further